



Manuals.plus /

› Chefman /

› Chefman Electric Warming Tray (RJ22-TC-V3-BLK) User Manual

## Chefman RJ22-TC-V3-BLK

# Chefman Electric Warming Tray User Manual

Model: RJ22-TC-V3-BLK

Brand: Chefman

---

## IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Please read all instructions carefully before use.

- Remove all stickers and packaging materials before first use.
- Never immerse the warming tray or power cord in water or other liquids.
- Only place this warming tray on a flat, stable, heat-resistant surface. Do not place on surfaces that are not heat-resistant.
- Do not block air flow under the unit.
- Do not place the warming tray on a wet surface or near any flammable objects.
- Do not cover the unit, especially with aluminum foil, as it can cause the glass to overheat.
- Do not place non-heatproof utensils on the warming tray.
- Do not move the warming tray while plugged in.
- Keep the warming tray away from the edge of the counter.
- Never leave this warming tray unattended, especially near children.

## PRODUCT OVERVIEW

---

The Chefman Electric Warming Tray is designed to keep your food warm and fresh for extended periods, perfect for buffets, parties, and family dinners. Its sleek design and adjustable temperature control make it a versatile addition to any kitchen.

### Key Features:


- **Spacious Surface:** Large 21" x 16" glass-top surface accommodates multiple dishes.
- **Adjustable Temperature Control:** Knob control allows customization of heat settings.
- **Cool-Touch Handles:** Ensures safe handling and easy transport.

- **LED Heat Indicator:** Illuminates to show when the tray is heated.
- **Overheat Protection:** Dual internal thermostats for added safety.
- **Easy-Clean Glass Top:** Tempered glass surface is damage-resistant and simple to wipe clean.
- **Durable Design:** Black stainless-steel frame offers a timeless and robust appearance.


## Product Images:



The Chefman Electric Warming Tray, showcasing its sleek black glass top and cool-touch handles.

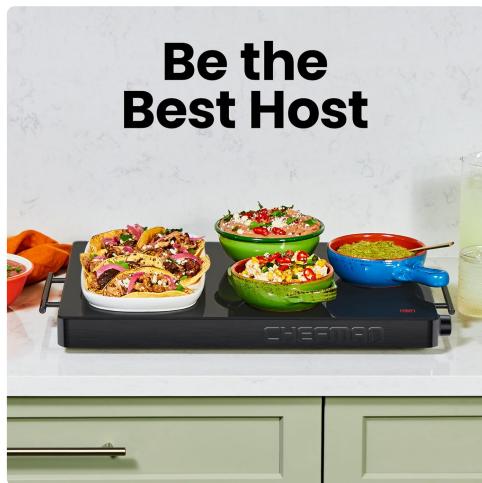

The warming tray in action, holding multiple dishes like tacos, beans, and guacamole, ideal for entertaining.

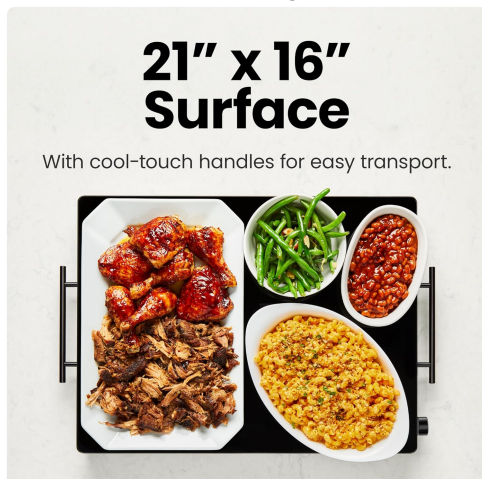

An overhead view highlighting the spacious 21" x 16" warming surface, accommodating several dishes simultaneously.

## Adjustable Temp Settings

To keep food warm or heat up appetizers.



A close-up of the adjustable temperature control knob, allowing precise heat management from OFF to MAX.

## Sleek Glass Surface

Looks great and is easy to clean.



Demonstration of the easy-clean glass surface, being wiped down with a cloth after use.

## Serve Dinner in Style

Compatible with all heat-safe serving dishes.



The warming tray elegantly presenting two large casserole dishes, suitable for serving main courses.



A diagram illustrating the compact dimensions of

the warming tray: 16.1"D x 23.6"W x 2.4"H.

## SETUP

---

### Unboxing and Initial Preparation:

1. Carefully remove the warming tray from its packaging.
2. Remove any stickers, protective films, or cardboard inserts from the unit.
3. Wipe the glass top with a damp cloth to remove any dust or residue from manufacturing. Ensure it is completely dry before plugging in.

### Placement:

- Place the warming tray on a flat, stable, and heat-resistant surface, such as a countertop or buffet table.
- Ensure there is adequate space around the unit for proper air circulation and to prevent overheating of surrounding surfaces.
- Position the tray near an electrical outlet for convenient access.

## OPERATING INSTRUCTIONS

---

### Powering On and Temperature Control:

1. Plug the power cord into a standard 120V AC electrical outlet.
2. Turn the adjustable temperature control knob located on the side of the unit from the "OFF" position towards "MAX" to select your desired heat level.
3. The "HOT" LED indicator light on the glass surface will illuminate when the tray is heating, indicating that the unit is active and warming up.
4. Allow a few minutes for the tray to reach the desired temperature before placing food on it.

### Using with Cookware:

- The Chefman Electric Warming Tray is compatible with all heat-safe cookware, bakeware, and serving dishes. This includes glass, ceramic, aluminum, and stainless steel.
- Place your dishes directly onto the tempered glass surface.
- The tray is designed to keep food warm without burning or scorching, thanks to its dual thermostats and even heat distribution.
- For best results and to maintain food temperature, cover dishes with lids or aluminum foil.

### Powering Off:

- To turn off the warming tray, rotate the temperature control knob back to the "OFF" position.
- Unplug the unit from the electrical outlet when not in use.
- Allow the tray to cool completely before cleaning or storing.

## MAINTENANCE AND CLEANING

---

Proper maintenance ensures the longevity and optimal performance of your Chefman Electric Warming Tray.

### Cleaning:

1. Always ensure the warming tray is unplugged and completely cool before cleaning.
2. Wipe the tempered glass surface with a damp cloth or sponge. For stubborn stains, a mild dish soap can be used.
3. Dry the surface thoroughly with a soft, dry cloth to prevent water spots.
4. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the glass surface.
5. The cool-touch handles can be wiped clean with a damp cloth.
6. Never immerse the entire unit or its power cord in water.

### **Storage:**

- Store the clean and dry warming tray in a cool, dry place.
- It is recommended to store the unit in its original packaging to protect the glass surface from scratches and damage.

## **TROUBLESHOOTING**

---

If you encounter any issues with your Chefman Electric Warming Tray, please refer to the following general advice. For specific problems not listed, contact customer support.

- **Unit not heating:** Ensure the power cord is securely plugged into a working electrical outlet and the temperature control knob is turned to an "ON" position (not "OFF"). Check if the outlet is functional by plugging in another appliance.
- **Food not staying warm enough:** Increase the temperature setting using the control knob. Ensure dishes are covered to retain heat.
- **Overheating:** The unit has built-in overheat protection. If it shuts off unexpectedly, unplug it, allow it to cool down, and ensure there is no obstruction to airflow underneath. Do not cover the unit with aluminum foil.

## **SPECIFICATIONS**

---

Feature	Specification
Model Number	RJ22-TC-V3-BLK
Brand	Chefman
Color	Stainless Black
Material	Glass
Product Dimensions (D x W x H)	16.14" x 23.62" x 2.48"
Surface Area	21" x 16"
Wattage	450 watts
Voltage	120 Volts
Controls Type	Knob
Special Features	Adjustable Temperature Dial, Cool-touch Handles, LED Heat Indicator, Overheat Protection
UPC	810087848972

## WARRANTY AND SUPPORT

---

### Product Warranty:

This Chefman Electric Warming Tray comes with a 1-year assurance provided by Chefman. Please retain your proof of purchase for warranty claims.

### Customer Support:

For any questions, concerns, or warranty inquiries, please visit the official Chefman website or contact their customer service department. You can find more information and support resources at the Chefman Store on Amazon.