

[Manuals.plus](#) /

› [LONPOO](#) /

› LONPOO 30W Compact CD Stereo System Mini Combo LP-856 User Manual

## LONPOO LP-856

# LONPOO 30W Compact CD Stereo System Mini Combo LP-856 User Manual

Model: LP-856

## 1. INTRODUCTION

---

Thank you for purchasing the LONPOO 30W Compact CD Stereo System Mini Combo LP-856. This manual provides essential information for the safe and efficient operation of your new audio system. Please read this manual thoroughly before use and retain it for future reference.

## 2. SAFETY INFORMATION

---

- **Power Source:** Ensure the power supply voltage matches the requirements specified on the unit.
- **Ventilation:** Do not block any ventilation openings. Maintain adequate space around the unit for proper airflow.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or dripping/splashing liquids. Do not place objects filled with liquids, such as vases, on the unit.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Clean only with a dry cloth.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

## 3. PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- LONPOO LP-856 Main Unit
- Two Satellite Speakers
- Remote Control
- Power Cable
- FM Antenna
- User Manual (this document)



**Image:** The LONPOO LP-856 package contents, showing the main stereo unit, two speakers, a remote control, power cable, and the user manual.

## 4. PRODUCT FEATURES AND CONTROLS

The LONPOO LP-856 offers multiple playback options and convenient controls.

# 30W コンパクト CD ステレオ システム



CD



ブルートゥース



USB 入力



FM ラジオ



AUX 入力

- リピート: 1曲/全曲/ランダム
- メモリ: 曲を中断したところから再生
- イコライザー: フラット/ジャズ/ロック/ポップ/クラシック
- \* ベースを増やすには「ロック(rock)」を選択
- \* ベースを減らすには「ジャズ(jazz)」を選択



**Image:** Front view of the main unit and speakers, illustrating the available input modes: CD, Bluetooth, USB, FM Radio, and AUX input. Key playback features like repeat modes (1 track, all, random), memory playback, and equalizer presets (Flat, Jazz, Rock, Pop, Classic) are also shown. It notes to select "Rock" for increased bass and "Jazz" for decreased bass.

## Front Panel Controls and Inputs:

- **Large LED Display:** Shows current mode, track information, and time.
- **CD Tray:** Supports CD, CD-R, CD-RW, and MP3 discs.
- **Volume Knob:** Adjusts the master volume.
- **Mode Button:** Switches between input sources (CD, Bluetooth, USB, FM, AUX).
- **Playback Controls:** Play/Pause, Stop, Skip Forward/Backward.
- **USB Input:** For playing audio files from USB flash drives.
- **AUX Input (3.5mm):** For connecting external audio devices.

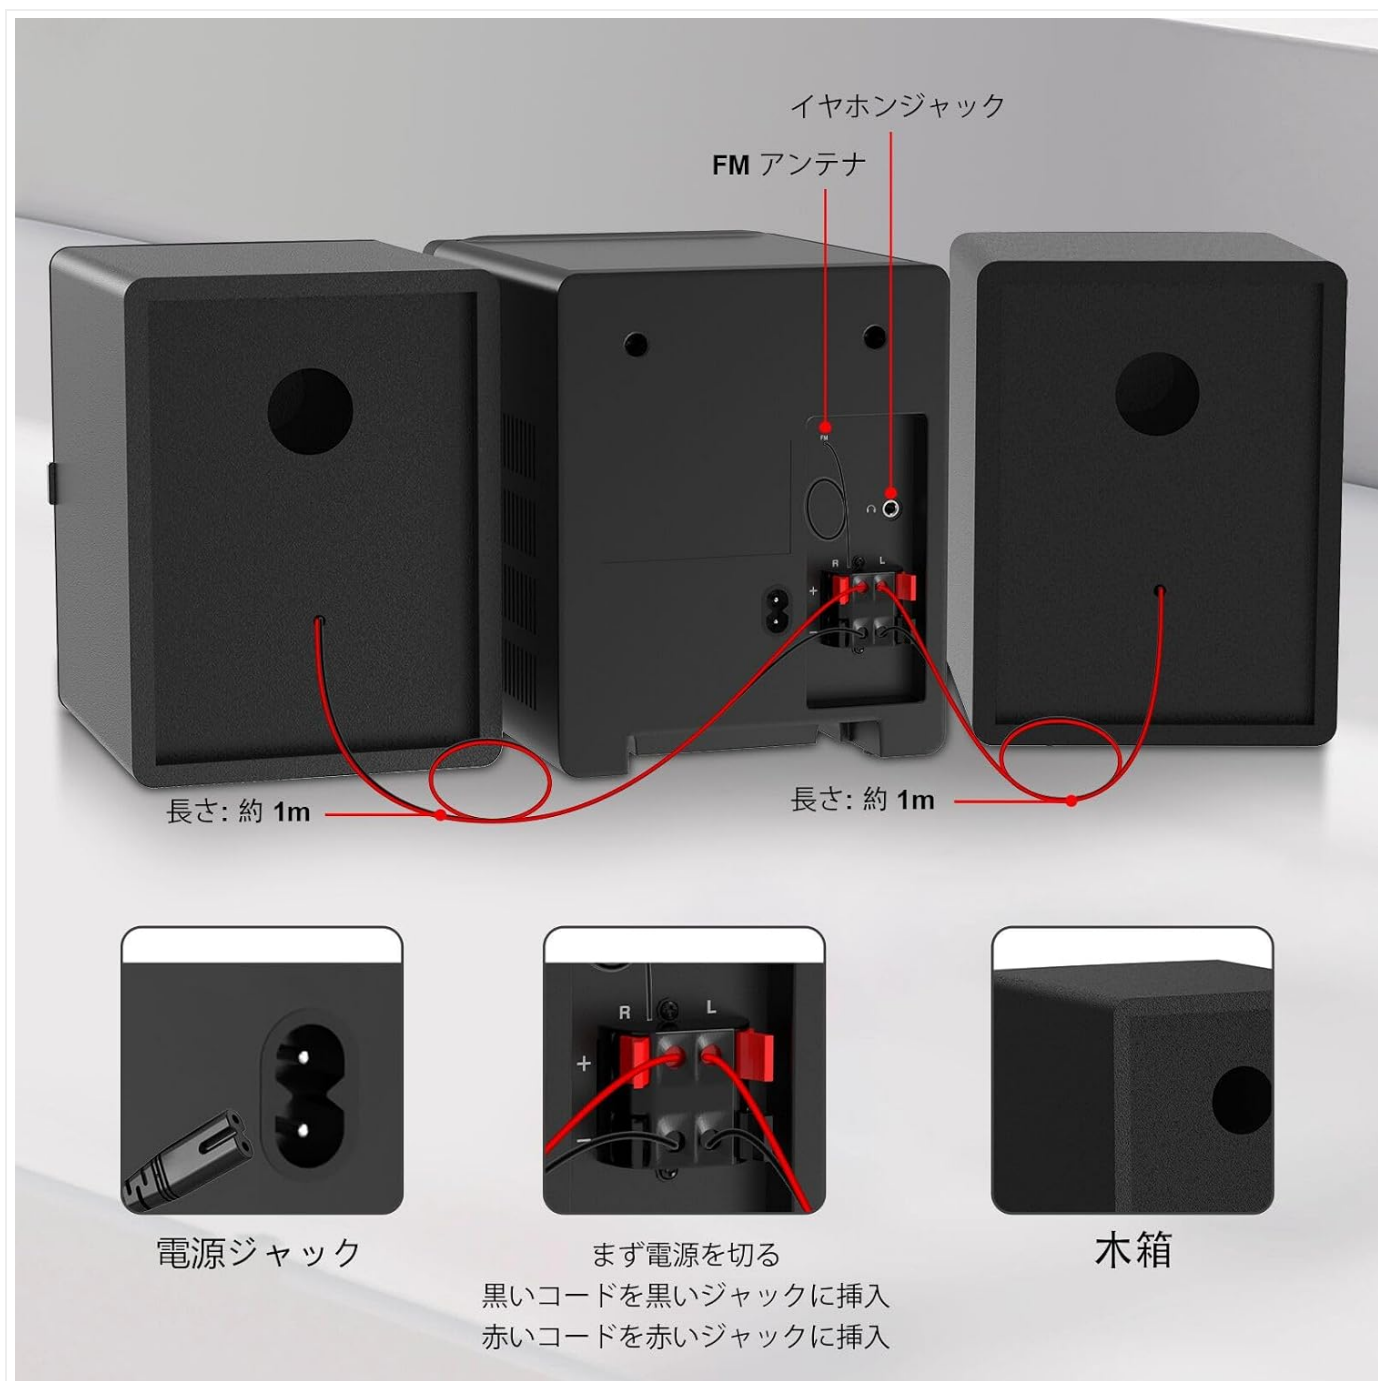


**Image:** A top-down view of the main unit with the CD tray open, clearly indicating the large LED display, AUX input, and USB input ports on the front panel.

### Rear Panel Connections:

- **Speaker Terminals:** Connect the left and right satellite speakers.
- **FM Antenna Jack:** Connect the included FM antenna for radio reception.
- **Headphone Jack (3.5mm):** For private listening.
- **Power Jack:** Connect the power cable.





**Image:** Rear view of the main unit and speakers, detailing the connections: speaker cables (approximately 1m long), power jack, FM antenna input, and headphone jack. Instructions for connecting speaker wires (black to black, red to red) are also shown.

## 5. SETUP

1. **Placement:** Place the main unit and speakers on a stable, flat surface. Ensure adequate ventilation around the unit.
2. **Connect Speakers:** Connect the satellite speakers to the main unit using the provided speaker cables. Match the red wire to the red terminal and the black wire to the black terminal on both the main unit and the speakers. Ensure a secure connection.
3. **Connect FM Antenna:** Insert the FM antenna into the FM antenna jack on the rear of the main unit. Extend the antenna for optimal reception.
4. **Connect Power:** Insert the power cable into the power jack on the rear of the main unit, then plug the other end into a suitable wall outlet.
5. **Initial Power On:** Press the Power button on the unit or remote control to turn on the system.

## 6. OPERATING INSTRUCTIONS

---

### 6.1. CD Playback

1. Press the **MODE** button to select **CD** mode.
2. Press the **OPEN/CLOSE** button to open the CD tray.
3. Place a CD (CD, CD-R, CD-RW, or MP3 disc) gently into the tray with the label side facing up.
4. Press the **OPEN/CLOSE** button again to close the tray. The system will automatically start playing the disc.
5. Use the **PLAY/PAUSE**, **STOP**, and **SKIP** buttons to control playback.
6. Use the **REPEAT** button to cycle through repeat modes (repeat one, repeat all, random).

### 6.2. Bluetooth Playback

1. Press the **MODE** button to select **Bluetooth** mode. The display will show "BT" and start flashing, indicating it's in pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "**LONPOO LP-856**" (or similar) from the list of devices.
4. Once paired, the display will stop flashing, and you can play audio from your device through the stereo system.

### 6.3. USB Playback

1. Insert a USB flash drive into the **USB** port on the front panel.
2. Press the **MODE** button to select **USB** mode.
3. The system will automatically detect and start playing compatible audio files (e.g., MP3).
4. Use the playback controls to navigate tracks.

### 6.4. FM Radio

1. Press the **MODE** button to select **FM** radio mode.
2. Press the **SCAN** button (or similar, typically Play/Pause button in FM mode) to automatically scan and save available stations.
3. Use the **SKIP** buttons to tune to the next/previous saved station.
4. Adjust the FM antenna position for better reception if needed.

### 6.5. AUX Input

1. Connect an external audio device (e.g., MP3 player, smartphone) to the **AUX IN** port on the front panel using a 3.5mm audio cable (not included).
2. Press the **MODE** button to select **AUX** mode.
3. Play audio from your connected device. Volume can be controlled via both the stereo system and the external device.

### 6.6. Equalizer Settings

Press the **EQ** button (if available on remote) to cycle through preset equalizer modes: Flat, Jazz, Rock, Pop, Classic. For increased bass, select "Rock". For decreased bass, select "Jazz".

## 7. MAINTENANCE

---

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.

- **CD Lens Care:** If CD playback issues occur, use a commercially available CD lens cleaner disc.
- **Storage:** If not in use for an extended period, unplug the power cable and store the unit in a cool, dry place.

## 8. TROUBLESHOOTING

| Problem                   | Possible Cause                                                              | Solution                                                                           |
|---------------------------|-----------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| No power                  | Power cable not connected securely.                                         | Check power cable connection to the unit and wall outlet.                          |
| No sound                  | Volume too low; incorrect input mode; speaker cables loose.                 | Increase volume. Select correct input mode. Check speaker cable connections.       |
| CD not playing / skipping | Disc dirty or scratched; disc inserted incorrectly; unsupported disc type.  | Clean the disc. Insert disc label-side up. Ensure disc is CD, CD-R, CD-RW, or MP3. |
| Bluetooth pairing failure | Device too far; Bluetooth not enabled on device; incorrect device selected. | Move device closer. Enable Bluetooth. Select "LONPOO LP-856".                      |
| Poor FM reception         | Antenna not extended or positioned correctly.                               | Extend and adjust the FM antenna for better signal.                                |

## 9. SPECIFICATIONS

- **Model:** LP-856
- **Output Power:** 30W RMS
- **Speaker Configuration:** 2-channel stereo
- **Tweeter:** 1-inch Silk Dome Tweeter (for softer, clearer sound)
- **Woofer:** 4-inch Woofer (for more dynamic and deep sound)
- **Supported Disc Types:** CD, CD-R, CD-RW, MP3
- **Connectivity:** Bluetooth, USB, AUX (3.5mm), FM Radio, Headphone Jack (3.5mm)
- **Power Supply:** AC 100-240V, 50/60Hz
- **Dimensions (Main Unit + Speakers):** Approximately 42cm (W) x 19.3cm (H) x 18cm (D) / 16.5in (W) x 7.6in (H) x 7in (D)

# シルク ツイーター

より柔らかくクリアなサウンド

ツイーター1インチ

シルク ドーム ホーン

ウーファー4インチ

よりダイナミックで  
深みのあるサウンド

**Image:** An exploded view of one of the speakers, highlighting its internal components: a 1-inch silk dome tweeter for soft, clear sound and a 4-inch woofer for dynamic, deep sound.



# DSP テクノロジー

よりクリアでダイナミックなサウンド



## 30W RMS

**Image:** The LONPOO LP-856 system with visual representations of sound waves, emphasizing its 30W RMS output and the integration of DSP (Digital Signal Processing) technology for clearer and more dynamic sound.



**Image:** The LONPOO LP-856 stereo system with its overall dimensions indicated: 42cm (16.5 inches) width, 19.3cm (7.6 inches) height, and 18cm (7 inches) depth.

## 10. WARRANTY AND SUPPORT

LONPOO products are designed and manufactured to the highest quality standards. For warranty information and technical support, please refer to the warranty card included in your package or visit the official LONPOO website. Please have your model number (LP-856) and purchase details ready when contacting support.