

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [GS General Supreme](#) /
- › [General Supreme GSFLN60 Automatic Front Load Washing Machine User Manual](#)

GS General Supreme GSFLN60

General Supreme GSFLN60 Automatic Front Load Washing Machine User Manual

Model: GSFLN60 | Brand: GS General Supreme

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your General Supreme GSFLN60 Automatic Front Load Washing Machine. Please read these instructions carefully before installation and use, and retain them for future reference.

Safety Information

- Ensure the washing machine is properly grounded.
- Do not allow children to play with or operate the appliance.
- Unplug the machine before cleaning or performing any maintenance.
- Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances.
- Keep the area around the washing machine clear of flammable materials.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your washing machine.



Image 1: Front view of the General Supreme GSFLN60 Automatic Front Load Washing Machine. Shows the control panel, detergent drawer, and drum door.



Image 2: Angled view of the General Supreme GSFLN60 Automatic Front Load Washing Machine, highlighting its silver finish and compact design.

Control Panel

The control panel features a program selector knob, function buttons, and an LED display for cycle information.

- **Program Selector:** Turn to choose desired wash program.

- **LED Display:** Shows remaining time, error codes, and selected options.
- **Function Buttons:** For options like Delay Start, Pre-Wash, Temperature Control, and Child Lock.

3. SETUP AND INSTALLATION

Proper installation is crucial for optimal performance and safety.

Unpacking

- Remove all packaging materials, including the transport bolts at the rear of the machine. Keep these bolts for future transport.
- Inspect the machine for any damage.

Location

- Place the washing machine on a firm, level surface.
- Ensure adequate ventilation around the appliance.
- Avoid direct sunlight or extreme temperatures.

Water and Electrical Connections

- Connect the water inlet hose to a cold water tap.
- Position the drain hose correctly into a drain pipe or sink.
- Plug the power cord into a grounded electrical outlet (220-240V, 60Hz).

4. OPERATING INSTRUCTIONS

Follow these steps for effective washing.

Loading Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Open the door and load items loosely into the drum, ensuring not to overload (maximum 6 kg capacity).
- Close the door firmly.

Adding Detergent

- Pull out the detergent drawer.
- Add appropriate amounts of detergent and fabric softener to their respective compartments.
- Push the drawer back in.

Program Selection

Turn the program selector knob to choose one of the 15 available programs:

- Cotton
- Cotton ECO
- Baby Care
- Jeans
- Color
- Delicate

- Quick 15'
- Daily 45'
- Synthetic
- Sport Wear
- Mix
- Bulky / Bedlinen
- Spin Only
- Wool
- Rinse & Spin

Optional Functions

- **Delay Operation Function:** Set a delayed start time for the wash cycle.
- **Pre-Wash Cycle (Soaking):** Adds an initial soak phase for heavily soiled items.
- **Water Temperature Control:** Adjust the wash water temperature (Cold, 20, 30, 40, 60, 90°C).
- **Child Lock:** Prevents accidental changes to settings during operation. Activate by pressing and holding the designated button.
- **Extra Rinse Option:** Adds an additional rinse cycle.
- **Mute the Buzzer Function:** Disables audible alerts.
- **Speed Selection Function:** Adjust spin speed (400 / 600 / 800 / 1000 RPM).

Starting a Wash Cycle

- After selecting the program and any desired options, press the Start/Pause button.
- The machine will begin the cycle. The LED display will show the remaining time.

Power Off Memory

In case of a power cut, the machine will resume the cycle from where it left off once power is restored, saving time and energy.

5. MAINTENANCE AND CARE

Regular maintenance ensures longevity and optimal performance.

Cleaning the Drum

The machine features a **Drum Clean Function** (90°C) to remove residue and odors from the drum. It is recommended to run this cycle periodically.

Product Description	GSFLN60	مواصفات المنتج
Fully Automatic	✓	أوتوماتيك كلياً
Loading Type : Front Load	✓	نوع التعبئة: تعبئة أمامية
Origin: China	✓	بلد المنشأ: الصين
Capacity	6Kg	السعة
Color : Dark Silver	✓	اللون: فضي غامق
Motor Type	Normal	نوع الموتور
No. of Programs 15	✓	عدد البرامج 15
Program Functions Cotton, Cotton ECO, Baby Care, Jeans, Color, Delicate, Quick 15', Daily 45', Synthetic, Sport Wear, Mix, Bulky / Bedlinen, Spin Only, Wool, Rinse & Spin	✓	البرامج ملابس عادية، الجينز، ملابس ملونة، ملابس بيضاء، ملابس سوداء، ملابس اصطناعية، ملابس قاسية، غسل يدوي، عناية ملابس الطفل، ملابس رقيقه، شراشف، مناشف، شطف و عصر، نقع، تنظيف الحوض و غسيل سريع

Special Features		مميزات خاصة
Motor Round (RPM)	1000	دورة الموتور
LED Display Panel	✓	لوحة عرض من LED
Delay Start Option	✓	وظيفة تأخير التشغيل
Pre Wash Option	✓	برنامج دورة ما قبل الغسيل (نقع)
Extra Rinse Option	✓	وظيفة الشطف الإضافي
Temp Control Function	Cold 20/30/40/60/90	التحكم بدرجة حرارة المياه
Speed Selection Function	400 / 600 / 800 / 1000 RPM	خيارات اختيار السرعة
Child Lock Function	✓	خيار القفل للأطفال
Mute the buzzer Function	✓	خيار كتم صوت جرس التنبيه
Drum Clean Function	✓	وظيفة تنظيف حوض الغسيل
Door Lock Indicator	✓	مؤشر قفل باب للامان
Safety Door Lock	✓	قفل باب للامان
Start/Pause Button	✓	زر التشغيل / الايقاف المؤقت
Power Off Memory	✓	تذكر البرنامج في حالة انقطاع التيار الكهربائي

Technical Specifications		المواصفات الفنية
Net Weight	52Kg	الوزن صافي
Gross Weight	54Kg	الوزن بالكرتون
Power Supply	220 - 240 V ~ 60 Hz	الجهد الكهربائي
Packaging Size W-D-H	655*500*885	الحجم والأبعاد بالكرتون
Unit Size W-D-H	595*400*850	الحجم صافي



مركز الصيانة
8002444464

Image 3: Visual representation of the 90°C Drum Clean function, indicating its purpose for internal cleaning.

Cleaning the Detergent Drawer

- Remove the detergent drawer and rinse it under running water to remove any detergent buildup.

- Clean the drawer housing with a damp cloth.

Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed, program not selected, Start/Pause not pressed.	Check power, ensure door is latched, select program, press Start/Pause.
No water intake	Water tap closed, inlet hose kinked, water supply cut off.	Open water tap, straighten hose, check water supply.
Machine vibrates excessively	Transport bolts not removed, machine not level, uneven load.	Remove transport bolts, adjust leveling feet, redistribute laundry.
Water leakage	Hose connections loose, detergent drawer overflowing.	Tighten hose connections, do not overfill detergent drawer.

7. SPECIFICATIONS

Technical details for the General Supreme GSFLN60 Washing Machine.

بطاقة كفاءة الطاقة
ENERGY EFFICIENCY LABEL

WASHING MACHINE | غسالة ملابس

CLASSIFICATION: **A**

Capacity: **6** kg

Energy Consumption: **113** kWh

Water Consumption: **7260** liters

Model: **GS GENERAL SUPREME**

Model Number: **GSFLN60**

Standard Reference No: **SASO 2885:2018**

Registration No: **E08901/2024**

Remove, cover or alter this label before sale can subject you to legal liability.

Image 4: Energy Efficiency Label for the GSFLN60 model, showing energy consumption, water usage, and capacity. For verification, visit bs.gov.sa.

Feature	Detail
Model Number	GSFLN60
Type	Automatic Front Load Washing Machine
Capacity	6 Kilograms
Programs	15 (Cotton, Eco, Baby Care, Jeans, Color, Delicate, Quick 15', Daily 45', Synthetic, Sport Wear, Mix, Bulky/Bedlinen, Spin Only, Wool, Rinse & Spin)
Max Spin Speed	1000 RPM
Voltage/Frequency	220-240V ~ 60Hz
Control Type	Digital (Push Button)
Display	LED
Color	Silver
Dimensions (D x W x H)	50 x 59.5 x 85.5 cm
Net Weight	52 Kilograms
Special Features	Delay Operation, Pre-Wash, Water Temperature Control, Child Lock, Extra Rinse, Mute Buzzer, Drum Clean, Power Off Memory
Origin	China

8. WARRANTY AND SUPPORT

Your General Supreme GSFLN60 Washing Machine comes with a **2-Year Warranty**.

For technical support, service, or warranty claims, please contact your local authorized service center or the retailer where the product was purchased.

Manufacturer: Empower International for Home Appliances

Service Center: [8002444464](tel:8002444464)