

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Udreamer](#) /

› [Udreamer Turntable Instruction Manual](#)

## Udreamer UD009

# Udreamer Turntable Instruction Manual

MODEL: UD009



Image: Udreamer Turntable, a sleek wooden record player with a black vinyl record on its platter, showcasing its elegant design.

## Introduction

This instruction manual provides comprehensive guidance for the setup, operation, and maintenance of your new Udreamer Turntable. Please read this manual thoroughly before using the product to ensure proper functionality and longevity. This turntable is designed to deliver high-fidelity audio from your vinyl records and offers versatile connectivity options including Bluetooth input and output, and USB recording.

## What's in the Box

- 1 x Turntable Unit
- 1 x User Manual
- 1 x 9V 2A Power Cord

- 1 x RCA Cable Line
- 1 x PC Cable Line (USB)

## Key Features

- **Double Bluetooth Connectivity:** Features both Bluetooth input (BT IN) to stream music from your smart devices to the turntable's speakers (if connected) and Bluetooth output (BT OUT) to stream audio from your vinyl records to external Bluetooth speakers or headphones.



Image: The Udreamer Turntable highlighting its dual Bluetooth capabilities, showing wireless connection to a phone for input and to external speakers for output.

- **Built-in Phono Preamp & Passive Speaker Connection Jacks:** Provides high-fidelity stereo sound with integrated phono preamp. Includes both Phono and Line outputs, allowing connection to an amplifier or active speakers. Passive speaker connection jacks are also available for direct connection of passive speakers.





Image: Close-up of the turntable's rear panel, showing RCA audio output, Phono/Line switch, and passive speaker terminals, emphasizing the built-in preamp feature.

- **USB-PC Recording:** Supports USB digital output, enabling you to convert your vinyl records into MP3 format and transfer them directly to your computer using the included USB-PC cable.



Image: The turntable connected via USB to a laptop displaying audio recording software, illustrating the USB-PC recording capability.

- **3 Adjustments & 2 Speeds:** Includes pitch control for fine-tuning speed, counterweight for precise needle pressure adjustment, and an auto-stop switch to control platter spinning. Supports 33 and 45 RPM playback speeds.
- **Moving Magnetic Stylus & Iron Platter:** Equipped with a Moving Magnetic Cartridge for outstanding clarity and rich sound. The precision-manufactured solid iron platter ensures rotation stability.
- **Spray Painting Craft:** Features a vintage piano look achieved through polishing and spray painting, making it an aesthetically pleasing addition to any space.

## Setup Guide

Follow these steps to set up your Udreamer Turntable:

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all items listed in the "What's in the Box" section are present.

## 2. Platter Installation:

*Note: This record player has been upgraded. The sub-platter and the main platter are now designed as a single unit, so there is no separate sub-platter anymore.*



Image: A graphic illustrating the integrated platter design, emphasizing that there is no separate sub-platter.

Place the main platter onto the turntable spindle. Ensure it sits securely. The belt is pre-installed on the underside of the platter. Gently stretch the belt around the motor pulley. For visual guidance, please refer to the product video titled "Record Player with Build in Preamp 2 Bluetooth Modes Vintage" in the operating section.



Iron Platter for Rotation Stability



Belt Driven System



Easy Set Up



Platter Mat Resists Static and Shock



Image: Detailed view of the turntable's iron platter, belt-driven mechanism, and the platter mat, showing how components fit together.

3. **Platter Mat Placement:** Place the felt platter mat on top of the platter.
4. **Counterweight Adjustment:** Slide the counterweight onto the rear of the tonearm. Rotate it until the tonearm is balanced and floats horizontally. Then, adjust the counterweight to the recommended tracking force (refer to stylus specifications, typically 1.5-3.0 grams).

## Moving Magnetic Cartridge

provides outstanding clarity and rich sound with long use life

### Counter Weight

for needle pressure adjustment



Image: A close-up of the tonearm, highlighting the moving magnetic cartridge and the adjustable counterweight for precise tracking force.

#### 5. Connectivity:

Connect the power cord to the DC IN 9V 2A port on the rear of the turntable and plug it into a wall outlet.

For external audio, use the RCA Cable Line to connect the "AUDIO OUTPUT" jacks to your amplifier or active speakers. Alternatively, connect passive speakers directly to the "SPEAKER OUTPUT" terminals using speaker wire.

For USB recording, connect the "USB-PC" port to your computer using the provided PC Cable Line.





- 1 RCA Output**  
Connect to amplifier/active speakers



- 3 USB-PC Recording**  
Convert vinyl into computer via Audacity



- 2 Phono Line Switch**  
Output analog line-level signals



- 4 Passive Speaker Jacks**  
Connect your own passive speakers

- 5 33/45 rpm**  
Speed



- 6 Auto Stop**  
Switch



- 7 Speed**  
calibration



Image: A detailed diagram of the turntable's rear panel, labeling RCA output, Phono/Line switch, USB-PC port, power input, and passive speaker connection jacks.

## Operating Instructions

1. **Power On:** Turn the "POWER/VOL" knob clockwise to power on the turntable. The power indicator light will illuminate.
2. **Select Mode:** Use the "BT OUT / BT IN / PHONO" switch to select your desired mode:
  - **PHONO:** For playing vinyl records through connected speakers or an amplifier.
  - **BT IN (Bluetooth Input):** To stream audio from your Bluetooth-enabled device (e.g., smartphone) to the turntable. The turntable will act as a Bluetooth speaker.
  - **BT OUT (Bluetooth Output):** To stream audio from your vinyl records to external Bluetooth speakers or headphones. The turntable will search for and connect to a nearby Bluetooth audio device.
3. **Playing a Record:**
  - Place a vinyl record on the platter.
  - Select the appropriate speed (33 or 45 RPM) using the "33/45 RPM" switch.
  - Lift the tonearm using the cueing lever.

- Carefully position the stylus over the desired track on the record.
  - Lower the tonearm gently using the cueing lever. The record will begin to play.
  - Adjust the volume using the "POWER/VOL" knob.
4. **Auto Stop Function:** The "AUTO STOP ON/OFF" switch controls whether the platter stops spinning automatically at the end of a record. Set to "ON" for automatic stop, or "OFF" for continuous spinning.
5. **Pitch Adjustment:** Use the "PITCH" knob to make minor adjustments to the playback speed for precise tuning.

**Official Product Video: Operation and Features**

Video: A comprehensive demonstration of the Udremer Turntable's setup, operation, and various features, including Bluetooth connectivity and sound quality. This video is provided by the seller.

**Maintenance**

Proper maintenance ensures the longevity and optimal performance of your turntable:

- **Cleaning the Stylus:** Gently clean the stylus using a soft brush designed for turntable styli. Brush from back to front to avoid damaging the cantilever.
- **Cleaning the Unit:** Wipe the turntable's surface with a soft, dry, lint-free cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Platter Mat Care:** The platter mat helps resist static and shock. Keep it clean and free of dust.
- **Dust Cover:** Always use a dust cover (if included or purchased separately) when the turntable is not in use to protect it from dust and debris.

**Troubleshooting**

Problem	Possible Cause	Solution
No power	Power cord not connected; outlet not active.	Ensure power cord is securely connected to the turntable and a working electrical outlet.
No sound from speakers	Incorrect mode selected; speakers not connected or powered; volume too low.	Set mode to PHONO. Check RCA or speaker wire connections. Ensure external speakers are powered on and volume is up.
Bluetooth connection issues	Device not in pairing mode; too far from turntable; interference.	Ensure turntable is in BT IN or BT OUT mode. Put external device/speaker in pairing mode. Keep devices within range (approx. 10m). Reduce interference from other electronic devices.
Record not spinning or spinning incorrectly	Belt not properly installed; platter not seated correctly; auto-stop engaged prematurely.	Verify the drive belt is correctly positioned around the motor pulley and platter. Ensure the platter is fully seated. Check the "AUTO STOP ON/OFF" switch. Refer to the setup video for belt installation.



Problem	Possible Cause	Solution
Skipping or distorted sound	Stylus dirty or worn; tracking force incorrect; record dirty or damaged; turntable not level.	Clean stylus. Adjust counterweight for proper tracking force. Clean record. Place turntable on a stable, level surface.

## Technical Specifications





Feature	Value
Product Dimensions	19.9 x 16.3 x 11.02 inches
Item Weight	14.67 pounds
Item Model Number	UD009
Manufacturer	Udreamer
Country of Origin	China
Connectivity Technology	Bluetooth
Maximum Rotational Speed	45 RPM
Material	Wood, Plastic
Color	Brown
Compatible Devices	Personal Computer, Speaker

## Warranty and Support

Udreamer is committed to providing quality products and excellent customer service. For any questions or technical assistance regarding your turntable, please contact our support team. We aim to provide one-on-one prompt service within 24 hours.

Please refer to your purchase documentation for specific warranty details and contact information.

### Related Documents - UD009

<div data-bbox="119 103 217 134">Udreamer</div> <div data-bbox="213 150 284 165">UD006 TURNTABLE SYSTEM</div> <div data-bbox="134 179 287 280"></div> <div data-bbox="143 286 284 347"><p>USER MANUAL</p><p>PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE UNIT AND RETAIN THE MANUAL FOR FUTURE REFERENCE.</p><p>Made in China ©2020 UDREAMER.COM www.udreamer.com</p></div>	<p><a href="#">Udreamer UD006 Turntable System User Manual: Setup, Operation &amp; Recording Guide</a></p> <p>Comprehensive user manual for the Udreamer UD006 Turntable System. Includes setup instructions, operation guides for playing records, Bluetooth connectivity, USB recording to computer, care tips, and troubleshooting.</p>
<div data-bbox="119 454 304 508"></div>	<p><a href="#">Udreamer UD007 Turntable System User Manual - Setup, Operation, and Features Guide</a></p> <p>Comprehensive user manual for the Udreamer UD007 Turntable System. This guide details setup, operation for Phono, Bluetooth, FM Radio, and USB playback, as well as encoding features, technical specifications, and maintenance instructions.</p>
<div data-bbox="143 622 284 835"><p>QA</p><p>FAQ: How to connect the turntable to the amplifier?</p><p>1. The turntable has a built-in preamplifier. To connect it to the amplifier, you need to set the output mode to "LINE" or "PHONO" (depending on the amplifier's input). The turntable has a 3.5mm audio cable that can be connected to the amplifier's input.</p><p>2. The turntable has a built-in amplifier. To connect it to the amplifier, you need to set the output mode to "LINE" or "PHONO" (depending on the amplifier's input). The turntable has a 3.5mm audio cable that can be connected to the amplifier's input.</p></div>	<p><a href="#">Udreamer Record Player FAQ: Troubleshooting and Support</a></p> <p>Find answers to common questions about your Udreamer record player, including troubleshooting skipping, speed issues, and package contents. Contact support for assistance.</p>
<div data-bbox="143 934 284 1117"><p>QA</p><p>FAQ: How to connect the turntable to the amplifier?</p><p>1. The turntable has a built-in preamplifier. To connect it to the amplifier, you need to set the output mode to "LINE" or "PHONO" (depending on the amplifier's input). The turntable has a 3.5mm audio cable that can be connected to the amplifier's input.</p><p>2. The turntable has a built-in amplifier. To connect it to the amplifier, you need to set the output mode to "LINE" or "PHONO" (depending on the amplifier's input). The turntable has a 3.5mm audio cable that can be connected to the amplifier's input.</p></div>	<p><a href="#">Udreamer Record Player FAQ and Troubleshooting Guide</a></p> <p>Frequently Asked Questions (FAQ) and troubleshooting guide for the Udreamer record player, covering common issues like sound quality, skipping, speed, and power.</p>
<div data-bbox="119 1245 269 1352"></div>	<p><a href="#">Udreamer UD002 Record Player Operating Instructions and Warranty</a></p> <p>Detailed operating instructions, safety warnings, specifications, and warranty information for the Udreamer UD002 Record Player. Learn how to connect, play vinyl records, use Bluetooth, and more.</p>
<div data-bbox="119 1435 269 1543"></div>	<p><a href="#">Udreamer UD001 Turntable System User Manual</a></p> <p>Comprehensive user manual for the Udreamer UD001 turntable system, detailing product structure, connection, operation for vinyl and Bluetooth playback, safety instructions, features, specifications, package contents, service information, and warranty terms.</p>