

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [PINDOWS](#) /

› PINDOWS Moving Lucky Cat Waterproof Digital Watch User Manual

## PINDOWS PDS-8020

# PINDOWS Moving Lucky Cat Waterproof Digital Watch User Manual

Model: PDS-8020

## INTRODUCTION

---

Thank you for choosing the PINDOWS Moving Lucky Cat Waterproof Digital Watch. This manual provides detailed instructions for the proper use, maintenance, and troubleshooting of your new watch. Please read this manual thoroughly before using the watch to ensure optimal performance and longevity.

This watch is designed for versatility and durability, featuring a unique moving lucky cat character, 50m water resistance, LED backlight, alarm, stopwatch, and calendar functions. It is suitable for various activities, both indoors and outdoors.

## SAFETY INFORMATION

---

- Do not attempt to open the watch case or remove the battery yourself. This may void the warranty and damage the watch.
- Avoid exposing the watch to extreme temperatures (hot or cold) for prolonged periods.
- Keep the watch away from strong magnetic fields, which can affect its accuracy.
- Clean the watch regularly with a soft, damp cloth. Avoid using chemical cleaners or abrasive materials.
- While the watch is 50m water resistant, it is not suitable for deep-sea diving or hot water activities like saunas, which can compromise the seals. Do not operate buttons underwater.

## PRODUCT FEATURES

---

- **Unique Design:** Features a moving lucky cat character symbolizing prosperity and good fortune.
- **Water Resistance:** 50 meters (5 ATM), suitable for daily use, hand washing, rain, and shallow swimming.
- **LED Backlight:** Provides clear visibility in low-light conditions.
- **Alarm Function:** Set daily alarms for reminders.
- **Stopwatch:** Accurate timing for sports and activities.
- **Calendar Display:** Shows day of the week and date.
- **Durable Construction:** High-quality silicone band, ABS case, and plexiglass mirror for comfort, shock resistance, and wear resistance.

- **Long Battery Life:** Equipped with a Japanese battery, offering a lifespan of up to 2 years.

## SETUP

---

### Initial Power-On and Battery

Your PINDOWS watch comes with a pre-installed lithium metal battery. The watch should be ready for use upon arrival. If the display is blank or dim, the battery may need to be activated or replaced. For battery replacement, it is recommended to consult a professional watch repair service to maintain water resistance.



Image: Front view of the PINDOWS Moving Lucky Cat Waterproof Digital Watch in light green, displaying the time and date.

### Understanding the Buttons

The watch typically features multiple buttons for various functions. Refer to the diagram below for common button layouts and their primary functions. (Note: Specific button labels may vary slightly by model.)



Image: A diagram illustrating the product parameters and dimensions of the PINDOWS watch, including weight, case material, band material, case diameter, case thickness, band width, and band length.

- **MODE Button:** Used to cycle through different modes (Time, Alarm, Stopwatch, Date).
- **SET/ADJUST Button:** Used to enter setting mode and adjust values.
- **LIGHT Button:** Activates the LED backlight.
- **START/STOP Button:** Used to start/stop the stopwatch or confirm settings.

## OPERATING INSTRUCTIONS

---

### Setting Time and Date

1. From the normal time display, press the **MODE** button repeatedly until the time setting mode is displayed (e.g., flashing hours).
2. Press the **SET/ADJUST** button to select the value you wish to change (hours, minutes, 12/24-hour format, year, month, day). The selected value will flash.
3. Use the **START/STOP** button to increase the flashing value. Hold to rapidly advance.
4. Once all settings are correct, press the **MODE** button to exit the setting mode and return to the normal time display.

### Using the Alarm

1. Press the **MODE** button to navigate to the Alarm mode (usually indicated by "AL" or an alarm icon).
2. Press the **SET/ADJUST** button to enter alarm setting mode. The hour digit will flash.
3. Use the **START/STOP** button to set the desired hour.
4. Press **SET/ADJUST** again to move to the minute digit and set it using the **START/STOP** button.
5. Press **MODE** to exit alarm setting.
6. To turn the alarm ON/OFF, while in Alarm mode, press the **START/STOP** button. An alarm icon will appear/disappear on the display.
7. When the alarm sounds, press any button to stop it.

### Using the Stopwatch

1. Press the **MODE** button to navigate to the Stopwatch mode (usually indicated by "ST" or "STOP"). The display will show "00:00:00".
2. Press the **START/STOP** button to start the stopwatch.
3. Press the **START/STOP** button again to pause the stopwatch.
4. To reset the stopwatch to zero, press the **SET/ADJUST** button while the stopwatch is paused.
5. Press **MODE** to exit Stopwatch mode.

## Activating the LED Backlight

Press the **LIGHT** button to illuminate the display. The backlight will typically stay on for a few seconds. This feature is useful in dark environments.



Image: The PINDOWS watch display illuminated with a blue LED backlight, showing clear visibility in a dark environment.

## MAINTENANCE

---

### Cleaning Your Watch

To keep your watch in good condition, wipe it regularly with a soft, dry cloth. For more thorough cleaning, a slightly damp cloth can be used. Ensure the watch is completely dry before storing or wearing. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and seals.

### Water Resistance Care

The watch is rated for 50m water resistance. This means it can withstand splashes, rain, and brief immersion in water, such as during hand washing or shallow swimming. However, it is not designed for diving or prolonged underwater activities. To maintain water resistance:

- Do not press any buttons while the watch is submerged in water.
- Avoid exposing the watch to hot water, steam, or extreme temperature changes (e.g., hot showers, saunas), as this can compromise the water-resistant seals.
- If the watch is exposed to saltwater, rinse it with fresh water and dry it thoroughly.
- Have the water resistance seals checked periodically by a professional, especially after battery replacement.



Image: The PINDOWS watch partially submerged in water, highlighting its 50M precision waterproof capability.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Battery is low or depleted.	Replace the battery. It is recommended to have this done by a professional.
Time is inaccurate.	Incorrect time setting; exposure to strong magnetic fields.	Reset the time according to the "Setting Time and Date" section. Keep the watch away from magnets.
Buttons are unresponsive.	Watch may be in a locked mode; internal malfunction.	Try pressing the MODE button to cycle through modes. If unresponsive, contact customer support.
Water condensation inside the display.	Water resistance compromised.	Stop using the watch immediately and seek professional repair to prevent further damage.

## SPECIFICATIONS

<b>Model Number</b>	PDS-8020
<b>Dimensions (L x W x H)</b>	4.3 x 4.3 x 1.3 cm
<b>Weight</b>	120 g
<b>Water Resistance</b>	50 meters (5 ATM)
<b>Battery Type</b>	1 Lithium Metal Battery (included)
<b>Case Material</b>	ABS
<b>Band Material</b>	High-quality Silicone
<b>Mirror Material</b>	Plexiglass
<b>Department</b>	Women's



Image: A black variant of the PINDOWS digital watch, showcasing its design and silicone band.



Image: Side view of the PINDOWS watch, illustrating the case profile and the function button.



Image: Back view of the PINDOWS watch, displaying the stainless steel back with brand logo, model number (PDS-8020), and water resistance rating.

## WARRANTY AND SUPPORT

---

PINDOWS offers a **12-month warranty service** for this product from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.

The warranty does not cover:

- Damage caused by improper use, accidents, or unauthorized repairs.
- Normal wear and tear of the watch band or case.
- Battery replacement.
- Water damage if the watch's water resistance has been compromised due to misuse (e.g., operating buttons underwater, exposure to hot water).

For any questions, concerns, or warranty claims, please contact PINDOWS customer service. We are committed to providing products and services that satisfy our customers.



Image: The PINDOWS watch being worn on a woman's wrist, demonstrating its comfortable fit and aesthetic appeal in an outdoor setting.

