

[Manuals.plus](#) /

› [HUAYU](#) /

› HUAYU RM-L1015 Replacement Remote Control User Manual for Samsung LED/LCD TV

HUAYU RM-L1015

HUAYU RM-L1015 Replacement Remote Control User Manual

For Samsung LED/LCD Televisions

1. INTRODUCTION

The HUAYU RM-L1015 is a dedicated replacement remote control designed for use with Samsung LED and LCD televisions. This remote offers a direct replacement solution, covering nearly all functions of your original Samsung TV remote. It requires no programming or complex setup, providing stable performance and a reliable transmission distance.



Image 1.1: Front view of the HUAYU RM-L1015 Replacement Remote Control. This image displays the full layout of buttons, including power, source, number keys, navigation, and media controls.

2. SETUP

This remote control is designed for immediate use with compatible Samsung LED/LCD televisions without the need for programming. Simply install the batteries to begin operation.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery compartment cover downwards or press the latch and lift to open.



Image 2.1: Rear view of the HUAYU RM-L1015 remote control, highlighting the battery compartment cover.

3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

Note: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

3. OPERATING INSTRUCTIONS

The HUAYU RM-L1015 remote control provides direct access to various functions of your Samsung LED/LCD TV. Point the remote control directly at the TV's infrared sensor for optimal performance.



Image 3.1: Side profile of the HUAYU RM-L1015 remote control, showing its ergonomic design.

3.1 Button Functions Overview

Refer to the image below for a visual guide to the remote's buttons and their general functions.



Image 3.2: Top-down view of the HUAYU RM-L1015 remote control, illustrating the layout of all control buttons.

- **POWER (Red Button):** Turns the TV on or off.
- **ON/OFF (Light Bulb Icon):** Controls the TV's backlight or a specific power mode (functionality may vary by TV model).
- **SOURCE:** Selects the input source (e.g., HDMI, AV, Component).
- **HDMI:** Direct access to HDMI input.
- **Number Buttons (0-9):** Direct channel selection.
- **TTX/MIX:** Teletext functions.
- **PRE-CH:** Returns to the previously viewed channel.
- **MUTE:** Mutes or unmutes the TV sound.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the TV channel.
- **DUAL:** Activates dual sound mode (if supported by TV).
- **CH LIST:** Displays the channel list.
- **MENU:** Opens the TV's main menu.

- **GUIDE:** Displays the electronic program guide (EPG).
- **CONTENT:** Accesses smart hub or content features.
- **TOOLS:** Opens a quick menu with common functions.
- **INFO:** Displays information about the current program or input.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Navigates through menus and confirms selections.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **Colored Buttons (A, B, C, D):** Functionality varies by TV model and context (e.g., interactive TV services, specific app controls).
- **MEDIA.P:** Accesses media playback functions.
- **INTERNET:** Direct access to internet browser or smart features.
- **AD:** Audio Description toggle.
- **P.SIZE:** Adjusts picture size/aspect ratio.
- **SUBT.:** Toggles subtitles.
- **Media Playback Controls (Record, Play, Pause, Stop, Rewind, Fast Forward):** Controls playback of media content.

4. MAINTENANCE

4.1 Cleaning the Remote Control

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Ensure no liquid enters the remote.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Refer to Section 2.1 for detailed battery installation instructions.

- Remove old batteries promptly to prevent leakage and damage.
- Dispose of used batteries according to local regulations.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly installed batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote control range is poor.	Weak batteries; Obstruction between remote and TV; Remote not pointed at TV sensor.	Replace batteries; Remove obstructions; Point remote directly at the TV's IR sensor.

Problem	Possible Cause	Solution
Specific buttons are unresponsive.	Dirt or debris under the button; Button malfunction.	Clean the remote control; If problem persists, the button may be faulty.
Remote works for some functions but not others.	TV model incompatibility for certain advanced functions; TV settings.	Verify compatibility with your specific Samsung TV model. Some advanced features may require the original remote or specific TV settings.

6. SPECIFICATIONS

- **Brand:** HUAYU
- **Model:** RM-L1015
- **Compatible Devices:** Samsung LED/LCD Televisions
- **Controller Type:** Button Control
- **Transmission Distance:** Up to 10 meters (33 feet)
- **Material:** ABS
- **Color:** Black
- **Power Source:** 2 x AAA Batteries (not included)
- **Item Model Number (Manufacturer's Internal):**930
- **ASIN:** B0DJ7P3WZ6

7. WARRANTY AND SUPPORT

7.1 Manufacturer's Warranty

This HUAYU RM-L1015 remote control comes with a **1-year Manufacturer Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage.

7.2 Customer Support

For technical assistance, warranty claims, or further inquiries, please contact your retailer or the HUAYU customer support channel provided at the point of purchase.