



[Manuals.plus](#) /

› [HUAYU](#) /

› HUAYU RM-L1598 Remote Control User Manual for Samsung LED Smart TV

HUAYU RM-L1598

HUAYU RM-L1598 Remote Control User Manual

Compatible with Samsung LED Smart TVs

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your HUAYU RM-L1598 Remote Control. This remote is designed for direct use with Samsung LED Smart TVs and non-Smart TVs, requiring no complex codes or setup procedures.



Image 1: Front and back view of the HUAYU RM-L1598 remote control. The front shows all buttons, including dedicated Netflix and Amazon Prime Video buttons. The back is smooth and black.

SETUP

1. Battery Installation

The HUAYU RM-L1598 remote control requires two (2) AAA batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.



Image 2: View of the open battery compartment on the back of the remote control, showing where to insert two AAA batteries.

2. Initial Use

This remote control is designed for direct use with compatible Samsung LED Smart TVs and non-Smart TVs. No programming or code input is required. Once batteries are installed, point the remote towards your television and begin operation.

OPERATION

The HUAYU RM-L1598 remote control features a comprehensive set of buttons for controlling your Samsung television. Ensure a clear line of sight between the remote control and the TV's infrared receiver for optimal performance. The remote has an effective transmitting distance of more than 8 meters.

Button Functions Overview:

- **Power (●)**: Turns the TV on or off.
- **TV**: Switches to TV mode.
- **SOURCE**: Selects input sources (e.g., HDMI, AV).
- **HDMI**: Directly selects HDMI input.
- **Number Buttons (0-9)**: Directly input channel numbers.
- **TTX/MIX**: Teletext functions.
- **PRE-CH**: Returns to the previous channel.
- **Volume (+/-)**: Adjusts the volume level.
- **MUTE**: Mutes or unmutes the TV sound.
- **CH LIST**: Displays the channel list.
- **Channel (Up/Down)**: Changes channels.
- **MENU**: Opens the TV's main menu.
- **GUIDE**: Displays the electronic program guide.
- **SMART HUB**: Accesses the Samsung Smart Hub.
- **INFO**: Displays information about the current program or input.
- **TOOLS**: Accesses quick settings or tools menu.
- **Navigation Buttons (Up, Down, Left, Right, Enter)**: Navigates through menus and selections.
- **RETURN**: Returns to the previous screen or menu.
- **EXIT**: Exits the current menu or application.
- **Color Buttons (A, B, C, D)**: Functionality varies by application or TV menu.
- **NETFLIX**: Dedicated button to launch Netflix.
- **AMAZON PRIME VIDEO**: Dedicated button to launch Amazon Prime Video.
- **WWW**: Accesses the web browser.
- **HISTORY**: Displays viewing history.
- **E-MANUAL**: Accesses the TV's electronic manual.
- **Family Story**: Accesses Family Story feature (if available on TV).
- **CAMERA**: Accesses camera functions (if available on TV).
- **SUPPORT**: Accesses TV support features.
- **AD/SUBT.**: Toggles Audio Description or Subtitles.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind)**: Controls media playback.



Image 3: Angled view of the remote control, highlighting the ergonomic design and the arrangement of various function buttons, including the dedicated streaming service buttons.

MAINTENANCE

Battery Replacement:

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

Cleaning:

Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

Storage:

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Ensure there is a clear line of sight between the remote control's infrared emitter and the TV's infrared receiver. Obstructions can block the signal.
 - Move closer to the TV.
- **Buttons not working or working intermittently:**
 - Clean the remote control surface, especially around the buttons, to remove any dirt or debris that might be obstructing button presses.
 - If only specific buttons are not working, it might indicate internal damage.
- **Limited range:**
 - Ensure batteries are fresh. Low battery power can reduce the effective range.
 - Remove any potential sources of infrared interference (e.g., strong lights, other electronic devices).
- **Remote does not control the TV:**
 - Verify that your TV is a Samsung LED Smart TV or a compatible Samsung LED TV. This remote is specifically designed for Samsung TVs.
 - Ensure the TV is powered on.

SPECIFICATIONS

Brand	HUAYU
Model Number	RM-L1598 (also referred to as Model 930 / 123)
Compatible Devices	Samsung LED Smart TVs, Samsung LED TVs
Connectivity Technology	Infrared (IR)
Number of Buttons	40
Special Features	Dedicated Netflix and Amazon Prime Video Buttons
Maximum Range	8 Meters
Battery Type	2 x AAA Batteries (not included)
Color	Black
Manufacturer	Anhui Huayu Electronic Technology Company Limited

WARRANTY & SUPPORT

Warranty Information:

This HUAYU RM-L1598 Remote Control comes with a **1-year Manufacturer Warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

Customer Support:

For further assistance or if you encounter issues not covered in this manual, please refer to the retailer where you purchased the product or consult the manufacturer's official support channels. Ensure you have your product model number (RM-L1598) and purchase details ready when contacting support.