



[Manuals.plus](#) /

› [UNITSTAGE](#) /

› UNITSTAGE 5-Tier Shoe Rack with Drawers Instruction Manual

UNITSTAGE aa1ab493-576e-401b-ae6b-f8f7cfbc2652

UNITSTAGE 5-Tier Shoe Rack with Drawers Instruction Manual

Model: aa1ab493-576e-401b-ae6b-f8f7cfbc2652

1. INTRODUCTION

Thank you for choosing the UNITSTAGE 5-Tier Shoe Rack with 2 Non-Woven Drawers. This manual provides detailed instructions for assembly, usage, maintenance, and troubleshooting to ensure optimal performance and longevity of your product. Please read this manual thoroughly before assembly and retain it for future reference.



Image: The UNITSTAGE 5-Tier Shoe Rack in Greige, featuring a wooden top, two drawers, and five metal mesh shelves.

2. SAFETY INFORMATION

To prevent injury or damage to the product, please adhere to the following safety guidelines:

- Always assemble the product on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight capacity: **33 lb (15 kg)** for the wooden top and **22 lb (10 kg)** for each metal mesh shelf.
- Utilize the provided anti-tip device to secure the shoe rack to a wall, especially in households with children or pets, to prevent accidental tipping.
- Keep small parts and packaging materials away from children to avoid choking hazards.
- Avoid placing hot items directly on the wooden top surface.



Image: Detail of the anti-tilting device, a strap securing the shoe rack to a wall for stability.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Wooden Top Panel
- Metal Side Frames (Left and Right)
- Metal Mesh Shelves (5 units)
- Non-Woven Fabric Drawers (2 units)
- Drawer Knobs (2 units)
- X-shaped Cross Bars (2 units)
- Adjustable Feet (4 units)
- Anti-tip Device (Strap, Wall Plug, Screw)
- Assembly Hardware (Screws, Allen Wrench)
- Instruction Manual



Image: Exploded view showing the main components of the shoe rack, including the top panel, drawers, metal frame, and adjustable feet.

4. ASSEMBLY INSTRUCTIONS (SETUP)

Follow these steps carefully to assemble your shoe rack. All necessary tools are included.

1. **Unpack and Identify Parts:** Lay out all components on a clean, soft surface. Refer to the package contents list to ensure all parts are present.
2. **Attach Adjustable Feet:** Screw the adjustable feet into the bottom of the metal side frames.
3. **Assemble Side Frames:** Connect the metal side frames using the X-shaped cross bars at the back. Ensure the orientation is correct as per the detailed illustrated manual.
4. **Install Metal Mesh Shelves:** Insert the five metal mesh shelves into the designated slots on the side frames. Secure them with the provided screws.
5. **Attach Wooden Top:** Place the wooden top panel onto the assembled frame and secure it with screws from underneath.
6. **Insert Drawers:** Assemble the non-woven fabric drawers by inserting the bottom panel and attaching the knobs. Slide the assembled drawers into their compartments under the wooden top.
7. **Install Anti-tip Device:** For safety, attach the anti-tip strap to the top rear of the shoe rack and secure it to a wall stud using the provided wall plug and screw.



Easy to Assemble



Anti-tilting Device



Adjustable Feet



2 Fabric Drawers

Image: Visual guide to key assembly features, including the anti-tilting device, adjustable feet, and the two fabric drawers.

Removable Shelves

Creating space for high boots.



Image: Illustration demonstrating the removability of shelves to create space for high boots or other tall items.

5. USAGE (OPERATING)

This shoe rack is designed for organizing footwear and small accessories in various home environments.

- **Shoe Storage:** Each metal mesh shelf can hold approximately 3-4 pairs of shoes, depending on size. The shelf distance is 7.1 inches (18 cm). For taller footwear like boots, one or more shelves can be removed during assembly or later.
- **Drawer Storage:** The two non-woven fabric drawers are suitable for storing smaller items such as socks, gloves, keys, or other entryway essentials.
- **Top Surface:** The wooden top provides a stable surface for decorative items, small bags, or frequently used items.
- **Adjustable Feet:** Use the adjustable feet to stabilize the shoe rack on uneven floor surfaces.



Image: The shoe rack positioned in a living space, showcasing its capacity for shoes and the utility of its top surface for decor.

6. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your shoe rack.

- **Cleaning:** Wipe metal parts with a soft, damp cloth. For the wooden top, use a dry or slightly damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust all surfaces to prevent buildup.
- **Drawer Care:** The non-woven fabric drawers can be spot cleaned with a mild detergent and air-dried. Do not machine wash.
- **Hardware Check:** Periodically inspect all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Placement:** Avoid prolonged exposure to direct sunlight or excessive moisture, which can affect the wooden components and fabric drawers.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rack is wobbly/unstable	Uneven floor; loose screws; anti-tip device not installed.	Adjust the leveling feet; tighten all screws; install the anti-tip device to a wall.
Drawers do not slide smoothly	Drawer not assembled correctly; obstruction in the compartment.	Ensure drawer bottom is fully inserted and knobs are secure; check for any debris in the drawer compartment.
Missing parts	Packaging error.	Contact customer support with your purchase details.

8. SPECIFICATIONS

- **Brand:** UNITSTAGE
- **Model:** aa1ab493-576e-401b-ae6b-f8f7cfbc2652
- **Dimensions (Overall):** 27.95" W x 10.83" D x 38.19" H (70.99 cm W x 27.51 cm D x 97 cm H)
- **Number of Tiers:** 5
- **Number of Drawers:** 2
- **Shelf Distance:** 7.1" (18 cm)
- **Material:** Particleboard (Wooden Top), Metal (Frame, Shelves), Non-Woven Fabric (Drawers)
- **Weight Capacity (Top):** 33 lb (15 kg)
- **Weight Capacity (Each Shelf):** 22 lb (10 kg)
- **Item Weight:** 15.95 lb (7.24 kg)
- **Color:** Greige



Image: Technical drawing displaying the precise dimensions of the shoe rack and its components.

9. WARRANTY AND SUPPORT

UNITSTAGE is committed to providing high-quality products. For warranty information, missing parts, or any product-related inquiries, please contact our customer support team.

Please have your purchase details, including the model number (aa1ab493-576e-401b-ae6b-f8f7cfbc2652) and date of purchase, ready when contacting support for efficient service.

For further assistance, visit the official UNITSTAGE store: [UNITSTAGE Store on Amazon](#)



