

[manuals.plus](#) /

› [Kalorik](#) /

› [Kalorik VIVID TOUCH Series 2-Slice Toaster Instruction Manual, Model TO52622SS](#)

Kalorik TO52622SS

Kalorik VIVID TOUCH Series 2-Slice Toaster Instruction Manual

Model: TO52622SS

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Kalorik VIVID TOUCH Series 2-Slice Toaster. Please read these instructions thoroughly before first use and retain them for future reference. This appliance features a 4.5-inch full-color TFT touchscreen display, customizable presets, and wide slots for various bread types.



Image: The Kalorik VIVID TOUCH Series 2-Slice Toaster in stainless steel, with two slices of golden-brown toast emerging from its slots.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.

- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

SETUP

Unpacking

1. Carefully remove the toaster and all packaging materials from the box.
2. Remove any protective films or stickers from the appliance.
3. Inspect the toaster for any signs of damage. Do not use if damaged.

Placement

- Place the toaster on a stable, flat, heat-resistant surface.
- Ensure there is adequate clearance (at least 6 inches) from walls, cabinets, and other appliances to allow for proper ventilation.
- Do not place the toaster near flammable materials such as curtains or paper.

Initial Cleaning and First Use

1. Wipe the exterior of the toaster with a damp cloth. Do not use abrasive cleaners.
2. Ensure the crumb tray is properly inserted.
3. For the first use, operate the toaster without bread on the highest setting (level 6) in a well-ventilated area. This will burn off any manufacturing residues and odors. A slight smoke or odor is normal during this initial cycle.
4. Allow the toaster to cool completely before subsequent use.

OPERATING INSTRUCTIONS

Powering On and Display Overview

Plug the toaster into a standard 120V AC electrical outlet. The 4.5-inch full-color TFT touchscreen display will illuminate, showing the main menu or last used settings.

HIGH RESOLUTION DISPLAY

LARGE, FULL-TOUCH DISPLAY FOR THE
FULL TOASTING EXPERIENCE



Image: A close-up view of the toaster's high-resolution touchscreen, displaying a white bread icon, a timer, and browning level selection.

Selecting Bread Type and Browning Level

1. Insert your bread, bagel, waffle, or other item into the wide toasting slots. The self-centering guides will hold the food in place.
2. On the touchscreen, select the appropriate bread type from the available options (e.g., White, Bagel, Waffle, Gluten-Free, etc.). The toaster offers 10 different bread type selections.
3. Adjust the desired browning level using the on-screen controls. There are 6 toasting shades available, from light to dark.

CUSTOMIZE YOUR TOASTING EXPERIENCE

FIND YOUR EXACT PREFERENCE
AND ADD TO YOUR FAVORITES



Image: The toaster's display illustrating six different browning levels for toast, from very light to very dark, allowing users to customize their toasting experience.

EXPANDED TOASTING OPTIONS

OVER 120 PRESETS & 10 DIFFERENT TYPES OF BREAD & PASTRIES TO PERFECTLY TOAST YOUR FAVORITE ITEMS



Image: The toaster's screen displaying a variety of food icons like toast, bagels, croissants, and waffles, indicating expanded toasting options and presets.

Using Fresh, Frozen, and Reheat Functions

- **Fresh:** This is the default setting for fresh bread.
- **Frozen:** Select this option when toasting frozen items. The toaster will automatically adjust the cycle time to defrost and then toast.
- **Reheat:** Use this function to warm up previously toasted items without further browning.

Initiating Toasting and High-Lift Lever

Once your selections are made, press the lever down to begin the toasting cycle. The toaster will automatically calculate the optimal cooking time. After the cycle is complete, the toast will automatically pop up. Use the high-lift lever to raise smaller items for easy and safe removal.



Image: The Kalorik VIVID TOUCH Toaster on a kitchen counter, displaying a bagel setting on its screen, surrounded by fresh bagels, cream cheese, and a glass of orange juice.

Auto-Shutoff Feature

For safety, the toaster is equipped with an auto-shutoff feature that automatically turns off the heating elements at the end of the toasting cycle or if an issue is detected.

Multilingual Settings

The toaster's display supports multiple languages. To change the language, navigate to the settings menu on the touchscreen and select your preferred language (English, Spanish, French, Mandarin).

MULTILINGUAL & MULTI-METRIC SETTINGS

SELECT LANGUAGE IN ENGLISH, SPANISH, FRENCH OR MANDARIN WITH TEMPERATURES IN °F OR °C



Image: A hand interacting with the toaster's touchscreen, which displays a language selection menu with options for English, Mandarin, French, and Spanish.

MAINTENANCE

Cleaning the Exterior

- Always unplug the toaster and allow it to cool completely before cleaning.
- Wipe the exterior stainless steel surface with a soft, damp cloth. For stubborn spots, a mild non-abrasive cleaner can be used.
- Do not use abrasive pads, harsh chemicals, or immerse the toaster in water.

Emptying the Crumb Tray

The removable crumb tray should be emptied regularly to prevent crumb buildup, which can be a fire hazard.

1. Ensure the toaster is unplugged and completely cool.
2. Pull out the crumb tray located at the bottom rear of the toaster.

3. Discard crumbs.
4. Wipe the tray clean with a damp cloth and dry thoroughly before reinserting.
5. Push the crumb tray back into place until it clicks securely.



Image: The Kalorik VIVID TOUCH Toaster from the rear, showing the removable crumb tray partially pulled out for cleaning.

Storage

When not in use, ensure the toaster is unplugged and cool. Store it in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; internal fuse.	Ensure the toaster is securely plugged into a working outlet. Check your circuit breaker. If the issue persists, contact customer support.
Bread is not toasting evenly.	Uneven bread thickness; crumb buildup; incorrect setting.	Ensure bread is centered in slots. Empty crumb tray. Adjust browning level or bread type setting.
Smoke or burning smell.	Crumb buildup; food stuck in slots; first use residue.	Unplug immediately. Allow to cool. Empty crumb tray. Carefully remove any stuck food (only when unplugged and cool). First use smoke is normal.
Lever does not stay down.	Toaster not plugged in; no power; internal mechanism issue.	Ensure the toaster is plugged in and receiving power. If the issue persists, contact customer support.
Touchscreen is unresponsive.	Temporary software glitch; power cycle needed.	Unplug the toaster for 30 seconds, then plug it back in. If the problem continues, contact customer support.

SPECIFICATIONS

- **Brand:** Kalorik
- **Model:** TO52622SS
- **Color:** Stainless Steel
- **Material:** Metal
- **Product Dimensions (DxWxH):** 10.83" x 6.89" x 7.76"
- **Wattage:** 1000 watts
- **Number of Slices:** 2
- **Special Features:** Cancel Function, High Lift Carriage, Removable Crumb Tray, Touchscreen
- **Item Weight:** 3.2 Pounds (approx. 3.19 pounds)
- **Finish Type:** Polished
- **Voltage:** 120V
- **Number of Settings:** 16 (combining bread types and shades)
- **UPC:** 848052018020

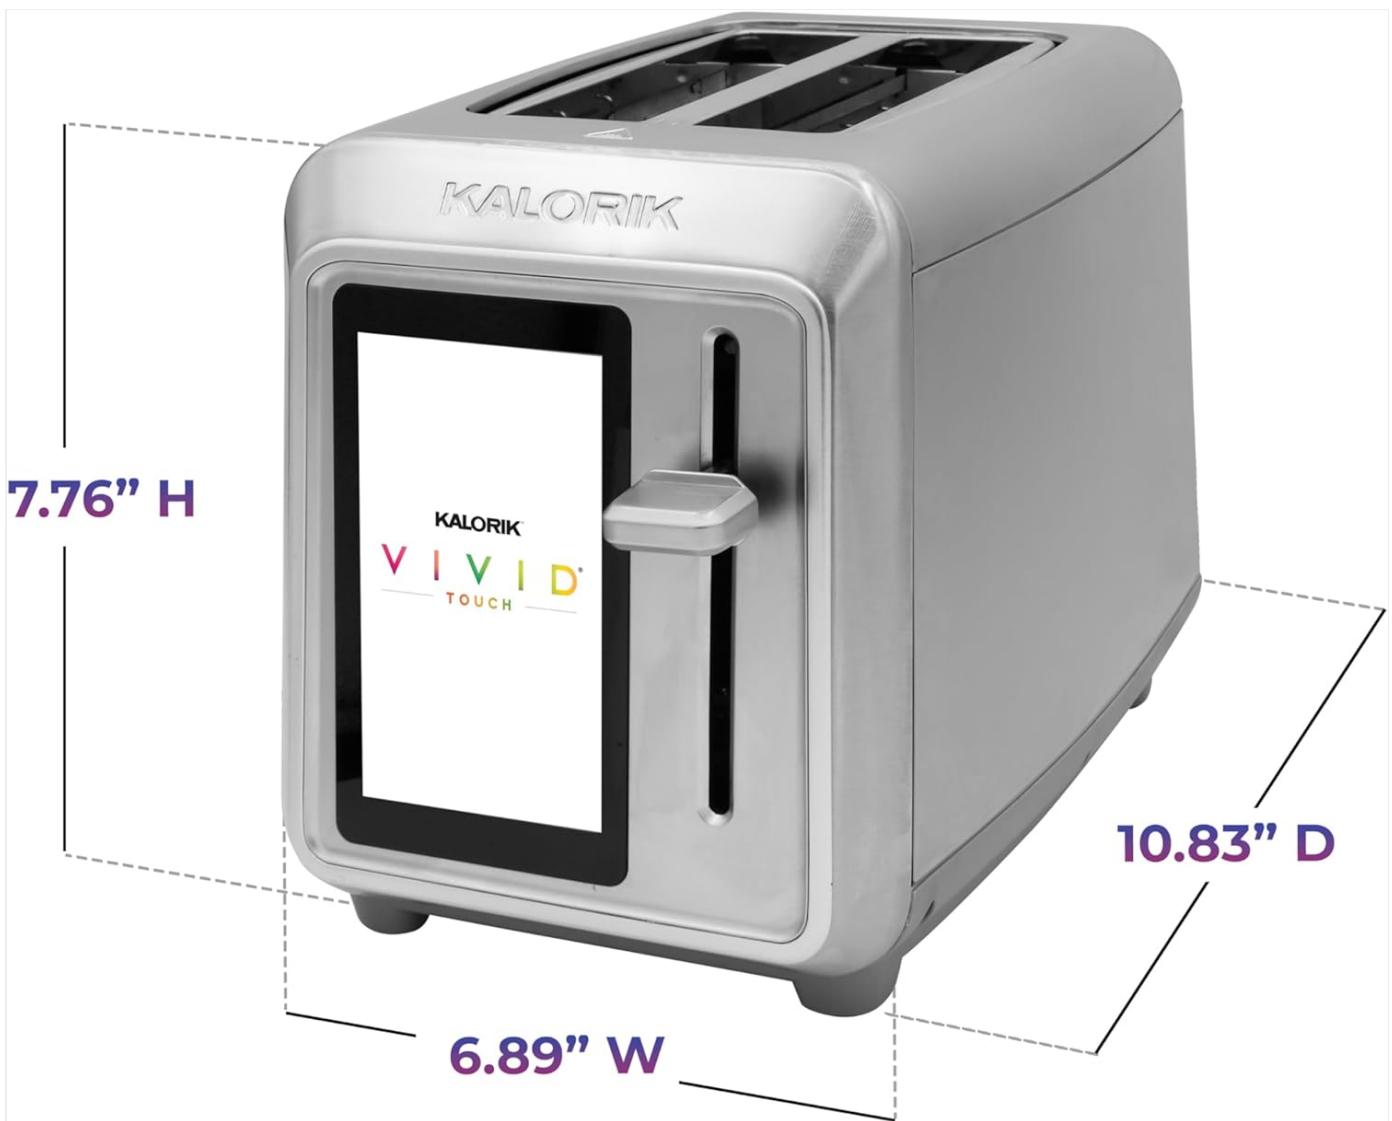


Image: A diagram illustrating the physical dimensions of the Kalorik VIVID TOUCH Toaster: 7.76 inches high, 6.89 inches wide, and 10.83 inches deep.

WARRANTY INFORMATION

Specific warranty details for your Kalorik VIVID TOUCH Series 2-Slice Toaster are typically provided with the product packaging or can be found on the official Kalorik website. Please refer to these resources for information regarding warranty coverage, terms, and conditions. Keep your purchase receipt as proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Kalorik Customer Support.

- **Website:** Visit the official Kalorik website for support resources and contact information.
- **Phone:** Refer to your product packaging or the Kalorik website for the most current customer service phone number.

Related Documents - TO52622SS

 <p>KALORIK 2-SLICE DIGITAL RAPID TOASTER GRILLE-PAIN NUMÉRIQUE À 2 TRANCHES TOSTADORA RÁPIDA DIGITAL DE 2 REBANADAS</p>	<p><u>Kalorik 2-Slice Digital Rapid Toaster User Manual</u> Comprehensive user manual for the Kalorik 2-Slice Digital Rapid Toaster, including operating instructions, safety precautions, and recipes. Learn how to use the bagel, defrost, and reheat functions for perfect toast every time.</p>
 <p>KALORIK VIVID TOUCH[™] 5 OR 7 QT AIR FRYER WITH HIGH-RESOLUTION TOUCHSCREEN Instruction Manual</p>	<p><u>Kalorik VIVID TOUCH 5 or 7 QT Air Fryer Instruction Manual with High-Resolution Touchscreen</u> Discover the Kalorik VIVID TOUCH 5 or 7 QT Air Fryer with High-Resolution Touchscreen. This comprehensive instruction manual provides essential safety guidelines, detailed operating instructions, cleaning and maintenance tips, troubleshooting solutions, and warranty information for optimal use of your Kalorik air fryer.</p>
 <p>KALORIK DIGITAL AIR FRYER TOASTER OVEN HORNOSTAADOR FRIDERÀ DE AIRE DIGITAL FOUR GRILLE-PAIN FRITÉUSE À AIR NUMÉRIQUE</p>	<p><u>Kalorik Digital Air Fryer Toaster Oven Manual</u> User manual for the Kalorik Digital Air Fryer Toaster Oven, including safety instructions, operating procedures, and troubleshooting tips.</p>
 <p>KALORIK MAXX AIR FRYER OVEN FOUR FRITÉUSE À AIR CHAUD</p>	<p><u>Kalorik MAXX Air Fryer Oven: User Manual and Features</u> Explore the Kalorik MAXX Air Fryer Oven, a versatile 26-quart, 10-in-1 countertop appliance featuring Turbo Maxx technology for faster, healthier cooking. This manual covers its functions, operation, safety, and maintenance.</p>
 <p>KALORIK DIGITAL AIR FRYER TOASTER OVEN FRIDERÀ DIGITAL DE AIRE I HORNO TOSTADOR FRITÉUSE À AIR + FOUR GRILLE-PAIN DIGITAL</p>	<p><u>Kalorik Digital Air Fryer Toaster Oven AFO 47916 User Manual</u> Comprehensive guide for the Kalorik Digital Air Fryer Toaster Oven (Model AFO 47916), covering operation, safety, and functions like air frying, baking, broiling, and toasting. Includes parts description and usage tips.</p>
 <p>KALORIK VIVID VIVID AIR FRYER FRIDERÀ DE AIRE VIVID FRITÉUSE À AIR VIVID</p>	<p><u>Kalorik VIVID Air Fryer - User Manual and Operating Guide</u> Comprehensive user manual for the Kalorik VIVID Air Fryer (FT 52333 SS), covering setup, operation, cleaning, troubleshooting, and warranty information.</p>



[\[pdf\]](#) User Manual Instructions Warranty

VIEW THIS PRODUCT USER MANUAL VIVID Kalorik c4bwagghnlx1kcvcrhs images salsify image upload s qibJ6KPQ |||

DESIGNER SERIES 2-SLICE FULL TOUCHSCREEN RAPID TOASTER Instruction Manual MODEL: TO52621SS / **TO52622SS** Register this and other Kalorik products through our website: <https://www.kalorik.com/pages/product-registration> Product registration is not required to activate warranty. Important Safeguards

lang:en score:32 filesize: 2.48 M page_count: 48 document date: 2024-10-30