

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [G-Shock](#) /

> [Casio G-Shock GM-S2110-7A9JF Watch User Manual](#)

G-Shock GM-S2110-7A9JF

Casio G-Shock GM-S2110-7A9JF Watch User Manual

Model: GM-S2110-7A9JF | Brand: G-Shock

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Casio G-Shock GM-S2110-7A9JF watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. The GM-S2110-7A9JF combines robust G-Shock durability with a sophisticated minimal design, featuring both analog and digital displays.

KEY FEATURES

- **Shock Resistant:** Engineered to withstand impacts and vibrations.
- **200-Meter Water Resistance:** Suitable for swimming and diving.
- **Analog-Digital Display:** Combines traditional analog hands with a digital display for versatile timekeeping.
- **Fully Automatic Calendar:** Pre-programmed calendar adjusts for different month lengths and leap years.
- **1/100-second Stopwatch:** Precise timing for various activities.
- **World Time:** Displays current time in major cities and specific areas around the world.
- **5 Daily Alarms:** Set up to five independent daily alarms.
- **Countdown Timer:** Useful for tracking specific time intervals.
- **Double LED Light:** Illuminates both the analog and digital displays for visibility in low light.
- **Mineral Glass:** Durable and scratch-resistant crystal.
- **Resin Case and Plastic Band:** Lightweight and comfortable for daily wear.

INITIAL SETUP

1. Setting the Home City and Time Zone

1. In the Timekeeping Mode, hold down the **ADJUST** button (top left) until the city code starts to flash in the digital display.

2. Use the **START** button (bottom right) to scroll through city codes until your desired Home City is displayed.
3. Press the **MODE** button (bottom left) to move to the DST (Daylight Saving Time) setting. Use **START** to toggle DST ON or OFF.
4. Press **MODE** again to move to the 12/24-hour format setting. Use **START** to select your preferred format.
5. Continue pressing **MODE** to cycle through other settings like seconds, hour, minute, year, month, and day. Adjust each setting using the **START** button.
6. Once all settings are correct, press the **ADJUST** button to exit the setting screen.

2. Hand Alignment Correction

If the analog hands do not match the digital time, you may need to correct their alignment. Refer to the detailed instructions in the full Casio module manual (Module No. 5611) for precise steps on hand alignment.

OPERATING INSTRUCTIONS

Mode Navigation

Press the **MODE** button (bottom left) to cycle through the different modes: Timekeeping, Stopwatch, Countdown Timer, Alarm, and World Time.

Using the Stopwatch

1. Enter Stopwatch Mode.
2. Press the **START** button (bottom right) to start the stopwatch.
3. Press **START** again to stop.
4. Press the **ADJUST** button (top left) to reset the stopwatch to zero.

Setting an Alarm

1. Enter Alarm Mode.
2. Use the **START** button (bottom right) to select the alarm number (AL1 to AL5).
3. Hold down the **ADJUST** button (top left) until the alarm time starts to flash.
4. Use **MODE** to move between hour and minute settings, and **START** to change the values.
5. Press **ADJUST** to confirm and exit.

Using the Light

Press the **LIGHT** button (top right) to illuminate the watch face. The watch features a Double LED Light for both analog and digital displays.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the watch with a soft, dry cloth. For water-resistant models, you can use a damp cloth and mild soap, then rinse thoroughly and dry.
- **Water Resistance:** The watch is water-resistant to 200 meters. Do not operate buttons underwater. Avoid exposing the watch to extreme temperature changes.
- **Battery:** The watch uses a Lithium Metal battery. Battery replacement should be performed by an

authorized service center to maintain water resistance and warranty.

- **Avoid Chemicals:** Do not expose the watch to gasoline, cleaning solvents, spray aerosols, adhesives, paints, etc. These can cause discoloration, deterioration, or damage.

TROUBLESHOOTING

- **Hands do not match digital time:** Perform hand alignment correction as described in the "Initial Setup" section or refer to the full module manual.
- **Digital display is blank:** The battery may be low or depleted. Replace the battery at an authorized service center.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode. If the issue persists, a reset may be required (refer to the full module manual for advanced reset procedures).
- **Water inside the watch:** Immediately take the watch to an authorized service center. Do not attempt to dry it yourself.

SPECIFICATIONS

Feature	Detail
Model Number	GM-S2110-7A9JF
Movement Type	Quartz
Display Type	Analog-Digital
Case Material	Resin
Band Material	Plastic
Crystal Type	Mineral Glass
Water Resistance	200 Meters (20 BAR)
Case Diameter	40.5 Millimeters
Case Thickness	11 Millimeters
Item Weight	56 Grams
Battery	1 Lithium Metal battery (included)
Additional Features	Chronograph, Glow In The Dark, Light Up, World Time, Alarms, Countdown Timer

PRODUCT IMAGES



Figure 1: Front view of the Casio G-Shock GM-S2110-7A9JF watch, highlighting its gold dial and white resin band, alongside a pink variant.



Figure 2: The Casio G-Shock GM-S2110-7A9JF watch worn on a wrist, illustrating its compact and comfortable fit.

WARRANTY AND SUPPORT

Your Casio G-Shock GM-S2110-7A9JF watch comes with a limited warranty. Please refer to the International Warranty Card included in your product packaging for full details regarding warranty coverage, terms, and conditions. For technical support, service, or to locate an authorized service center, please visit the official Casio website or contact their customer service department.

The product package includes an Instruction Manual and a Warranty Card. The module number for this watch is 5611, which can be used to find detailed instructions on the Casio website.