

[Manuals.plus](#) /

› [Furmax](#) /

› Furmax Vanity Desk with Lighted Mirror User Manual

Furmax F24VN02430474

Furmax Vanity Desk with Lighted Mirror User Manual

Model: F24VN02430474

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your Furmax Vanity Desk with Lighted Mirror. Please read this manual thoroughly before beginning assembly or use to ensure proper function and safety. Retain this manual for future reference.

The Furmax Vanity Desk is designed to provide a functional and elegant space for your beauty routine, featuring ample storage, adjustable LED lighting, and convenient power outlets.

SAFETY INFORMATION

Important Safety Precautions:

- Always follow detailed instructions provided in the assembly guide.
- Exercise caution to avoid sharp edges and pinch points during assembly.
- Be aware of electrical components and ensure proper usage.
- Handle the product with care due to its weight and size. It is recommended that two people assemble this unit.
- Do not overload shelves or drawers.
- Keep electrical cords away from water and heat sources.

PRODUCT OVERVIEW



Figure 1: Front view of the Furmax Vanity Desk, showcasing the lighted mirror, main desktop, and integrated storage.



Figure 2: Detailed view highlighting key features including the lighted mirror, LED lamp bulbs, open shelves, wide desktop, large drawer, and side drawers.

SETUP AND ASSEMBLY

The Furmax Vanity Desk requires assembly. While detailed instructions and labeled accessories are provided, assembly can be complex and may take several hours. It is highly recommended to have two people for assembly.

Before You Begin:


- Unpack all components and verify against the parts list provided in the separate assembly instructions.
- Ensure you have adequate space for assembly.
- Gather necessary tools. Typically, only a screwdriver is required.
- Review the entire assembly instruction manual before starting.

Assembly Tips:

- Follow the step-by-step diagrams carefully.
- Ensure all screws and fasteners are tightened securely, but do not overtighten.
- For stability, it is suggested to assemble the main desktop first, then attach the mirror section.
- If any parts are missing or damaged, contact customer support immediately.

OPERATING INSTRUCTIONS

Lighted Mirror Operation:

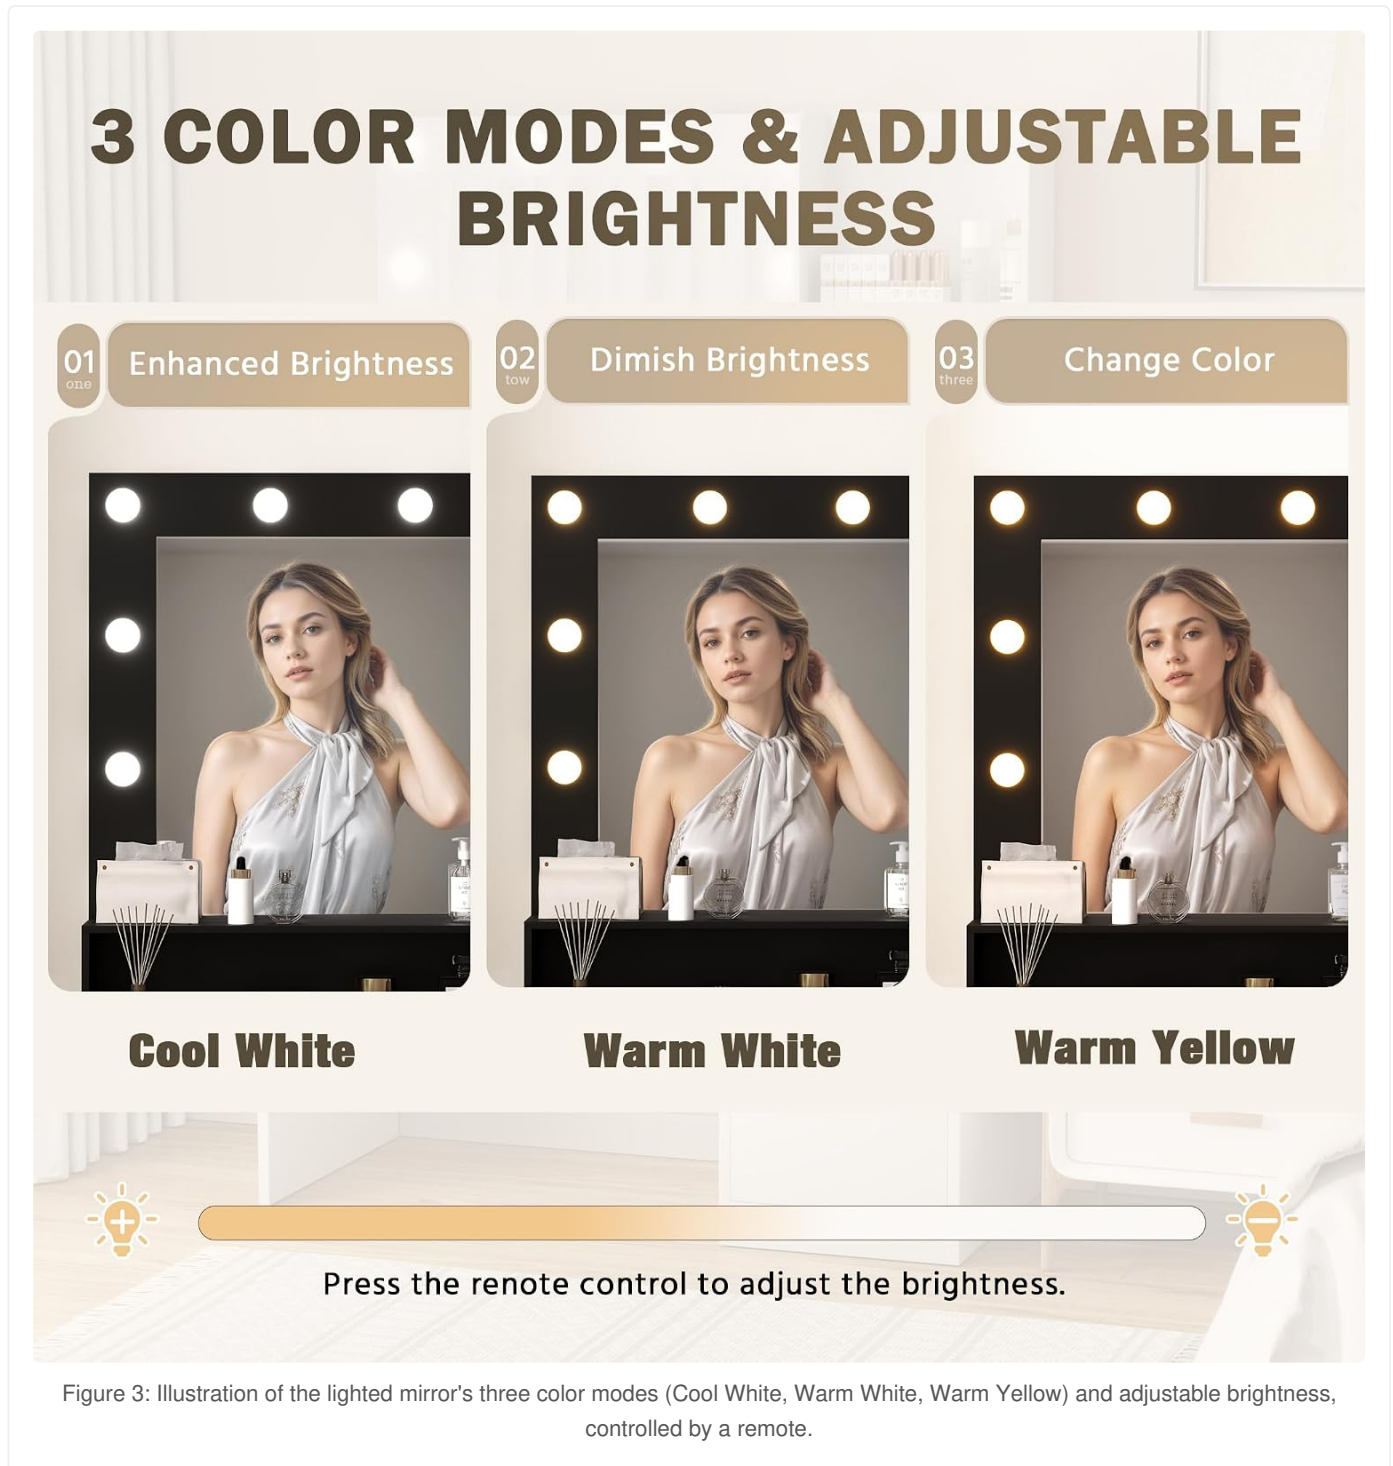

- Connect the vanity desk to a standard electrical outlet.
- Use the provided remote control to operate the mirror lights.
- **Lighting Modes:** The mirror offers three distinct lighting modes:

- Cool White
 - Warm White
 - Warm Yellow
- **Brightness Adjustment:** Press the designated buttons on the remote control to increase or decrease the brightness of the lights to suit your preference and ambient lighting conditions.

Power Outlets and USB Ports:



- The vanity desk is equipped with 2 AC outlets (125V/12V) and 2 USB ports (5V/2.1A).
- These outlets and ports are designed for convenient charging of electronic devices such as smartphones, tablets, and for powering beauty tools like hair dryers and curling irons.
- Ensure devices are compatible with the provided voltage and current.

Storage Features:

- Utilize the large drawer, three open shelves, and the cabinet with three side drawers for organizing makeup, accessories, and other personal items.
- Distribute weight evenly within drawers and shelves to maintain stability.

MAINTENANCE AND CARE

- **Cleaning:** The vanity desk features a smooth and waterproof surface. Wipe clean with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Mirror Care:** Clean the mirror with a glass cleaner and a lint-free cloth. Do not spray cleaner directly onto the mirror; apply to the cloth first.
- **Electrical Components:** Ensure all electrical connections are secure. If any part of the lighting system or power strip malfunctions, discontinue use and contact customer support.
- **General Maintenance:** Periodically check all screws and fasteners to ensure they remain tight. Retighten as necessary to maintain structural integrity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	Not plugged in. Loose connection. Remote control battery low or faulty. Power outlet issue.	Ensure the power cord is securely plugged into a working electrical outlet. Check all cable connections to the mirror and power strip. Replace remote control batteries. Test the outlet with another device. If the problem persists, contact customer support.
Power outlets/USB ports not working.	Not plugged in. Overload or circuit breaker tripped. Faulty power strip.	Verify the main power cord is connected. Unplug all devices and try again. Check your household circuit breaker. Contact customer support if the issue continues.
Desk feels wobbly after assembly.	Screws not fully tightened. Incorrect assembly step.	Carefully re-tighten all assembly screws. Review the assembly instructions to ensure all steps were followed correctly.

SPECIFICATIONS



Figure 5: Dimensional diagram of the Furmax Vanity Desk, providing key measurements for height, width, and depth.

Feature	Detail
Model Number	F24VN02430474
Dimensions (D x W x H)	15.74" x 39.3" x 58.8" (40cm x 99.8cm x 149.4cm)
Material	Engineered Wood

Feature	Detail
Color	Black
Item Weight	53.6 pounds (24.3 kg)
Lighting Modes	3 (Cool White, Warm White, Warm Yellow)
Power Outlets	2 AC Outlets (125V/12V)
USB Ports	2 USB Ports (5V/2.1A)
Power Cord Length	4.6 Feet

Note: All specifications are approximate and subject to change without notice.

WARRANTY INFORMATION

Specific warranty details for the Furmax Vanity Desk are typically provided with the product packaging or can be obtained by contacting Furmax customer support directly. Please retain your proof of purchase for any warranty claims. Common warranty coverage may include defects in materials and workmanship under normal use. Damage resulting from improper assembly, misuse, abuse, or unauthorized modifications is generally not covered.

CUSTOMER SUPPORT

For any questions regarding assembly, operation, maintenance, or troubleshooting that are not covered in this manual, please contact Furmax customer support. You can typically find contact information (phone number, email, or website) on the product packaging, the Furmax brand store on Amazon, or by visiting the official Furmax website. When contacting support, please have your product model number (F24VN02430474) and proof of purchase readily available. Visit the official Furmax Store for more information:[Furmax Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DJBVZF9>

More documents and user manuals: <https://manuals.plus/>