

EMERIO UVC-130959

Emerio UVC-130959 Cordless Vacuum Cleaner User Manual

Model: UVC-130959

INTRODUCTION

Thank you for purchasing the Emerio UVC-130959 Cordless Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Do not pick up toxic material (e.g., chlorine bleach, ammonia, drain cleaner).
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.

PRODUCT OVERVIEW AND COMPONENTS

The Emerio UVC-130959 is a versatile cordless stick vacuum cleaner designed for efficient cleaning of various floor types.





Figure 1: The Emerio UVC-130959 Cordless Vacuum Cleaner shown with its main body, extension tube, floor brush, and various accessories including the 2-in-1 nozzle, wall mount, and charging adapter.

Main Components:

- **Main Unit:** Contains the motor, dustbin, and control panel.
- **Extension Tube:** Connects the main unit to the floor brush or other attachments for extended reach.
- **Rotary Turbo Brush with LED Light:** For effective cleaning of carpets and hard floors, featuring integrated LED lights to illuminate the cleaning path.
- **2-in-1 Dust and Crevice Nozzle:** A versatile attachment for cleaning tight spaces, corners, and upholstery.
- **Wall Mount:** For convenient storage and charging.
- **Battery Charging Cable:** For recharging the vacuum's battery.
- **HEPA H11 Filter:** Advanced filtration system to capture fine dust and allergens.



Figure 2: A detailed view of the included accessories: the 2-in-1 dust and crevice nozzle, the wall mount bracket, and the power adapter with charging cable.

SETUP AND ASSEMBLY

1. Initial Charging

Before first use, fully charge the vacuum cleaner. Connect the charging cable to the charging port on the main unit and plug the adapter into a power outlet. The battery indicator lights will show charging status.

- Charging Time: Approximately 4 hours for a full charge.
- Battery Life: Up to 40 minutes on a full charge (may vary based on suction level).



Figure 3: The control panel showing the power button, suction level selector, and three blue LED lights indicating battery charge status.

2. Assembly

1. **Attach the Extension Tube:** Insert the wider end of the extension tube into the main unit until it clicks securely.
2. **Attach the Floor Brush:** Connect the rotary turbo brush to the other end of the extension tube until it clicks. Alternatively, attach the 2-in-1 nozzle directly to the main unit or extension tube.
3. **Wall Mount Installation (Optional):** Choose a suitable location near a power outlet. Secure the wall

mount to the wall using appropriate screws and anchors (not included). The vacuum can then be stored and charged on the mount.





Figure 4: The Emerio UVC-130959 Cordless Vacuum Cleaner fully assembled with the main unit, extension tube, and rotary turbo brush attached, ready for use.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the power button on the main unit handle to turn the vacuum cleaner on or off.

2. Adjusting Suction Levels

The vacuum cleaner features 2 suction levels. Press the suction level button (often marked with '+' or a fan icon) to switch between the standard and maximum suction modes. The LED indicators on the control panel will change to reflect the selected mode.

3. Using Attachments

- **Rotary Turbo Brush:** Ideal for general floor cleaning on both carpets and hard floors. The integrated LED lights illuminate dust and debris.
- **2-in-1 Dust and Crevice Nozzle:**
 - Use the crevice tool for narrow gaps, edges, and corners.
 - Slide the brush attachment forward for dusting surfaces, upholstery, and delicate items.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

1. Emptying the Dustbin

1. Ensure the vacuum is turned off.
2. Locate the dustbin release button on the main unit.
3. Press the button to detach the dustbin.
4. Open the dustbin lid and empty its contents into a waste bin.
5. Reattach the dustbin securely to the main unit.

2. Cleaning the Filters

The vacuum cleaner uses a HEPA H11 filter and a metal mesh filter (cyclone filter). Clean these regularly to maintain suction power.

1. **Remove Filters:** With the dustbin detached, carefully remove the HEPA H11 filter and the metal mesh filter.
2. **Clean HEPA H11 Filter:** Tap the HEPA filter gently over a waste bin to remove loose dust. If heavily soiled, rinse it under cold running water. Ensure it is completely dry before reinserting (allow 24-48 hours for air drying).



Figure 5: A close-up view of the cylindrical HEPA H11 filter, which is crucial for trapping fine dust particles and allergens.

3. **Clean Metal Mesh Filter:** Rinse the metal mesh filter under cold running water. Ensure it is completely dry before reinserting.



Figure 6: The metal mesh cyclone filter, which separates larger debris from the airflow before it reaches the HEPA filter.

4. **Reassemble:** Once all parts are dry, reinsert the filters into the dustbin and reattach the dustbin to the main unit.

3. Cleaning the Rotary Turbo Brush

Hair and debris can get tangled in the brush roll. Periodically remove the brush roll for cleaning.

1. Turn off the vacuum and detach the floor brush.
2. Locate the brush roll release mechanism (usually a latch or screw on the side of the brush head).
3. Remove the brush roll and use scissors or a brush to cut and remove tangled hair and fibers.
4. Reinsert the brush roll and secure it.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the battery fully.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Low suction power.	Dustbin is full.	Empty the dustbin.
	Filters are clogged.	Clean or replace the HEPA and metal mesh filters. Ensure they are completely dry before reinserting.
	Hose or attachments are blocked.	Check for blockages in the extension tube, floor brush, or nozzles and remove them.
Brush roll not rotating.	Hair or debris tangled in brush roll.	Clean the brush roll as described in the Maintenance section.
	Brush roll is not properly installed.	Ensure the brush roll is securely in place.
Battery indicator lights not working.	Battery issue or charging fault.	Ensure charger is properly connected. If problem persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Name	UVC-130959
Brand	EMERIO
Wattage	130 watts
Battery Type	Lithium-Ion (22.2V, 2200mAh)
Charging Time	4 Hours
Battery Life	Up to 40 minutes
Dustbin Capacity	1.2 Liters
Filter Type	HEPA H11 filter
Number of Suction Levels	2

Feature	Detail
Form Factor	Stick
Product Dimensions	9.45" L x 5.12" W x 44.09" H
Item Weight	5.17 pounds
Special Features	Bagless, Compact, Cordless, Front Light, HEPA H11, Headlight, Lightweight, Portable, Wireless

WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions. For technical support, spare parts, or service inquiries, please contact your local retailer or the Emerio customer service department.

EU Spare Part Availability Duration: 1 Year.