

19036

Beautiful 1.7-Liter Electric Kettle (Model 19036)

INSTRUCTION MANUAL

Introduction

Thank you for choosing the Beautiful 1.7-Liter Electric Kettle. This elegant and high-performance kettle is designed to enhance your tea-making experience with its 1500W power and 4 one-touch preset programs. This manual provides essential information for safe and efficient use, maintenance, and troubleshooting.



Important Safety Information

- Always unplug the kettle from the power outlet when not in use and before cleaning.
- Do not immerse the kettle, power base, cord, or plug in water or other liquids.
- Ensure the kettle is placed on a firm, level, and dry surface away from the edge of the countertop.
- Do not operate the kettle if the cord or plug is damaged, or if the kettle malfunctions or has been damaged in any way.
- Avoid touching hot surfaces. Use handles or knobs. Steam emitted during boiling can cause burns.
- Do not fill the kettle above the maximum fill line or below the minimum fill line to prevent boil-dry damage or overflow.
- This appliance is equipped with an automatic shut-off and boil-dry protection feature for safety.

Components

Your Beautiful Electric Kettle includes the following parts:

- **1.7L Programmable Temperature Kettle Unit:** The main kettle body with a double-wall stainless steel construction and touch-activated display.
- **360° Rotational Power Base:** A cordless power base that allows the kettle to rotate freely for easy handling and placement from any angle.
- **Removable Lid:** A BPA-free plastic lid that can be removed for easy filling and cleaning.



Image: Key features of the Beautiful Electric Kettle, including capacity, display, and temperature settings.

Setup

1. **Unpack:** Carefully remove all packaging materials and components from the box.
2. **Position the Power Base:** Place the 360° rotational power base on a stable, flat, and dry surface near a power outlet.
3. **Initial Cleaning:** Before first use, fill the kettle with fresh water to the maximum fill line. Bring the water to a boil, then discard it. Repeat this process twice to ensure the kettle is clean. Wipe the exterior with a soft, damp cloth.
4. **Fill the Kettle:** Open the removable lid and fill the kettle with fresh water. Ensure the water level is between the 'MIN' and 'MAX' indicators inside the kettle. Do not overfill or underfill.

Operating Instructions

1. **Place on Base:** After filling, securely place the kettle onto its power base.
2. **Power On:** The kettle features a touch-activated display. Press the power button (usually indicated by a universal power symbol) to activate the display.
3. **Select Temperature:** Choose one of the 4 preset programs for optimal brewing:

- **White Tea:** For delicate white teas.
- **Green Tea:** Ideal for green teas.
- **Oolong Tea:** Perfect for oolong varieties.
- **Boil:** Heats water to 212°F (100°C) for black teas, instant coffee, or other hot beverages.

You can also use the '+' and '-' buttons to adjust the temperature manually if desired.

4. **Start Heating:** Once a temperature is selected, the kettle will begin heating automatically. The display will show the current water temperature.
5. **Automatic Shut-Off:** The kettle will automatically turn off once the selected temperature is reached or if it boils dry.
6. **Keep Warm Function:** Activate the 'Warm' function to maintain the water temperature for up to 60 minutes.
7. **Cordless Serving:** The kettle can be lifted from its base for easy and safe pouring without the cord.



Image: Detailed view of the kettle's control panel and features.

Maintenance

Regular cleaning and maintenance will prolong the life of your kettle.

- **Cleaning the Exterior:** Wipe the stainless steel exterior with a soft, damp cloth. Avoid using abrasive cleaners or scouring pads, as they may scratch the surface. Dry thoroughly with a clean towel.

- **Cleaning the Interior (Descaling):** To descale the interior, fill the kettle with a mixture of equal parts water and white vinegar. Bring the mixture to a boil and then let it sit for 15-20 minutes. Empty the kettle and rinse thoroughly with clean water. Boil fresh water and discard to remove any remaining vinegar residue.

Troubleshooting

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in, power button not pressed, or kettle not properly seated on base.	Ensure the kettle is plugged into a working outlet, press the power button, and confirm the kettle is correctly placed on the power base.
Kettle shuts off prematurely.	Insufficient water (boil-dry protection activated).	Ensure water level is above the 'MIN' mark. Allow kettle to cool before refilling if boil-dry protection was activated.
Water has an unusual taste.	Mineral deposits (limescale) or residue from initial use.	Perform initial cleaning steps again. Descale the kettle regularly as described in the Maintenance section.

Specifications

Feature	Detail
Brand	Generic
Model Name	Kettle
Item Model Number	19036
Color	Lavender
Capacity	1.7 Liters
Wattage	1500 Watt-hours
Material	Glass, Plastic, Stainless Steel (BPA-Free Plastic Components)
Product Dimensions	9.21"L x 6.39"W x 10.51"H
Item Weight	2 pounds
Special Feature	Automatic Shut-Off, Detachable Base, Temperature Control

Warranty and Support

For warranty information or customer support, please refer to the documentation included with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.

