

[manuals.plus](#) /

› [Lasko](#) /

› [Lasko Digital Ceramic Tower Heater User Manual](#)

Lasko B0DJF48SFV

Lasko Digital Ceramic Tower Heater User Manual

Model: B0DJF48SFV

INTRODUCTION

This manual provides essential instructions for the safe operation, setup, maintenance, and troubleshooting of your Lasko Digital Ceramic Tower Heater. Please read this manual thoroughly before using the appliance and retain it for future reference.



Image: Front view of the Lasko Digital Ceramic Tower Heater. The heater is a tall, slender black tower with a textured grille on the front and a digital control panel on top.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electrical shock, or injury, observe the following:

- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

SETUP AND ASSEMBLY

Your Lasko Digital Ceramic Tower Heater requires minimal assembly. Follow these steps to prepare your heater for use:

1. **Unpacking:** Carefully remove the heater from its packaging. Retain packaging for off-season storage.
2. **Placement:** Place the heater on a firm, level surface. Ensure there is at least 3 feet (0.9 meters) of clear space around the heater from any combustible materials.
3. **Power Connection:** Plug the power cord directly into a 110V AC wall outlet. Do not use extension cords or power strips.

Note: The heater features tool-free assembly for convenience.

OPERATING INSTRUCTIONS

The Lasko Digital Ceramic Tower Heater features digital touch controls and a remote control for easy operation.

Control Panel Overview



Image: Close-up view of the heater's top-mounted digital control panel. It shows buttons for power, timer, oscillation, temperature up/down, and a digital display showing '22'.

- **Power Button ():** Press to turn the heater ON or OFF.
- **Temperature Up/Down Buttons (+ / -):** Adjust the desired temperature setting. The digital display will show the set temperature.
- **Oscillation Button ():** Activates or deactivates the oscillation function, allowing the heater to rotate and distribute warmth across a wider area.
- **Timer Button ():** Sets the automatic shut-off timer. Press repeatedly to cycle through available timer settings (e.g., 1 hour, 2 hours, etc.).
- **Mode Button ():** Cycles through heating modes, including an Auto Eco mode for energy conservation.

- **Child Lock Indicator ():** Indicates when the child lock is active. Refer to the full manual for activation/deactivation instructions.

Remote Control

The included remote control allows you to operate all functions of the heater from a distance. Ensure the remote has working batteries and point it towards the heater's control panel.

Note: The heater features on-board remote storage for convenience.

Auto Eco Mode

The Auto Eco mode helps maintain your desired temperature while optimizing energy consumption. When activated, the heater will automatically adjust its heat output to reach and maintain the set temperature efficiently.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater. Always unplug the heater before performing any maintenance.

- **Cleaning:** Use a soft, damp cloth to clean the exterior surfaces of the heater. Do not use abrasive cleaners or solvents.
- **Dust Removal:** Periodically use a vacuum cleaner with a brush attachment to remove dust from the air intake and exhaust grilles.
- **Storage:** When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.



Image: Side view of the Lasko Digital Ceramic Tower Heater, highlighting the air intake vents along the side and the power cord connection point at the base.

TROUBLESHOOTING

If your heater is not operating correctly, consult the following common issues and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in, power outlet issue, safety feature activated (tip-over/overheat).	Ensure plug is fully inserted. Check circuit breaker. If tip-over switch activated, place heater upright on a firm surface. If overheat protection activated, unplug, wait 10 minutes, then plug back in.
Heater blows cold air.	Temperature setting too low, fan-only mode selected.	Increase the desired temperature setting. Ensure a heating mode is selected, not just fan.
Heater makes unusual noises.	Dust accumulation, foreign object, unstable surface.	Unplug and clean air grilles. Ensure heater is on a stable, level surface. If noise persists, discontinue use and contact customer support.
Remote control not working.	Dead batteries, obstruction, remote not pointed correctly.	Replace batteries. Ensure no obstructions between remote and heater. Point remote directly at the heater's control panel.

If the problem persists after attempting these solutions, please contact Lasko Customer Support.

SPECIFICATIONS

Brand	Lasko
Model	B0DJF48SFV
Type	Digital Ceramic Tower Heater
Power Output	1500 Watts
Voltage	110 Volts
Dimensions (D x W x H)	21.6 cm x 18.4 cm x 58.4 cm
Item Weight	3 kg
Color	Black/Silver
Special Features	Adjustable Temperature, Digital Display, Remote Control, Tip-Over Protection, Overheat Protection, Child Lock, Auto Eco Mode, Oscillation.
Heating Method	Forced Air
Indoor/Outdoor Usage	Indoor
Mounting Type	Floor Mount

WARRANTY AND CUSTOMER SUPPORT

This Lasko Digital Ceramic Tower Heater is backed by a **3-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

For warranty claims, technical assistance, or general inquiries, please contact Lasko Customer Support:

- **Phone:** 1-866-603-5900
- **Website:** www.lasko.com (Please check the official website for the most current contact information and support resources.)

Please have your model number (B0DJF48SFV) and proof of purchase available when contacting support.

© 2025 Lasko Products, LLC. All rights reserved.

Related Documents - B0DJF48SFV

	<p><u>Lasko 5309 Electronic Ceramic Tower Heater - Operating Manual and Safety Instructions</u></p> <p>Comprehensive operating instructions, safety warnings, maintenance guidelines, troubleshooting tips, and warranty information for the Lasko 5309 Electronic Ceramic Tower Heater. Learn how to safely set up, operate, and maintain your heater for optimal performance.</p>
	<p><u>Lasko 5307 Oscillating Ceramic Tower Heater: User Manual, Safety Guide, and Warranty</u></p> <p>Comprehensive operating instructions, essential safety warnings, maintenance tips, and warranty information for the Lasko 5307 Oscillating Ceramic Tower Heater. Ensure safe and efficient use of your home comfort appliance.</p>
	<p><u>Lasko 5160 Digital Ceramic Tower Heater with Remote Control - Features & Specifications</u></p> <p>Explore the Lasko 5160 Digital Ceramic Tower Heater. This document details its safety features, advanced technology, convenience, and comprehensive specifications for efficient home heating.</p>
	<p><u>Lasko CT16670 Electronic Ceramic Tower Heater with Remote Control: User Manual & Safety Guide</u></p> <p>Comprehensive instruction manual for the Lasko CT16670 Electronic Ceramic Tower Heater. Includes safety guidelines, operating instructions, troubleshooting, maintenance, and warranty information.</p>
	<p><u>Lasko Ceramic Tower Heater with Remote Control (Model 755320) Instruction Manual</u></p> <p>Comprehensive instruction manual for the Lasko Model 755320 Ceramic Tower Heater with Remote Control. Includes safety warnings, operating instructions, automatic temperature control, troubleshooting, maintenance, and warranty information.</p>
	<p><u>Lasko CT14101 Electronic Ceramic Tower Heater - User Manual and Safety Instructions</u></p> <p>Comprehensive user manual and safety instructions for the Lasko CT14101 Electronic Ceramic Tower Heater, covering operation, maintenance, troubleshooting, and warranty information.</p>