

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Ninja](#) /

> [Ninja Crispi Air Fryer Portable Cooking System FN101ST User Manual](#)

Ninja FN101ST

Ninja Crispi Air Fryer Portable Cooking System

MODEL: FN101ST USER MANUAL

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the Ninja Crispi Air Fryer.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Ninja Customer Service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the PowerPod is securely seated on the container before operation.
- The CleanCrisp glassware is thermal shock resistant, but avoid extreme temperature changes (e.g., placing hot glass directly into cold water).

Product Overview

The Ninja Crispi Portable Cooking System is an all-in-one solution for air frying, baking, and recrisping meals. It features a powerful PowerPod and versatile CleanCrisp glass containers designed for both cooking and storage.



Image: The Ninja Crispi Air Fryer Portable Cooking System, showcasing the PowerPod and both the 4-quart and 6-cup glass containers, one filled with chicken wings and the other with salmon and broccoli.

Components:

- **Crispi PowerPod:** The main heating and control unit.
- **4-quart CleanCrisp Glass Container:** Ideal for larger meals, such as a 4-lb chicken.
- **6-cup CleanCrisp Glass Container:** Suitable for personal-sized meals.
- **Crisper Plates:** For optimal air frying results within the containers.
- **Storage Lids:** Two leak-proof snap-lock lids for convenient food storage.
- **Crispi Container Adapter:** Allows the PowerPod to be used with the larger 4-quart container.



Get more out of your air fryer

Ninja CRISPI® PowerPod™, 4-qt CleanCrisp™ glassware, 6-cup CleanCrisp™ glassware, adapter, and storage lids.

Image: All components of the Ninja Crispi system laid out on a kitchen counter, including the PowerPod, two glass containers, an adapter, and two storage lids.

Key Features:

- **4-in-1 Functionality:** Max Crisp, Bake, Air Fry, & Re crisp.
- **Nontoxic Containers:** CleanCrisp glassware is designed for safe cooking and storing, free from PFAS and PTFE.
- **Fixed Heat Protection:** Permanently fixed heat-safe feet allow safe placement on various countertop materials.
- **Thermal Shock Resistant:** Glass containers can go from freezer to cooking.
- **Easy Storage:** Components nest together for compact storage.
- **Easy to Clean:** Containers, crisper plates, adapter, and lids are dishwasher safe.

Setup

1. Unpacking:

- Remove all packaging materials, stickers, and tags from the unit.
- Ensure all components listed in the 'Product Overview' section are present.

2. Initial Cleaning:

- Wash the CleanCrisp glass containers, crisper plates, adapter, and storage lids in warm, soapy water, then rinse and dry thoroughly. Alternatively, these components are dishwasher safe.
- Wipe the PowerPod unit with a clean, damp cloth. Do not immerse the PowerPod in water.

3. Assembly:

1. Place the desired CleanCrisp glass container (4-quart or 6-cup) on a stable, heat-resistant surface.
2. If using the 4-quart container, place the Crispi Container Adapter onto the container first.
3. Insert the crisper plate into the glass container.
4. Carefully place the PowerPod onto the container, ensuring it is securely seated. The PowerPod should fit snugly.



Meet the Ninja PowerPod™

Legendary Ninja Air Frying power
in a 1500W portable PowerPod™

Image: A hand carefully placing the Ninja Crispi PowerPod onto a glass container, demonstrating proper assembly before cooking.

Operating Instructions

1. Preparing Food:

- Place your ingredients onto the crisper plate inside the CleanCrisp glass container. Do not overfill.
- Ensure the PowerPod is securely attached to the container.

2. Powering On and Mode Selection:

1. Plug the PowerPod into a standard electrical outlet. The display will illuminate.
2. Press the **MODE** button to cycle through the available cooking functions: Air Fry, Max Crisp, Bake, and Recrisp.
3. Use the **+** and **-** buttons to adjust the cooking temperature and time as needed for your recipe.



Image: A close-up of the Ninja Crispi PowerPod's digital control panel, displaying the various cooking modes: Bake, Air Fry, Max Crisp, and Recrisp, along with time and temperature adjustments.

3. Starting and Monitoring Cooking:

1. Once the desired mode, temperature, and time are set, press the **START** button.
2. The unit will begin cooking. You can monitor the cooking process through the clear glass container.
3. The unit will automatically shut off when the cooking cycle is complete.

4. Using the Crispi Container Adapter:

The Crispi Container Adapter is essential when using the 4-quart CleanCrisp glass container. It ensures the PowerPod fits correctly and distributes heat effectively for larger batches.



Switch to big-batch cooking

Switch from small-batch to big-batch cooking with the included Ninja Crispi® adapter.

Image: The Ninja Crispi PowerPod is shown open, revealing the internal heating element and the adapter mechanism that allows it to fit both the small and large glass containers.

5. Serving and Storing:

- Once cooking is complete, carefully remove the PowerPod (it will be hot).
- Use oven mitts to handle the hot glass container.
- Serve food directly from the container or transfer to plates.
- For storage, allow food to cool slightly, then cover the CleanCrisp container with a leak-proof storage lid.



Image: A four-panel graphic illustrating the complete process: 'Prep it' (marinating meat), 'Cook it' (PowerPod on container), 'Serve it' (food on a plate), and 'Store it' (container with lid in a refrigerator).

Maintenance and Cleaning

Proper cleaning ensures the longevity and optimal performance of your Ninja Crispi system.

1. Cleaning the PowerPod:

- Always unplug the PowerPod before cleaning and allow it to cool completely.
- Wipe the exterior of the PowerPod with a clean, damp cloth.
- Do not immerse the PowerPod in water or any other liquid.
- Clean the interior heating element area with a soft brush or damp cloth if necessary, ensuring no moisture enters electrical components.

2. Cleaning Glass Containers, Crisper Plates, Adapter, and Lids:

- These components are dishwasher safe. Place them on the top rack for best results.
- Alternatively, wash by hand with warm, soapy water using a non-abrasive sponge or cloth.
- For stubborn food residue, soak the components in warm, soapy water before cleaning.
- Ensure all parts are thoroughly dry before storing.



Easy to clean

The Ninja Crispi® adapter and CleanCrisp™ glassware and lids are dishwasher safe for quick and easy cleanup.

Image: An open dishwasher with various Ninja Crispi components, including a glass container and crisper plate, placed inside, illustrating their dishwasher-safe design.

3. Storage:

The Ninja Crispi system is designed for convenient nesting storage.

- Place the crisper plates inside the glass containers.
- Place the smaller 6-cup container inside the larger 4-quart container.
- Invert the PowerPod and place it on top of the nested containers for compact storage in cabinets.



Image: The Ninja Crispi PowerPod, glass containers, and crisper plates are neatly nested together and stored in a kitchen cabinet, demonstrating the space-saving design.

Troubleshooting

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; Power outlet not working; PowerPod not properly seated.	Ensure the power cord is securely plugged into a working outlet. Check if the PowerPod is correctly placed on the container.
Food is not cooking evenly.	Container overcrowded; Food pieces too large; Insufficient shaking/flipping.	Do not overcrowd the container. Cut food into smaller, uniform pieces. Shake or flip food halfway through cooking for best results.
White smoke coming from unit.	Grease/oil residue from previous use; High fat content food.	Ensure crisper plate and container are clean. For high-fat foods, excess oil may drip and cause smoke. This is normal.

Problem	Possible Cause	Solution
PowerPod does not fit on 4-quart container.	Crispi Container Adapter not used.	Ensure the Crispi Container Adapter is placed on the 4-quart container before seating the PowerPod.

Specifications

- **Model:** FN101ST
- **Special Features:** Automatic Shut-Off, Programmable, Temperature Control, Timer
- **Product Dimensions:** 13.38"D x 11.96"W x 13.58"H
- **Capacity:** 4 Quarts (main container), 6 Cups (small container)
- **Material:** Metal (PowerPod), Glass (CleanCrisp Containers)
- **Power:** 1500W (estimated based on product description)

Warranty and Support

Warranty Information:

Ninja products are manufactured with quality materials and craftsmanship. This product is covered by a limited warranty. Please refer to the warranty card included in your product packaging or visit the official Ninja website for detailed warranty terms and conditions.

Customer Support:

For assistance with product registration, service, or questions, please contact Ninja Customer Service. You can find contact information on the official Ninja website or in your product documentation.

Website: www.ninjakitchen.com

Phone: Refer to your product packaging or website for regional contact numbers.