

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Music Sound](#) /
- › [Music Sound VERTICAL Bluetooth Speaker Instruction Manual](#)

**Music Sound BTSPKMSVERTICAL241**

# Music Sound VERTICAL Bluetooth Speaker Instruction Manual

**MODEL: BTSPKMSVERTICAL241**

**Brand: Music Sound**

## 1. PRODUCT OVERVIEW

The Music Sound VERTICAL Bluetooth Speaker is a portable audio device designed for quality music playback. Its compact and lightweight design, along with an elastic lanyard, allows for easy portability. This speaker features 5 watts of power and offers up to 4 hours of battery life. It provides versatile connectivity options including Bluetooth, micro SD card, USB, USB-C, and AUX cable. The speaker is finished with soft fabric for a comfortable feel.



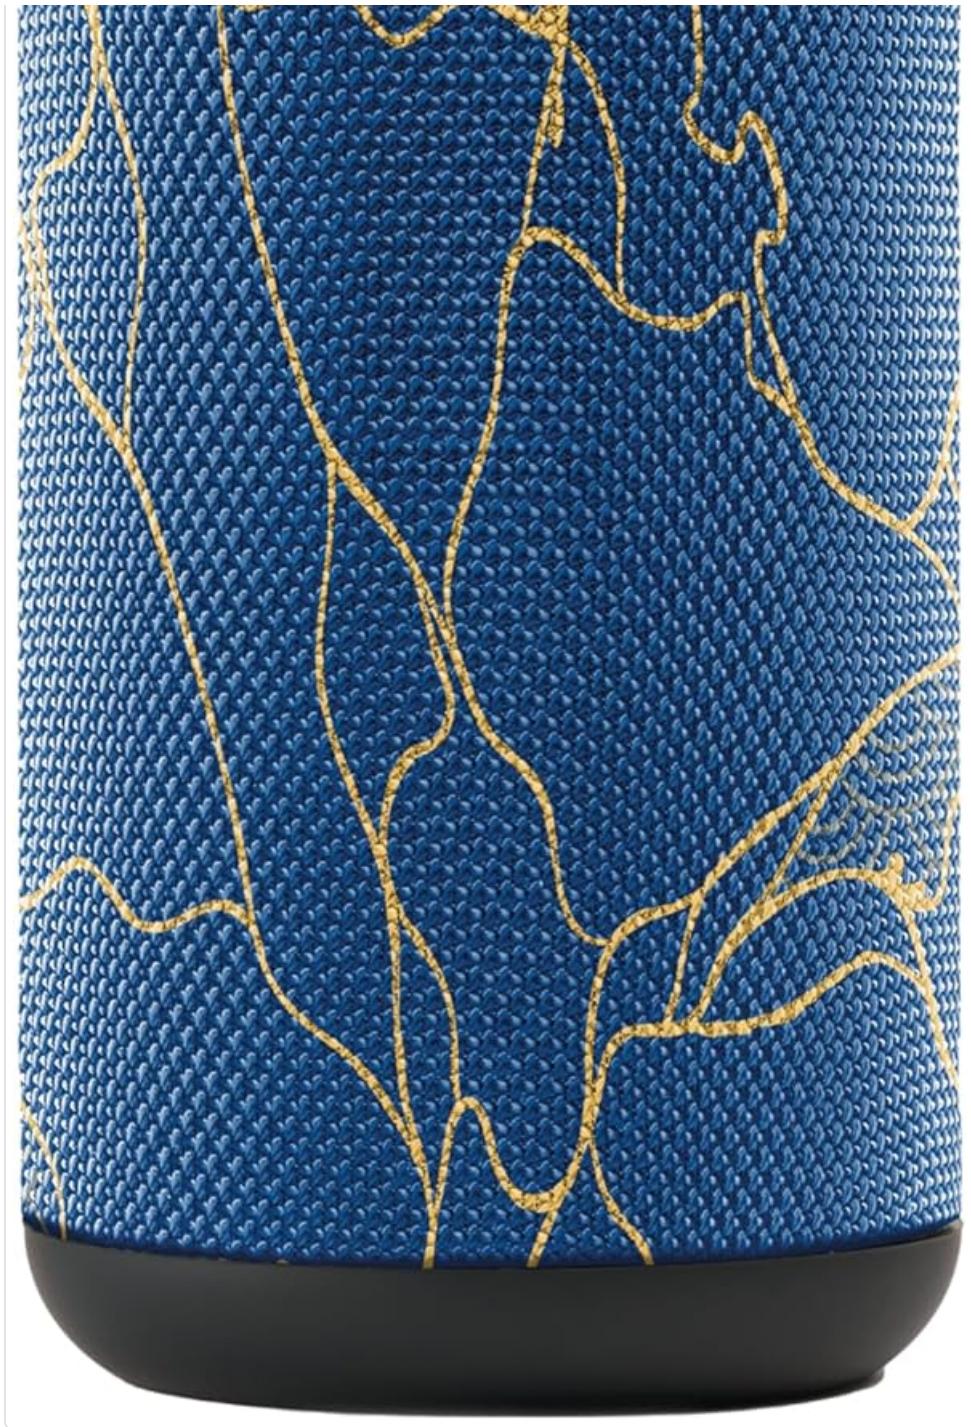


Figure 1: Front view of the Music Sound VERTICAL Bluetooth Speaker.

## 2. PACKAGE CONTENTS

---

Please verify that all items are present in the package:

- Music Sound VERTICAL Bluetooth Speaker
- USB Charging Cable
- Instruction Manual

## 3. SETUP

---

### 3.1 Initial Charging

Before first use, fully charge the speaker. Connect the provided USB charging cable to the speaker's USB-C port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The LED indicator will show charging status and turn off or change color once fully charged.

### 3.2 Powering On/Off

- To power on: Press and hold the Power button (usually the 'M' button or a dedicated power button) for a few seconds until the LED indicator lights up.
- To power off: Press and hold the Power button again for a few seconds until the LED indicator turns off.





Figure 2: Rear view of the speaker showing control buttons and ports.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (the LED indicator will typically flash rapidly).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "Music Sound VERTICAL" from the list of devices.
4. Once paired, the LED indicator will stop flashing and remain solid, and you may hear an audible confirmation.

### 4.2 Connectivity Options

The speaker supports multiple input sources:

- **Bluetooth:** For wireless audio streaming from compatible devices.
- **Micro SD Card:** Insert a micro SD card into the designated slot to play audio files directly.
- **USB:** Connect a USB flash drive to the USB port to play audio files.
- **AUX Cable:** Use a 3.5mm AUX cable to connect to devices without Bluetooth capability.
- **USB-C:** Primarily for charging, but may also support audio input depending on the device.

# WIDE RANGE of COMPABILITY



Figure 3: Speaker showing various connectivity ports (Micro SD, USB, AUX, USB-C).

## 4.3 Controls

The speaker features touch controls for various functions:

- **Power/Mode Button (M):** Press and hold to power on/off. Short press to switch between input modes (Bluetooth, Micro SD, USB, AUX).
- **Volume Up/Next Track:** Short press for volume up. Long press for next track.
- **Volume Down/Previous Track:** Short press for volume down. Long press for previous track.
- **Play/Pause:** Press to play or pause audio.

**5** WATTS  
of power



Figure 4: The speaker delivers 5 Watts of audio power.



Figure 5: The integrated elastic lanyard allows for convenient carrying.

**EASY  
TO CARRY  
COMPACT  
DESIGN**

Figure 6: Its compact design makes it easy to carry for outdoor activities.



Figure 7: Enjoy up to 4 hours of continuous music playback.

## 5. MAINTENANCE

### 5.1 Cleaning

Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents. Ensure no liquids enter the ports.

### 5.2 Water Resistance

This speaker is **not waterproof**. Avoid exposure to water, rain, or excessive moisture to prevent damage.

### 5.3 Battery Care

To prolong battery life, avoid fully discharging the speaker frequently. Store the speaker in a cool, dry place when not in use for extended periods.

## 6. TROUBLESHOOTING

- **Speaker does not power on:** Ensure the battery is charged. Connect the charging cable and try again.
- **Cannot pair via Bluetooth:**
  - Ensure the speaker is in pairing mode (LED flashing).
  - Turn off and on Bluetooth on your device.
  - Move the speaker closer to your device.
  - Clear previous Bluetooth connections on your device and try pairing again.
- **No sound:**
  - Check the volume level on both the speaker and your connected device.
  - Ensure the correct input mode is selected (Bluetooth, AUX, Micro SD, USB).
  - If using AUX, ensure the cable is fully inserted and functional.
- **Short battery life:** Ensure the speaker is fully charged before use. Battery life can vary based on volume level and usage.

## 7. SPECIFICATIONS

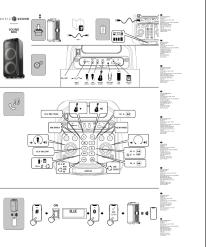
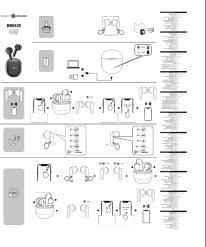
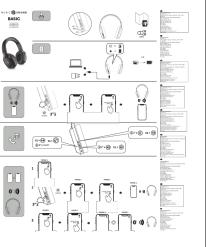
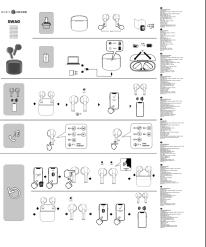
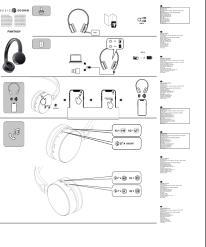
Feature	Specification
Model Number	BTSPKMSVERTICAL241
Brand	Music Sound
Speaker Type	Tower, Portable
Output Power	5 Watt
Connectivity Technology	Bluetooth, AUX Cable, USB, USB-C
Wireless Communication	Bluetooth
Audio Output Mode	Stereo
Control Method	Touch
Power Source	Battery (1 Lithium-ion battery included)
Playtime	Up to 4 hours
Product Dimensions	7D x 7W x 16H cm
Weight	380 grams
Waterproof	No
Compatible Devices	Smartphone, Tablet, Laptop, MP3 Player
Included Components	Speaker, Charging cable, Instructions

## 8. WARRANTY AND SUPPORT

This product comes with a limited warranty. For specific warranty terms, claims, or technical support, please refer to

the manufacturer's official website or contact their customer service directly. Information regarding returns for defective or damaged products can typically be found on the retailer's support pages where the product was purchased.

## Related Documents - BTSPKMSVERTICAL241

	<p><a href="#"><b>Music Sound BTSPKMSBOXBIGK Portable Speaker User Manual</b></a></p> <p>User manual for the Music Sound BTSPKMSBOXBIGK portable speaker, detailing its features, operation, technical specifications, and safety guidelines.</p>
	<p><a href="#"><b>Music Sound Breeze Bluetooth Earbuds User Manual</b></a></p> <p>This manual provides instructions and technical specifications for the Music Sound Breeze Bluetooth earbuds, including setup, usage, safety information, and disposal guidelines.</p>
	<p><a href="#"><b>Music Sound Basic Bluetooth Headphones User Manual</b></a></p> <p>This manual provides instructions for using the Music Sound Basic Bluetooth headphones, including setup, operation, and technical specifications. It covers pairing, charging, and safety information.</p>
	<p><a href="#"><b>Music Sound SWAG True Wireless Earbuds User Manual</b></a></p> <p>User manual for the Music Sound SWAG True Wireless Earbuds, detailing setup, usage, and technical specifications in multiple languages.</p>
	<p><a href="#"><b>Music Sound FANTASY Bluetooth Headphones: User Manual &amp; Specifications</b></a></p> <p>Music Sound FANTASY Bluetooth headphones offer wireless audio with 16 hours of playback. Features include easy pairing, intuitive controls, and a comfortable design. Includes technical specifications and safety information.</p>
	<p><a href="#"><b>Music Sound FANTASY Wireless Headphones - Bluetooth On-Ear Headset</b></a></p> <p>Discover the Music Sound FANTASY wireless on-ear headphones. Featuring Bluetooth connectivity, 22H playtime, comfortable padded headband, swivel earcups, and built-in microphone. Available in multiple colors.</p>