

[Manuals.plus](#) /

› [Broonel](#) /

› Broonel Silver Fine Point Digital Active Stylus Pen User Manual

Broonel Fine Point Digital Active Stylus Pen

Broonel Silver Fine Point Digital Active Stylus Pen User Manual

Model: Fine Point Digital Active Stylus Pen

1. INTRODUCTION

Thank you for choosing the Broonel Silver Fine Point Digital Active Stylus Pen. This stylus is designed to provide a precise and natural writing and drawing experience on compatible touch-screen devices. Please read this manual carefully to ensure proper use and maintenance of your device.

This active stylus is compatible with a wide range of iOS and Android Tablet PCs and Smartphones, offering versatility for various digital tasks.



Image 1.1: The Broonel Silver Fine Point Digital Active Stylus Pen.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Broonel Fine Point Digital Active Stylus Pen
- 1 x AAA Battery

3. PRODUCT FEATURES

- **Fine Point 2.3mm Nib:** Delivers accurate and precise input for writing, drawing, and navigation.
- **Adjustable Nib:** Allows for varying sensor depth, enhancing accuracy and responsiveness.
- **Broad Compatibility:** Designed to work with both iOS and Android Tablet PCs and Smartphones.
- **No Bluetooth Required:** Operates without the need for Bluetooth pairing, offering immediate use.
- **Battery Powered:** Uses one AAA battery for convenient power.

4. SETUP

Follow these steps to set up your stylus for first use:

1. **Insert Battery:** Unscrew the top cap of the stylus. Insert the included AAA battery into the battery compartment, ensuring the correct polarity (+/-). Screw the cap back on securely.
2. **Power On:** Locate the LED ON/OFF switch on the body of the stylus. Press the switch to turn on the stylus. The LED indicator will illuminate, indicating that the stylus is active.
3. **Power Off:** To conserve battery life, press the LED ON/OFF switch again to turn off the stylus when not in use. The LED indicator will turn off.



Image 4.1: Stylus components including the LED ON/OFF switch and the 2.3mm nib.

5. OPERATING INSTRUCTIONS

The Broonel Active Stylus is designed for intuitive use on your touch-screen devices.

1. **Using the Stylus:** Once powered on, simply touch the stylus nib to your device's screen to begin writing, drawing, or navigating. The fine 2.3mm nib allows for precise input.

- 2. **Adjusting Nib Sensitivity:** The stylus features an adjustable nib. If you experience inconsistent input or wish to fine-tune the responsiveness, gently twist the nib to adjust its sensor depth. Experiment with different settings to find the optimal feel for your device and application.
- 3. **Compatibility:** This stylus works across various applications on both iOS and Android platforms. No special drivers or Bluetooth pairing are required.



Image 5.1: A hand using the stylus to draw a car design on a tablet.

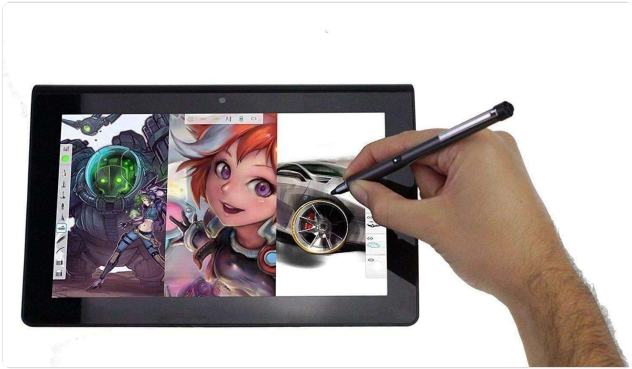


Image 5.2: The stylus being used for digital art on a tablet screen.

6. MAINTENANCE

Proper care will extend the life and performance of your stylus:

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the body of the stylus. Do not use liquid cleaners or abrasive materials.
- **Nib Care:** Avoid applying excessive pressure to the nib. If the nib becomes worn or damaged, it may affect performance.
- **Battery Replacement:** When the stylus performance degrades or the LED indicator does not light up, replace the AAA battery. Ensure the new battery is inserted with correct polarity.
- **Storage:** Store the stylus in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the battery to prevent leakage.

7. TROUBLESHOOTING

If you encounter issues with your stylus, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Stylus does not turn on.	Battery is dead or incorrectly inserted.	Replace the AAA battery or ensure it is inserted with the correct polarity.
Stylus is not responding on screen.	Stylus is off, battery is low, or device screen is dirty.	Ensure the stylus is turned on (LED illuminated). Replace battery if low. Clean your device's screen. Try on another compatible device.
Input is inaccurate or inconsistent.	Nib sensitivity needs adjustment, or screen protector interference.	Gently twist the nib to adjust its sensor depth. Ensure your screen protector (if any) is compatible with stylus input.

8. SPECIFICATIONS

Feature	Detail
Model Name	Fine Point Digital Active Stylus Pen
Brand	Broonel
Color	Silver
Nib Size	2.3mm
Power Source	1 x AAA Battery
Compatibility	iOS & Android Tablet PCs and Smartphones
ASIN	B0DJFCKR8F
Manufacturer	Broonel
Date First Available	October 3, 2024

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Broonel customer service through their official website. Please have your product model and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DJFCKR8F>

More documents and user manuals: **<https://manuals.plus/>**