

## Canon LBP171

# Canon Satera LBP171 Laser Beam Printer User Manual

A4 Monochrome Laser Printer with Duplex Printing and Wired LAN

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient use of your Canon Satera LBP171 Laser Beam Printer. Please read this manual thoroughly before using the printer and keep it for future reference. The Canon Satera LBP171 is an A4 compatible monochrome laser printer featuring double-sided printing, wired LAN connectivity, and USB2.0. It supports standard CRG-072 and high-capacity CRG-072H toner cartridges.

## 2. SAFETY INFORMATION

---

Always observe the following safety precautions to prevent injury or damage to the printer:

- Do not place the printer in unstable locations.
- Ensure the power cord is securely plugged into a grounded outlet.
- Do not block ventilation openings on the printer.
- Keep liquids away from the printer to prevent electric shock or fire.
- Avoid touching internal components immediately after printing, as they may be hot.
- Use only recommended toner cartridges.

## 3. PACKAGE CONTENTS

---

Verify that all items are included in the box:

- Canon Satera LBP171 Laser Beam Printer
- Toner Cartridges (Starter or Standard)
- Power Cord
- Setup Guide / Documentation
- Driver CD-ROM (or download instructions)

## 4. PRODUCT OVERVIEW

---

Familiarize yourself with the main components of your Canon Satera LBP171 printer.



Figure 4.1: Front view of the Canon Satera LBP171 Laser Beam Printer, showing the paper tray and output area.



Figure 4.2: Side view of the Canon Satera LBP171 Laser Beam Printer, highlighting its compact design.

# 快適なプリントスピード

## 片面33ページ/分

高速プリントにより  
作業効率の向上に貢献。  
社内資料や配布物などを  
ただちに制作できます。



※A4、普通紙、カセット給紙、同一データを連続印刷した場合の速度です。

## ファーストプリント5.0秒

「オンデマンド定着方式」を採用  
スリープ状態からでも  
プリンターが素早く立ち上がり  
出力を開始します



※A4片面印刷の場合。プリンターがデータを受信し始めてから1枚目の排紙が完了するまでの時間。出力環境によって異なる場合があります。

Figure 4.3: Diagram illustrating the printer's high-speed printing capability, achieving 33 pages per minute for single-sided A4 documents and 20 pages per minute for double-sided A4 documents.

# 消費電力量 最小0.4Wを実現

## 0.4Wスリープモード搭載



## 業務をスムーズにこなしながら 電力消費を徹底的に削減

※ 0.4Wスリープモード時は、使用できるインターフェースに制限があります。

Figure 4.4: Diagram showing the printer's energy-saving 0.4W sleep mode, which helps reduce power consumption during idle periods.

# CARPS2ドライバー採用

## CARPS2搭載

### ■ Canon Advanced Raster Printing System2(CARPS2)



## パソコン側のCPUを活用し 最適なプリント処理を実現

プリンター側で行っていたレンダリングをパソコン側で  
実施 大容量データもスピーディーに処理できます

Figure 4.5: Diagram explaining the CARPS2 (Canon Advanced Raster Printing System 2) driver, which utilizes the PC's CPU for optimal print processing, enabling faster handling of large data.

# 幅広い用紙対応力

## 60～163g/m<sup>2</sup>の 用紙坪量に対応



**薄紙、普通紙、再生紙、色紙、厚紙、ラベル紙、  
レターヘッド、ボンド紙、封筒、はがきにも  
プリントが可能。幅広い用途で活躍します。**

※ 用紙の種類やサイズによっては、印刷スピードが低下する場合があります。

Figure 4.6: Diagram illustrating the printer's wide paper compatibility, supporting paper weights from 60 to 163 g/m<sup>2</sup> and various types including thin paper, plain paper, recycled paper, colored paper, thick paper, labels, letterheads, bond paper, envelopes, and postcards.

### Product Features Overview

Your browser does not support the video tag.



Video 4.1: This video highlights key features of the Canon Satera LBP171 printer, including its wired LAN connectivity, two-sided (duplex) printing capability, and USB 2.0 interface. It demonstrates the printer's efficiency and ease of integration into various office environments.

## 5. SETUP

### 5.1 Unpacking and Placement

- Remove all packing materials and protective tapes from the printer.
- Place the printer on a stable, level surface with adequate ventilation.

## 5.2 Installing the Toner Cartridge

1. Open the front cover of the printer.
2. Gently shake the toner cartridge (CRG-072 or CRG-072H) horizontally to distribute the toner evenly.
3. Insert the toner cartridge into the printer until it clicks into place.
4. Close the front cover.

## 5.3 Loading Paper

1. Pull out the paper cassette.
2. Adjust the paper guides to the size of the paper you are loading (e.g., A4).
3. Load the paper stack into the cassette, ensuring it is flat and below the maximum fill line.
4. Slide the paper cassette back into the printer.

## 5.4 Connecting the Printer

- **Power Connection:** Connect the power cord to the printer and then to a wall outlet.
- **USB Connection:** Connect a USB 2.0 cable from the printer to your computer.
- **Wired LAN Connection:** Connect an Ethernet cable from the printer to your network router or switch.

## 5.5 Driver Installation

- Insert the driver CD-ROM into your computer or download the latest drivers from the official Canon website.
- Follow the on-screen instructions to install the printer drivers and utility software.

# 6. OPERATING INSTRUCTIONS

---

## 6.1 Basic Printing

1. Ensure the printer is powered on and connected to your computer or network.
2. Open the document you wish to print on your computer.
3. Select **Print** from the application's menu (e.g., File > Print).
4. Choose the Canon Satera LBP171 from the list of available printers.
5. Adjust print settings as needed (e.g., number of copies, paper size).
6. Click **Print**.

## 6.2 Duplex (Double-Sided) Printing

The LBP171 supports automatic double-sided printing:

1. In the print dialog box, navigate to the printer properties or preferences.
2. Look for an option related to **2-sided printing** or **Duplex printing**.
3. Select the desired binding edge (e.g., Long Edge, Short Edge).
4. Confirm the settings and proceed with printing.

## 6.3 Print Speed

The printer offers a maximum print speed of 33 pages per minute (ppm) for monochrome A4 documents.

Actual speed may vary based on document complexity and system configuration.

## 7. MAINTENANCE

---

### 7.1 Replacing the Toner Cartridge

When the toner is low or depleted, replace the cartridge:

1. Open the front cover.
2. Remove the old toner cartridge by pulling it out.
3. Unpack a new Canon CRG-072 or CRG-072H toner cartridge.
4. Gently shake the new cartridge to distribute toner.
5. Insert the new cartridge firmly until it locks into place.
6. Close the front cover.

### 7.2 Cleaning the Printer

- **Exterior:** Wipe the exterior of the printer with a soft, damp, lint-free cloth. Do not use abrasive cleaners.
- **Interior:** Periodically clean the paper path and toner area using a dry, lint-free cloth to remove any paper dust or toner residue. Refer to the on-screen manual for detailed cleaning instructions.

## 8. TROUBLESHOOTING

---

If you encounter issues with your printer, try the following solutions:

### 8.1 Printer Not Responding

- Check if the printer is powered on.
- Verify that the power cord is securely connected.
- Ensure the USB or Ethernet cable is properly connected to both the printer and the computer/network.
- Restart both the printer and your computer.

### 8.2 Paper Jams

- Turn off the printer and unplug it.
- Carefully open all covers and remove any jammed paper, pulling in the direction of the paper path.
- Ensure no small pieces of paper remain inside.
- Close all covers, plug in the printer, and turn it on.

### 8.3 Poor Print Quality

- Check the toner cartridge level and replace if low.
- Ensure you are using appropriate paper for laser printing.
- Clean the printer's interior as described in the maintenance section.
- Update printer drivers to the latest version.

## 9. SPECIFICATIONS

---

Feature	Specification
Brand	Canon
Model Name	Satera LBP171
Printing Technology	Laser
Printer Output	Monochrome
Max Print Speed Monochrome	33 ppm
Resolution	600 x 600 dpi
Duplex Printing	Automatic
Connectivity Technology	Ethernet, USB 2.0
Maximum Media Size	A4
Product Dimensions (D x W x H)	39.9D x 36.5W x 22.2H Centimeters
Paper Weight Compatibility	60-163 g/m <sup>2</sup>
Number of Trays	1
Output Sheet Capacity	150 sheets
Compatible Toner Cartridges	CRG-072 / CRG-072H

## 10. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Canon website. If you require technical assistance or have questions not covered in this manual, please contact Canon customer support. Keep your purchase receipt and product serial number handy when contacting support.

**Canon Support Website:** [www.canon.com/support](http://www.canon.com/support)