

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Digitek](#) /
- › [DIGITEK DTR-555 SS Foldable Tripod Selfie Stick User Manual](#)

Digitek DTR-555 SS

DIGITEK DTR-555 SS Foldable Tripod Selfie Stick User Manual

Model: DTR-555 SS

1. PRODUCT OVERVIEW

The DIGITEK DTR-555 SS is a versatile 5.57ft foldable tripod selfie stick designed for smartphones and GoPro action cameras. It features a 360° rotatable ball head, a stable 3-leg base, and a 7-section adjustable aluminum rod. This device supports a maximum load of 2kg and includes a 10-meter wireless remote for convenient operation. It can be used as a handheld selfie stick, a mini tripod, or a full-size tripod, making it suitable for various photography and videography needs.



Image 1.1: The DIGITEK DTR-555 SS showcasing its versatility as a mini tripod, an extended tripod, and a handheld grip.

2. WHAT'S IN THE BOX

Upon unboxing, please ensure all the following components are present:

- DIGITEK DTR-555 SS Tripod Selfie Stick
- Wireless Bluetooth Remote
- User Manual (this document)

Inside the Box



Image 2.1: The main components included in the product package.

3. SETUP INSTRUCTIONS

1. Unfolding the Tripod:

- Hold the main body of the selfie stick.
- Gently pull the three legs outwards from the base until they lock into position, forming a stable tripod stand.

2. Attaching Your Device (Smartphone/GoPro):

- **For Smartphones:** Extend the phone clamp at the top of the stick. Place your smartphone securely into the clamp, ensuring it is centered and stable.
- **For GoPro/Action Cameras:** Attach your GoPro or action camera to the integrated GoPro adapter at the top of the stick. Ensure it is firmly secured.

Handheld Versatility

Switch effortlessly between phones and action cameras & GoPro adapter for ultimate flexibility!

*GoPro adapter is not included in package.

 Folded Height
330 mm (1.08 Feet)



Image 3.1: Handheld use with a camera, illustrating device attachment.

3. Pairing the Wireless Bluetooth Remote:

- Turn on the Bluetooth remote by pressing and holding the button until the indicator light flashes.
- On your smartphone, navigate to Bluetooth settings and search for available devices.
- Select "DIGITEK Remote" (or similar name) from the list to pair. The indicator light will stop flashing once paired successfully.
- The remote has an operative range of up to 10 meters.

All Power in your hands

With Bluetooth 4.0 and an operative range of up to 10 meters, take charge of your shots with seamless remote control.



Image 3.2: Bluetooth remote pairing and range illustration.

4. OPERATING INSTRUCTIONS

1. Adjusting Height and Extension:

- To extend the selfie stick, gently pull the rod sections upwards. The DTR-555 SS features 7 adjustable sections.
- To retract, push the sections back down until they are fully collapsed.
- The stick can extend up to a maximum height of 160cm (5.57ft) and folds to a compact height of 330.2mm (1.08ft).

Extend for the Perfect Frame

Capture wide shots and full-body angles effortlessly with the tripod's 330.2mm extension.

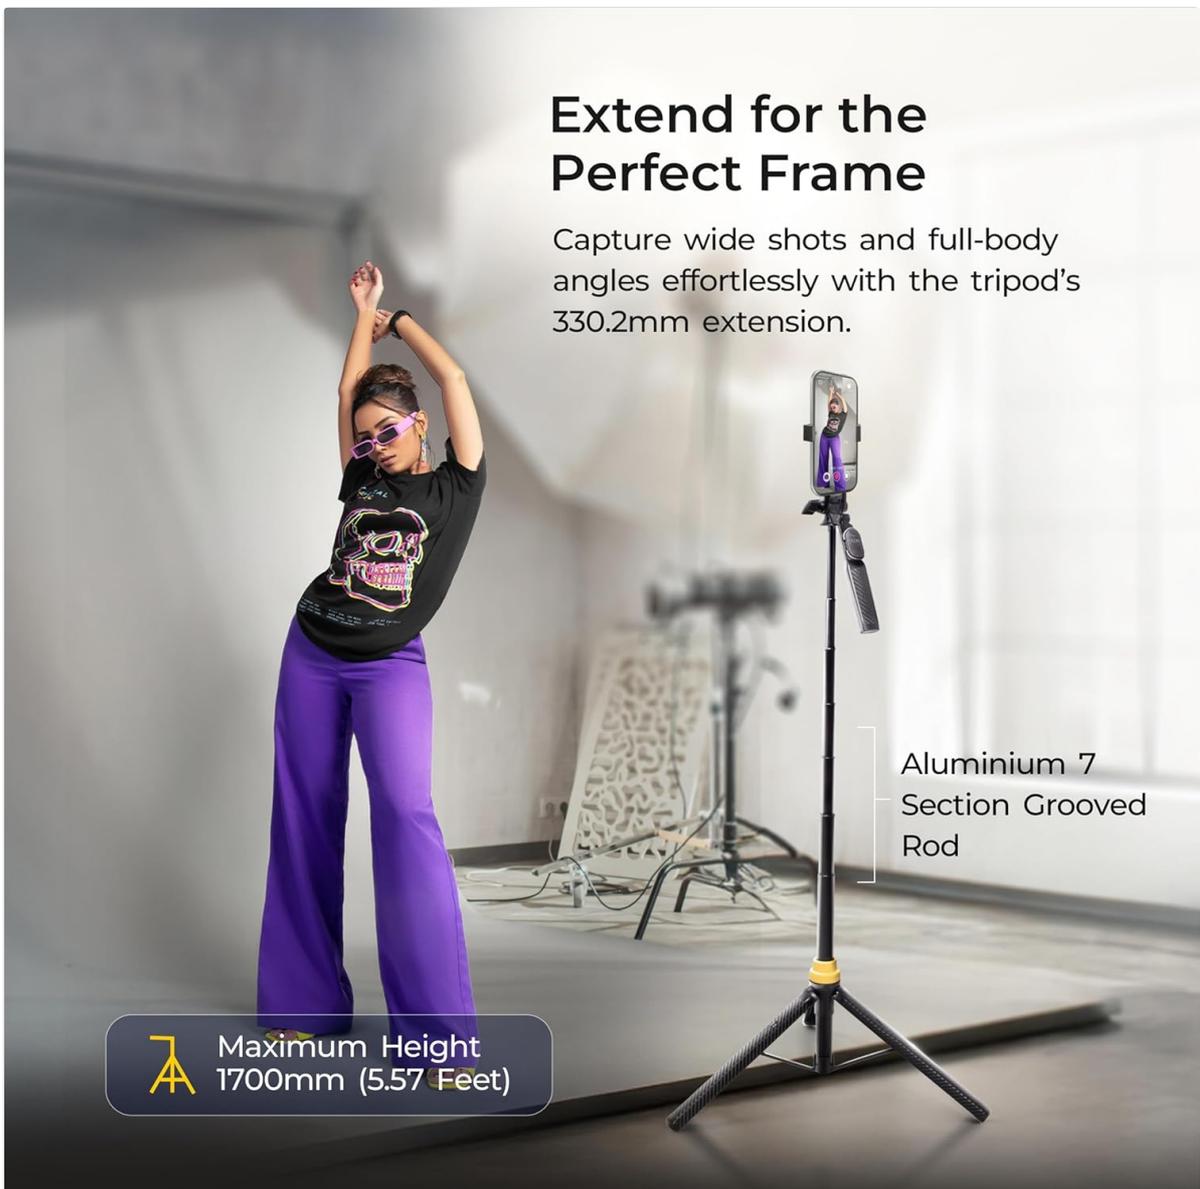


Image 4.1: The tripod selfie stick extended to its maximum height.

2. Using the 360° Rotatable Ball Head:

- The top mount features a 360° rotatable ball head. Loosen the knob on the side of the ball head to adjust the angle of your device.
- Once the desired angle is achieved, tighten the knob to secure the device in place. This allows for flexible shooting from various angles.

Flexibility at Every Angle

Whether it's a low angle, time-lapse, or wide shot, the Mini Tripod gives you perfect stability



Image 4.2: Illustration of the 360° rotation capability and stable base.

3. Switching Between Modes:

- **Selfie Stick Mode:** Keep the legs folded and extend the rod to your desired length for handheld shots.
- **Tripod Mode:** Unfold the legs completely and place the tripod on a flat, stable surface. Extend the rod to the desired height.
- **Mini Tripod Mode:** Unfold the legs and keep the rod retracted for low-angle or tabletop shots.
- **Handheld Grip Mode:** Keep the legs folded and the rod retracted for a compact handheld grip.

Four modes, endless possibilities

Switch from handheld to tripod, mini tripod, or selfie stick to capture every perfect moment.

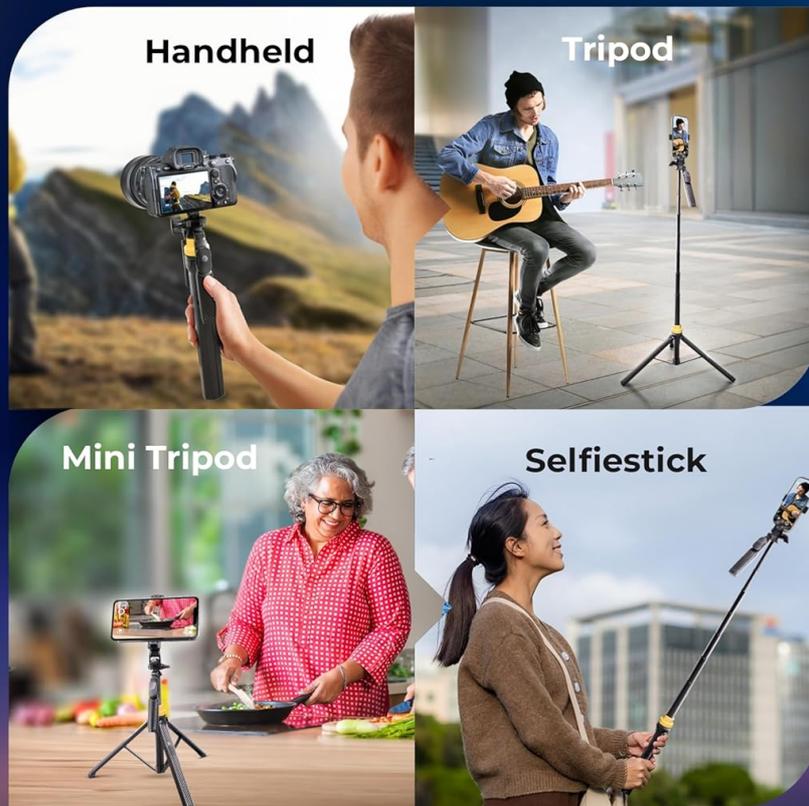


Image 4.3: The four versatile operating modes of the DTR-555 SS.

5. MAINTENANCE

- **Cleaning:** Wipe the tripod selfie stick with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials that could damage the finish.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures. Ensure it is fully retracted and the legs are folded before storage.
- **Remote Battery:** The wireless remote uses a replaceable button cell battery. If the remote stops responding, replace the battery.
- **Avoid Overloading:** Do not exceed the maximum load capacity of 2kg to prevent damage to the device.

6. TROUBLESHOOTING

- **Remote Not Connecting:**
 - Ensure the remote is charged or has a fresh battery.
 - Verify Bluetooth is enabled on your smartphone and the remote is in pairing mode.
 - Try unpairing and re-pairing the remote in your phone's Bluetooth settings.
 - Ensure you are within the 10-meter operating range.

- **Tripod Instability:**
 - Ensure the three legs are fully extended and locked into position on a flat, stable surface.
 - Verify that your device (smartphone/camera) is securely mounted and balanced.
 - Do not exceed the maximum load capacity of 2kg.
- **Sections Not Extending/Retracting Smoothly:**
 - Check for any obstructions or debris in the rod sections.
 - Avoid forcing the sections; extend and retract gently.

7. SPECIFICATIONS


Feature	Specification
Model Number	DTR-555 SS
Maximum Height	160 cm (5.57 ft)
Folded Height	330.2 mm (1.08 ft)
Adjustable Sections	7 Sections
Material	Aluminium Rod
Maximum Load Capacity	2 kg
Wireless Remote Range	Up to 10 meters (Bluetooth 4.0)
Rotation	360° Ball Head
Compatibility	Smartphones, GoPro Action Cameras
Item Weight	1 kg
Product Dimensions (LxWxH)	10 x 10 x 10 cm (folded dimensions, approximate)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please contact the manufacturer directly:

- **Manufacturer:** IMS Mercantiles Pvt. Ltd.
- **Toll-Free Number:** 1800-123-544-444
- **Customer Care Email:** support@digitek.net.in
- Please retain your purchase receipt for any warranty claims.

Related Documents - DTR-555 SS

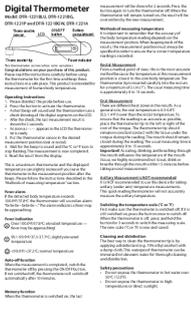	<p>Digital Thermometer User Manual - iProven</p> <p>Comprehensive user manual for iProven Digital Thermometers (DTR-1221 series), covering operating instructions, measurement methods, safety precautions, technical data, and warranty information.</p>
	<p>Dog Training Collar with GPS Tracker: User Guide</p> <p>Comprehensive guide for the GPS-DTR 25000-25002-25003 dog training collar with GPS tracker, covering setup, pairing, usage, and troubleshooting.</p>
	<p>Integra DTR-20.7 AV Receiver Service Manual</p> <p>Comprehensive service manual for the Integra DTR-20.7 AV Receiver, offering detailed troubleshooting, schematics, repair guides, and technical specifications for service professionals.</p>
	<p>De'Longhi DTR 916-IND.. Freestanding Electric Double Oven with Induction Hotplate: Installation & User Manual</p> <p>This manual provides essential installation, operation, safety, and maintenance guidelines for the De'Longhi DTR 916-IND.. freestanding electric double oven with induction hotplate. Learn how to safely install, use, and care for your De'Longhi cooker.</p>
	<p>Integra DTR-80.3 / DTR-70.3 AV Receiver Instruction Manual</p> <p>Comprehensive instruction manual for the Integra DTR-80.3 and DTR-70.3 AV receivers, detailing features, setup, operations, and troubleshooting for advanced home theater audio and video experiences.</p>
	<p>Integra DTR-60.7/DTR-50.7 AV Receiver Basic Manual: Setup and Operation Guide</p> <p>Comprehensive basic manual for the Integra DTR-60.7 and DTR-50.7 AV Receivers, covering setup, connections, operation, features, and troubleshooting. Learn to optimize your home theater experience.</p>