

Sokany SK-396

Sokany SK-396 5-in-1 Professional Shaver and Hair Clipper Instruction Manual

INTRODUCTION

Thank you for choosing the Sokany SK-396 5-in-1 Professional Shaver and Hair Clipper. This versatile grooming device is designed for both wet and dry use, offering a comprehensive solution for your shaving and trimming needs. Featuring an IPX7 waterproof rating, an intuitive LCD display, and a long-lasting 90-minute runtime, the SK-396 provides precision and convenience. Please read this manual thoroughly before first use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using this appliance.
- Keep the appliance away from water when charging. Ensure the charging port is completely dry before connecting the USB cable.
- Do not use the appliance if it is damaged. Contact customer support for assistance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use attachments supplied with the product.
- Do not disassemble the appliance yourself.
- Clean the appliance regularly as instructed in the maintenance section to prevent bacterial growth and ensure optimal performance.

PRODUCT COMPONENTS

The Sokany SK-396 comes with the following components:

- Main Shaver Unit with LCD Display
- Rotary Shaver Head (7D floating blades)
- Hair Clipper Head
- Nose Trimmer Head
- Facial Cleansing Brush Head
- Facial Massage Brush Head
- USB Charging Cable
- Cleaning Brush

رأس مغناطيسية
قابلة للإزالة
لسهولة التنظيف


المنتجات الأخرى

منتجنا

The Sokany SK-396 main unit featuring an LCD display for battery level and RPM, IPX7 waterproof rating, 800mAh battery, and USB charging capability.



موتور قوي لتنعيم أقوى

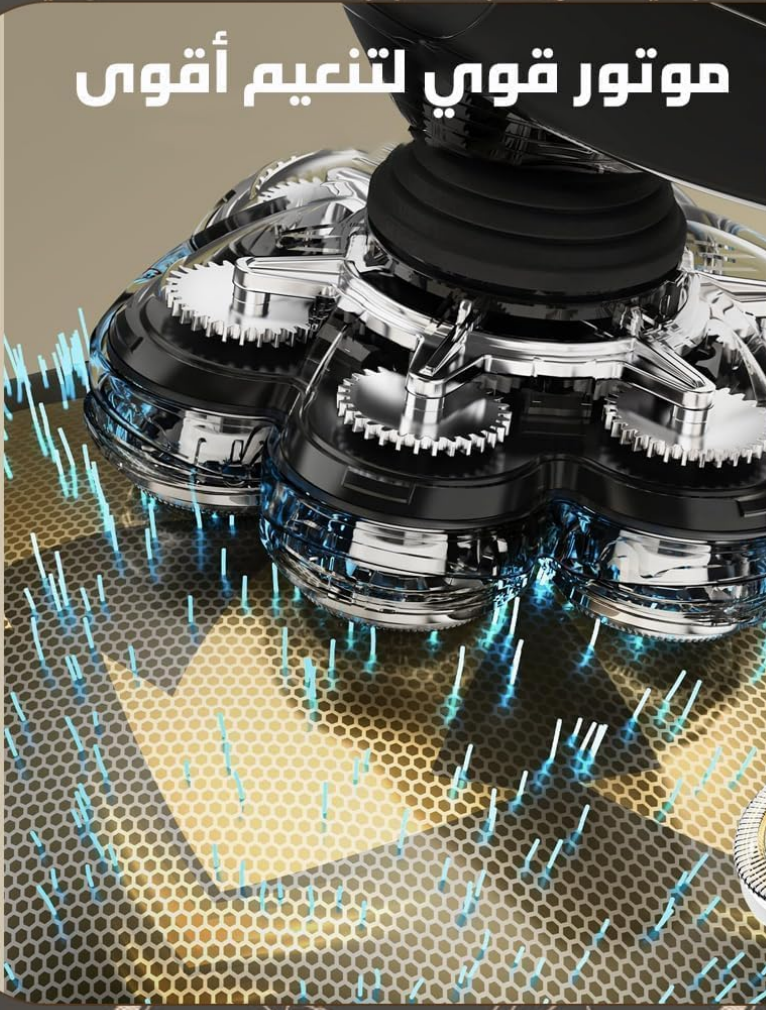

الرأس



الوجه



الرقبة



The Sokany SK-396 5-in-1 system showcasing its versatile attachments: rotary shaver head, hair clipper, nose trimmer, facial cleansing brush, and facial massage brush.



An overview of all included attachments with the Sokany SK-396 5-in-1 grooming kit, ready for various personal care routines.

CHARGING INSTRUCTIONS

1. Ensure the shaver is turned off before charging.
2. Locate the USB charging port on the bottom of the main unit. Ensure it is dry.
3. Connect the provided USB charging cable to the shaver and plug the other end into a compatible USB power adapter (e.g., phone charger, computer USB port).
4. The LCD display will show the charging status and battery percentage. A full charge typically takes approximately 2 hours.
5. Once fully charged, the display will indicate 100%. Disconnect the charging cable.

A full charge provides up to 90 minutes of cordless use.

SETUP AND ATTACHMENT INSTALLATION

The Sokany SK-396 features a magnetic attachment system for easy head changes.

1. To attach a head: Align the desired attachment head with the main unit. The magnetic connection will securely snap it into place.
2. To detach a head: Gently pull the attachment head away from the main unit.



The magnetic removable shaver head of the Sokany SK-396, designed for effortless attachment changes and simplified cleaning.

OPERATING INSTRUCTIONS

Press the power button to turn the shaver on or off. The LCD display will show the current battery level and RPM.

Using the Rotary Shaver Head

- **For Dry Shaving:** Ensure your skin is clean and dry. Move the shaver in small, circular motions over the area to be shaved.
- **For Wet Shaving:** Apply shaving foam or gel to your skin. Move the shaver in small, circular motions. Rinse the head under water during shaving to prevent clogging.
- The 7D floating blades adapt to the contours of your face and head for a close shave.

Using the Hair Clipper Head

- Attach the hair clipper head. If included, attach the desired guide comb for specific hair lengths.
- Move the clipper against the direction of hair growth for an even trim.

Using the Nose Trimmer Head

- Gently insert the nose trimmer into your nostril or ear canal.
- Move it slowly to trim unwanted hair. Do not insert too deeply.

Using the Facial Cleansing Brush Head

- Dampen your face and apply your preferred facial cleanser to the brush head or your skin.
- Gently move the brush in circular motions across your face for a deep cleanse.

Using the Facial Massage Brush Head

- Apply a small amount of facial oil or serum to your face.
- Gently massage your face with the brush head in upward and outward motions to stimulate circulation.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and hygiene of your shaver.

1. **After Each Use:** Turn off the shaver. Detach the used head. Rinse the head thoroughly under running water. For the rotary shaver head, you can open the individual blade covers for a more thorough rinse.
2. **Deep Cleaning:** Use the provided cleaning brush to remove any stubborn hair clippings from the blades and internal components of the heads.
3. **Main Unit:** The main unit is IPX7 waterproof, allowing it to be rinsed under water. However, ensure the charging port is closed and dry before rinsing. Do not submerge the main unit for extended periods.
4. **Drying:** Shake off excess water and allow all components to air dry completely before reattaching or storing.
5. **Storage:** Store the shaver and its attachments in a clean, dry place.



The Sokany SK-396 shaver being cleaned under running water, highlighting its IPX7 waterproof design for easy and hygienic maintenance.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver fully.
Poor shaving/trimming performance.	Blades are dirty or dull.	Clean the shaver head thoroughly. If performance does not improve, consider replacing the head.
Shaver stops during use.	Battery is low.	Recharge the shaver.
Charging indicator not working.	Charging cable or adapter faulty.	Try a different USB cable or power adapter. Ensure the charging port is clean and dry.

TECHNICAL SPECIFICATIONS

- **Model:** SK-396
- **Power Source:** Rechargeable Battery (800mAh)
- **Runtime:** Up to 90 minutes (fully charged)
- **Charging Time:** Approximately 2 hours
- **Waterproof Rating:** IPX7 (suitable for wet use and rinsing)
- **Blade Material:** Stainless Steel
- **Dimensions:** 18.3 x 15.1 x 8.2 cm
- **Weight:** 600 grams

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided at the time of purchase or contact your retailer. If you encounter any issues or require technical support, please reach out to the point of purchase or the manufacturer's customer service department.