

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [MVMT](#) /

> [MVMT Chrono II Men's Chronograph Watch \(Model 28000428\) Instruction Manual](#)

MVMT 28000428

MVMT Chrono II Men's Chronograph Watch

Model: 28000428

INTRODUCTION

Thank you for choosing the MVMT Chrono II Men's Chronograph Watch. This manual provides essential information for the proper setup, operation, and maintenance of your timepiece. The Chrono II features a robust design with lumi-filled hands, sharp angular lugs, applied faceted indices, and a stepped chamfered case. It is designed for everyday use with a water resistance rating of 5 ATM.





Image: Front view of the MVMT Chrono II Chronograph Watch with a white dial and cognac tan leather strap.

GETTING STARTED

Adjusting the Strap

The MVMT Chrono II features a Tang Buckle clasp. To adjust the strap, simply slide the strap through the buckle and secure the pin into the desired hole for a comfortable fit on your wrist.





Image: Rear view of the watch displaying the Tang Buckle clasp and the leather strap.

Wrist Sizing Guide

Refer to the sizing guide to understand how different watch sizes appear on various wrist dimensions. This helps in achieving an optimal fit.



Image: A visual guide illustrating various watch diameters (24mm, 34mm, 38mm, 40mm, 42mm, 48mm) as they would appear on 6-inch and 7-inch wrists.

SETTING THE TIME AND DATE

Your MVMT Chrono II watch is equipped with a crown and two pushers for setting functions.



Image: Side view of the watch highlighting the crown (center) and the two chronograph pushers (top and bottom).

1. Setting the Time:

- Pull the crown out to position 2 (farthest out).
- Turn the crown to move the hour and minute hands to the correct time.
- Push the crown back into position 0 (normal operating position) to start the watch.

2. Setting the Date:

- Pull the crown out to position 1 (first click).

- Turn the crown to adjust the date.
- Push the crown back into position 0.

Note: Avoid setting the date between 9 PM and 3 AM, as this can interfere with the date change mechanism.

USING THE CHRONOGRAPH FUNCTION

The chronograph function allows you to measure elapsed time.

1. **Start:** Press the top pusher to start the chronograph (the large second hand and sub-dials will begin moving).
2. **Stop:** Press the top pusher again to stop the chronograph and read the elapsed time.
3. **Reset:** After stopping, press the bottom pusher to reset all chronograph hands to their zero positions.

Note: Ensure the chronograph is reset to zero before starting a new measurement for accurate readings.

WATER RESISTANCE GUIDELINES

Your MVMT Chrono II watch is water resistant up to 5 ATM (50 meters). This rating indicates that the watch is suitable for everyday use and can withstand brief submersion in water, such as showering or swimming in shallow water. It is **not** suitable for diving or high-impact water sports.

- **5 ATM / 50 Meters:** Suitable for showering and swimming.
- **Avoid:** Hot water, steam, or operating the crown/pushers while the watch is wet, as this can compromise the water seal.

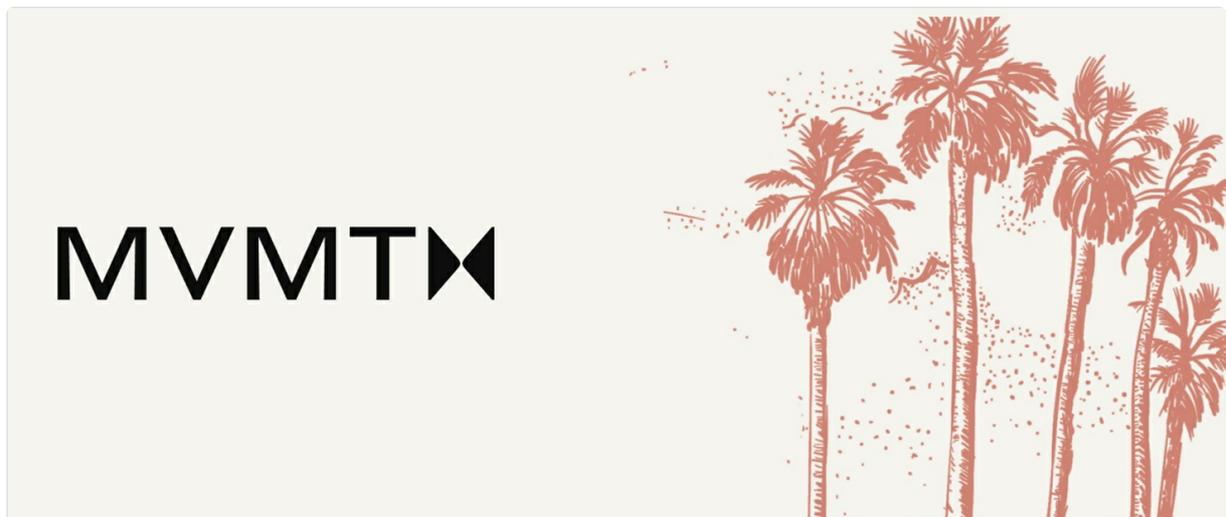


Image: A visual guide explaining different levels of watch water resistance (3 ATM, 5 ATM, 10 ATM, 20 ATM) and their corresponding activities.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the watch case and strap regularly with a soft, dry cloth to remove dirt and oils. For the ceramic bracelet, a slightly damp cloth can be used, followed by drying.
- **Avoid Chemicals:** Do not expose your watch to harsh chemicals, solvents, or detergents, as these can damage the case, strap, or seals.
- **Temperature Extremes:** Avoid sudden temperature changes or prolonged exposure to extreme heat or cold, which can affect the watch's accuracy and seals.
- **Battery Replacement:** The watch is powered by a quartz movement. When the battery needs replacement, it is recommended to take it to a qualified watchmaker or an authorized service center to ensure proper sealing.

and function.

TROUBLESHOOTING

- **Watch Not Running:**
 - Check if the crown is pushed all the way in (position 0).
 - The battery may need replacement. Refer to the 'Care and Maintenance' section.
- **Chronograph Hands Not Resetting to Zero:**
 - Ensure the chronograph is stopped before pressing the reset pusher.
 - If the issue persists, a recalibration or service may be required.
- **Date Not Changing:**
 - Verify the time is set correctly (AM/PM). The date typically changes around midnight.
 - Avoid setting the date between 9 PM and 3 AM.

SPECIFICATIONS

Item Model Number	28000428
Manufacturer	MVMT
Water Resistance	5 ATM / 50 Meters
Glass Case Material	Hardened Mineral Crystal
Clasp Type	Tang Buckle
Package Dimensions	6.1 x 3.7 x 2.6 inches
Item Weight	6.24 ounces

WARRANTY AND SUPPORT

Your MVMT Chrono II watch comes with a **Two-Year Guarantee** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear.

For warranty claims, service, or technical support, please contact MVMT customer service through their official website or the retailer where the watch was purchased. Please retain your proof of purchase for warranty validation.