

HiFuture Pocket S

HiFuture Pocket S Mini Portable & Wearable Speaker

User Instruction Manual

Model: Pocket S

1. INTRODUCTION

Thank you for choosing the HiFuture Pocket S Mini Portable & Wearable Speaker. This ultra-lightweight and compact speaker is designed to provide a powerful audio experience on the go. With its versatile magnetic clip, IPX7 waterproof rating, and advanced Wireless 5.4 technology, the Pocket S is built for adventure and seamless connectivity.

This manual provides essential information on how to set up, operate, maintain, and troubleshoot your new speaker. Please read it carefully before use and keep it for future reference.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Ultra-Lightweight Design:** Weighs just 77 grams for maximum portability.
- **Powerful 5W Output:** Delivers crisp and clear sound despite its compact size.
- **IPX7 Waterproof:** Resistant to dust, rain, and splashes, suitable for outdoor use.
- **Versatile Magnetic Clip:** Easily attach to clothing or metal surfaces.
- **Wireless 5.4 Technology:** Ensures stable and seamless connectivity.
- **Up to 8 Hours Playtime:** Extended battery life for all-day listening.
- **Type-C Charging:** Quick and convenient power replenishment.
- **Stylish Triangular Lattice Pattern:** Provides aesthetic appeal and enhanced grip.

2.2 Package Contents

- HiFuture Pocket S Speaker
- Type-C Charging Cable
- User Manual (this document)



Image: HiFuture Pocket S speaker and its retail packaging, showing the compact size of the product and its box.

2.3 Speaker Components



Image: Front view of the HiFuture Pocket S speaker, highlighting its triangular lattice grille design.



Image: Side view of the HiFuture Pocket S speaker, showing the volume up (+), multi-function (circle), and volume down (-) buttons.



Image: Back view of the HiFuture Pocket S speaker, featuring the integrated magnetic clip for attachment.

The speaker features a compact design with clearly marked control buttons on the side and a magnetic clip on the back for easy attachment.

3. SETUP

3.1 Charging the Speaker

Before first use, fully charge the speaker. Use the provided Type-C charging cable and connect it to a standard USB power adapter (not included).

- Connect the Type-C end of the cable to the charging port on the speaker.
- Connect the USB-A end of the cable to a USB power source.
- The charging indicator light will illuminate during charging and turn off when fully charged.
- A full charge typically takes approximately 1.5 to 2 hours.



Image: The HiFuture Pocket S speaker next to its Type-C charging cable, illustrating the charging method and highlighting 8 hours of playtime.

3.2 Powering On/Off

- **To Power On:** Press and hold the multi-function button (circle button) for approximately 2-3 seconds until you hear an audible prompt or see the indicator light flash.
- **To Power Off:** Press and hold the multi-function button (circle button) for approximately 3-4 seconds until you hear an audible prompt and the indicator light turns off.

3.3 Bluetooth Pairing

- Ensure the speaker is powered on and in pairing mode (indicator light will be flashing rapidly).
- On your device (smartphone, tablet, computer), enable Bluetooth.
- Search for available Bluetooth devices.
- Select "HiFuture Pocket S" from the list of devices.
- Once connected, you will hear an audible confirmation, and the indicator light will stop flashing and remain solid.
- The speaker will automatically attempt to reconnect to the last paired device when powered on.

4. OPERATING INSTRUCTIONS

4.1 Basic Controls

Button	Action	Function
+ (Volume Up)	Short Press	Increase Volume

Button	Action	Function
- (Volume Down)	Short Press	Decrease Volume
O (Multi-function)	Short Press	Play/Pause Music, Answer/End Call
O (Multi-function)	Long Press (2-3s)	Power On/Off
O (Multi-function)	Double Press	Next Track
O (Multi-function)	Triple Press	Previous Track

4.2 Using the Magnetic Clip

The HiFuture Pocket S features a strong integrated magnetic clip, allowing you to easily attach it to various surfaces for hands-free listening.

- **On Clothing:** Clip the speaker onto your shirt collar, pocket, backpack strap, or belt loop. The magnetic design ensures a secure hold.
- **On Metal Surfaces:** The magnetic clip also allows the speaker to adhere to compatible metal surfaces, such as refrigerators, metal shelves, or gym equipment.



Image: The HiFuture Pocket S speaker securely clipped onto a person's shirt collar, demonstrating its wearable capability.

4.3 True Wireless Stereo (TWS) Mode

For an enhanced stereo sound experience, you can pair two HiFuture Pocket S speakers together to operate in True Wireless Stereo (TWS) mode.

- Ensure both Pocket S speakers are fully charged and powered off.
- Power on both speakers. They will automatically enter pairing mode.
- On one of the speakers, double-press the multi-function button (circle button). It will attempt to connect to the other speaker.
- Once successfully paired, you will hear an audible confirmation, and one speaker will act as the master (left channel) and the other as the slave (right channel).
- Now, connect your device to the master speaker via Bluetooth as described in Section 3.3.



Image: Several HiFuture Pocket S speakers arranged in a circle, illustrating the concept of True Wireless Stereo (TWS) mode where multiple speakers can be paired for a wider soundstage.

5. MAINTENANCE

5.1 Cleaning

- Wipe the speaker with a soft, dry, or slightly damp cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface.

5.2 Water Resistance (IPX7)

The Pocket S speaker is IPX7 waterproof, meaning it can be submerged in water up to 1 meter for up to 30 minutes. While it is resistant to splashes and rain, please observe the following:

- Ensure the charging port cover is securely closed before exposing the speaker to water.
- Do not expose the speaker to saltwater or other chemicals.

- After exposure to water, dry the speaker thoroughly before charging.

5.3 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery every few months to maintain its lifespan.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair with device.	Bluetooth not enabled on device; speaker not in pairing mode; too far from device.	Ensure Bluetooth is on; power cycle speaker to enter pairing mode; move speaker closer to device (within 10m).
No sound or low volume.	Volume too low on speaker or device; speaker not connected.	Increase volume on both speaker and device; re-pair the speaker.
Sound distortion.	Volume too high; interference.	Lower volume; move away from other electronic devices.
TWS pairing failed.	Speakers not in TWS pairing mode correctly.	Ensure both speakers are powered off, then power on and follow TWS pairing steps carefully.

7. SPECIFICATIONS

Feature	Detail
Model Number	Pocket S
Product Dimensions	2.5 x 5.5 x 6.9 cm
Weight	77 g
Speaker Output Power	5 Watts
Connectivity Technology	Bluetooth 5.4
Audio Output Mode	Stereo (with TWS)
Waterproof Rating	IPX7
Playtime	Up to 8 hours
Charging Port	Type-C
Material	Metal (housing)

8. WARRANTY AND SUPPORT

HiFuture products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official HiFuture website.

For technical support, troubleshooting assistance, or any inquiries about your HiFuture Pocket S speaker, please contact HiFuture customer service through their official channels or the retailer from whom you purchased the product.

Official Product Videos: No official product videos from the seller were found to be relevant for embedding in this instruction manual.

© 2024 HiFuture. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question