

[Manuals.plus](#) /

› [Bebeconfort](#) /

› Bebeconfort Mallow High Chair User Manual

Bebeconfort 2843116210

Bebeconfort Mallow High Chair User Manual

Model: 2843116210

1. INTRODUCTION

Welcome to the Bebeconfort Mallow High Chair user manual. The Mallow high chair is designed to provide comfort and convenience for your child from birth up to 3 years old (or 15 kg). Its ultra-comfortable padded seat and multiple recline positions make it ideal for newborns, supporting them through their first meals and beyond. The Mallow is lightweight, features an ultra-compact fold for easy storage, and is simple to clean, making daily routines easier and more enjoyable for the entire family.



Mallow

Chaise haute pour bébé

0 à 3 ans | 0 à 15 kg

Image 1.1: Bebeconfort Mallow branding, indicating suitability from 0 to 3 years and up to 15 kg.

2. SAFETY INFORMATION

Always ensure your child's safety by following these guidelines:

- Always use the 5-point adjustable harness to secure your child in the high chair.
- Ensure the high chair is fully unfolded and locked into position before placing your child in it.
- Never leave your child unattended in the high chair.
- Keep the high chair away from heat sources, open flames, and electrical appliances.
- Do not use the high chair if any parts are damaged or missing.
- The closed armrest acts as a protective barrier; ensure it is properly engaged.
- This high chair is suitable for children from birth up to 3 years, weighing a maximum of 15 kg.

3. PACKAGE CONTENTS

Upon unpacking, please verify that all components are present:

- Bebeconfort Mallow High Chair Frame
- Padded Seat Unit with 5-point harness
- Removable Tray

If any parts are missing or damaged, please contact Bebeconfort customer support.

4. SETUP AND ASSEMBLY

The Bebeconfort Mallow high chair is designed for easy setup and storage.

4.1 Unfolding the High Chair

1. Place the folded high chair on a flat, stable surface.
2. Grasp the top frame and gently pull the legs apart until the chair fully extends and locks into its open position. You should hear a click.
3. Ensure all four legs are firmly on the ground and the chair is stable before use.



Image 4.1: The Bebeconfort Mallow high chair fully assembled and ready for use.

4.2 Attaching the Tray

1. Align the tray with the armrests on the high chair.

2. Slide the tray onto the armrests until it clicks securely into place.
3. To remove, press the release buttons (if present) on the underside of the tray and pull it forward. The tray can be stored on the rear support when not in use.

5. OPERATING INSTRUCTIONS

5.1 Adjusting Recline Positions

The Mallow high chair offers 3 recline positions, adjustable with one hand, to suit your child's needs from newborn to toddler.

1. Locate the recline adjustment mechanism, typically on the back of the seat.
2. Press the button or lever and gently push or pull the seat to your desired recline angle.
3. Ensure the seat locks securely into one of the three positions. The lie-flat position is ideal for newborns, while the intermediate position is perfect for starting food diversification.

Du nouveau-né au tout petit



Image 5.1: Illustration of the Mallow high chair's adjustable recline feature.



Image 5.2: A baby demonstrating the comfortable reclined position of the high chair.

5.2 Folding for Storage

The Mallow high chair features an ultra-compact and quick folding system for convenient storage.

1. Remove the tray if it is attached.
2. Locate the folding mechanism (usually a button or lever on the side or back of the frame).
3. Activate the mechanism and push the top of the chair downwards while bringing the legs together until it folds flat.
4. Ensure the chair is securely locked in its folded position.

Pliage ultra-compact & légère (5.6 kg)



Image 5.3: The Mallow high chair demonstrating its ultra-compact folded form, ideal for small spaces.



Image 5.4: An adult easily folding the high chair, highlighting its portability and ease of handling.

6. MAINTENANCE AND CLEANING

Maintaining your Bebeconfort Mallow high chair is simple, thanks to its easy-to-clean design.

6.1 Seat Cover Cleaning

The waterproof PU leather cover can be wiped clean in seconds. For deeper cleaning:

- Remove the seat cover from the frame.
- The cover is machine washable at 30C. Please refer to the care label for specific instructions.
- Allow the cover to air dry completely before reattaching it to the high chair frame.

Nettoyage facile



Image 6.1: The high chair's seat material, designed for quick and easy cleaning after meals.

6.2 Frame and Tray Cleaning

- Wipe the frame and tray with a damp cloth and mild soap.
- Do not use abrasive cleaners or solvents.
- Dry thoroughly after cleaning.

7. TROUBLESHOOTING

If you encounter any issues with your Bebeconfort Mallow high chair, please refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
High chair does not lock into open position.	Not fully extended.	Ensure legs are pulled apart completely until a click is heard, indicating it's locked.
Tray is loose or detaches easily.	Not properly secured.	Push the tray firmly onto the armrests until it clicks into place. Check for any obstructions.
Difficulty folding the high chair.	Folding mechanism not fully engaged or obstruction.	Ensure the folding mechanism is fully activated. Check for any items or fabric obstructing the folding path.
Harness is too tight or too loose.	Harness not adjusted correctly.	Adjust the harness straps using the buckles to ensure a snug but comfortable fit for your child.

8. SPECIFICATIONS

Feature	Detail
Model Number	2843116210
Age Range	0 - 3 years
Weight Capacity	Up to 15 kg
Materials	Frame: PP, ABS, PA+15GF, Steel; Outside: Polyurethane; Filling: Polyurethane; Lining: Polyester
Unfolded Dimensions (L x W x H)	84 x 60 x 89 cm
Folded Dimensions (L x W x H)	20 x 60 x 89 cm
Product Weight	5.6 kg (approx. 6.19 kg packaged)
Recline Positions	3 (including lie-flat for newborns)
Harness	5-point adjustable harness

Dimensions du produit Déplié



Image 8.1: Unfolded dimensions of the high chair (99 cm height, 60 cm width, 84 cm depth).

Dimensions du produit plié

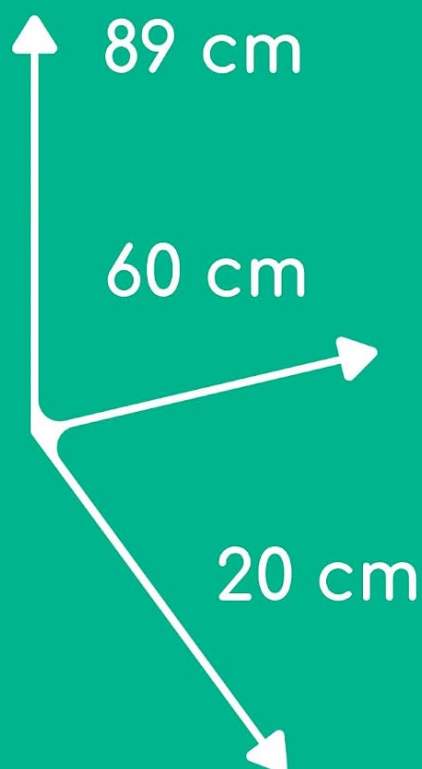


Image 8.2: Folded dimensions of the high chair (89 cm height, 60 cm width, 20 cm depth).

9. WARRANTY AND SUPPORT

Bebeconfort products are manufactured to the highest quality standards. For warranty information, product registration, or any support inquiries, please visit the official Bebeconfort website or contact their customer service department. Keep your proof of purchase for warranty claims.

For further assistance, please refer to the contact information provided with your purchase or visit the Bebeconfort brand store on Amazon: [Bebeconfort Amazon Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question