

[Manuals.plus](#) /

› [DCCStands](#) /

› DCCStands Payment Pouch II User Manual for PAX A920 Pro and Mobile Devices

DCCStands CASE-UNIVERSAL-V2-B

DCCStands Payment Pouch II User Manual

For PAX A920 Pro and Mobile Devices (Model: CASE-UNIVERSAL-V2-B)

1. INTRODUCTION

The DCCStands Payment Pouch II is a heavy-duty, versatile carrying solution designed to securely hold your PAX A920 Pro payment terminal or other mobile devices. It offers protection and convenient access, making it ideal for professionals in various service and warehouse environments. This manual provides essential information for the proper setup, usage, and maintenance of your payment pouch.



Figure 1: DCCStands Payment Pouch II with adjustable sling/waistbelt.

2. PRODUCT FEATURES

The Payment Pouch II is engineered with several features to enhance usability and device protection:

- **Heavy-Duty Construction:** Designed for durability in demanding work environments.
- **Device Protection:** Includes internal cushioning to safeguard your device from drops and impacts.
- **Accessory Pockets:** Features convenient pockets on both sides for storing pens, markers, box cutters, or other small tools.
- **Flexible Carrying Options:** Can be worn as a sling or waistbelt for adaptable usage.
- **Universal Size:** Accommodates a wide range of mobile devices, including the PAX A920 Pro.

3. SETUP AND ASSEMBLY

The Payment Pouch II comes with a detachable and adjustable sling/waistbelt for customized carrying.

1. **Unpack Components:** Carefully remove the payment pouch and the adjustable strap from the packaging.

2. **Attach the Strap:** Locate the two attachment points on the top corners of the pouch. Connect the buckles of the adjustable strap to these points. Ensure the buckles are securely fastened.



Figure 2: Payment Pouch II and its detachable sling/waistbelt.

3. **Adjust for Fit:** Adjust the length of the strap to comfortably fit your body, whether worn over the shoulder as a sling or around the waist as a belt. Ensure the pouch hangs at an accessible and secure position.

4. OPERATING INSTRUCTIONS

Using your Payment Pouch II is straightforward:

1. **Insert Device:** Gently slide your PAX A920 Pro or other mobile device into the main compartment of the pouch. The internal cushioning will help secure and protect it.



Figure 3: Mobile device securely placed inside the pouch.

2. **Utilize Accessory Pockets:** Place pens, styluses, or other small tools into the side accessory pockets for quick access.



Figure 4: Accessory pocket holding a writing instrument.

3. **Secure Carrying:** Ensure the pouch is worn comfortably and securely to prevent accidental drops or loss of your device.

5. MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your Payment Pouch II:

- **Cleaning:** Wipe the exterior with a damp cloth and mild soap if necessary. Avoid harsh chemicals or abrasive cleaners.
- **Drying:** Allow the pouch to air dry completely before re-inserting any electronic devices.
- **Storage:** Store in a cool, dry place when not in use.
- **Inspection:** Periodically check the strap and buckles for any signs of wear or damage. Replace if necessary to ensure secure carrying.

6. TROUBLESHOOTING

If you encounter any issues with your Payment Pouch II, consider the following:

- **Device Not Fitting:** Ensure your device dimensions are compatible with the pouch's universal size. Avoid forcing oversized devices.
- **Strap Discomfort:** Adjust the strap length and position to find a comfortable and balanced fit. Experiment with sling or waistbelt configurations.
- **Pouch Instability:** Ensure the strap buckles are fully engaged and the strap is tightened appropriately for your activity level.

7. SPECIFICATIONS

Feature	Detail
Model Number	CASE-UNIVERSAL-V2-B
Package Dimensions	8 x 4 x 2 inches
Item Weight	4 ounces
Material	Durable fabric with internal cushioning
Carrying Style	Sling / Waistbelt (adjustable)

8. WARRANTY AND SUPPORT

For information regarding warranty coverage or to obtain support for your DCCStands Payment Pouch II, please refer to the manufacturer's official website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Discount Credit Card Supply

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question