



[Manuals.plus](#) /

› [Hamilton](#) /

› Hamilton 0.9 Cu ft Countertop Microwave Oven, 900 Watts, Stainless Steel Instruction Manual

Hamilton NA767

Hamilton 0.9 Cu ft Countertop Microwave Oven, 900 Watts, Stainless Steel Instruction Manual

Model: NA767

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your Hamilton 0.9 Cu ft 900-Watt Stainless Steel Countertop Microwave Oven. Please read all instructions carefully before using the appliance and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not allow children to use the microwave without close supervision.
- Do not heat sealed containers, as they may explode.
- Use only microwave-safe cookware.
- Do not operate the oven if the door is damaged or if the seals are broken.
- Ensure proper ventilation around the appliance.
- Always use caution when removing hot items to prevent burns.

For detailed safety information, refer to the full safety guidelines provided with your product.

PACKAGE CONTENTS

- Hamilton 0.9 Cu ft Countertop Microwave Oven
- Glass Turntable Plate
- Roller Ring
- Instruction Manual



Image: Interior view of the microwave showing the glass turntable and roller ring.

SETUP

1. **Unpacking:** Carefully remove the microwave oven and all packing materials from the carton.
2. **Placement:** Place the microwave on a flat, stable surface, such as a countertop. Ensure there is adequate space around the unit for ventilation (at least 4 inches on the top, sides, and rear). Do not block any ventilation openings.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Image: Hamilton microwave placed on a kitchen countertop.

OPERATING INSTRUCTIONS

Control Panel Overview

The microwave features an LED display and a touch-pad control panel for easy operation.



Image: Detailed view of the microwave's control panel.

Basic Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the microwave door securely.
3. Enter the desired cooking time using the number pad.
4. Press the "START/+30SEC" button to begin cooking.

Express Cook

For quick cooking, press any number from 1 to 6 for instant cooking of 1 to 6 minutes at full power. Each press adds 1 minute.

Auto-Cook Menus

The microwave includes 6 auto-cook menus for common items: Popcorn, Potato, Pizza, Beverage, Frozen Dinner, and Reheat.

1. Select the desired auto-cook menu button.
2. Follow the display prompts to select quantity or weight if applicable.
3. Press "START/+30SEC" to begin.

Defrost

The microwave offers both Time Defrost and Weight Defrost functions.

- **Weight Defrost:** Press "WEIGHT DEFROST", enter the food's weight, then press "START/+30SEC".

- **Time Defrost:** Press "TIME DEFROST", enter the desired defrosting time, then press "START/+30SEC".

Child Safety Lock

To activate the child safety lock, press and hold the "STOP/CANCEL" button for 3 seconds. The display will show "LOC". To deactivate, press and hold "STOP/CANCEL" again for 3 seconds.

Kitchen Timer and Clock

The microwave includes a kitchen timer and a clock function. Refer to the full manual for detailed instructions on setting these features.

Your browser does not support the video tag.

Video: Demonstration of setting up and testing a Hamilton Beach microwave, including basic operation.

MAINTENANCE AND CLEANING

- **Interior:** Clean the interior of the oven regularly with a mild detergent and a soft cloth. Remove the glass turntable and roller ring for separate cleaning.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- **Door Seals:** Keep the door seals clean to ensure proper operation and safety.



Image: Clean interior of the microwave with the glass turntable.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven not starting	Door not closed properly; Power cord unplugged; Fuse blown or circuit breaker tripped.	Close door firmly; Check power cord connection; Check household fuse/circuit breaker.
Food not heating	Incorrect cooking time/power level; Microwave-safe cookware not used.	Adjust time/power; Use appropriate cookware.

Problem	Possible Cause	Solution
Turntable not rotating	Turntable not placed correctly; Obstruction.	Re-position turntable; Remove any obstructions.

SPECIFICATIONS

- **Model Number:** NA767
- **Capacity:** 0.9 Cubic Feet
- **Wattage:** 900 Watts
- **Color:** Black/Stainless
- **Installation Type:** Countertop
- **Product Dimensions:** 18.98" W x 14.17" D x 10.63" H
- **Item Weight:** 30 pounds
- **Inner Material:** Stainless Steel
- **Special Features:** Child Safety Lock, 10 Power Levels, 6 Auto-Cook Menus, Kitchen Timer, Clock, Time and Weight Defrost



Image: Side view of the microwave, highlighting its compact design.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included in your product packaging or contact Hamilton customer service directly.

Protection Plans: Extended protection plans are available for purchase. Please refer to your retailer for details on 3-Year, 4-Year, or Complete Protect plans.