

Beko BDFN15421B

Beko BDFN15421B Full-Size Freestanding Dishwasher User Manual

Model: BDFN15421B

INTRODUCTION

Thank you for choosing the Beko BDFN15421B Full-Size Freestanding Dishwasher. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions carefully before using your dishwasher and keep them for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is intended for household use only.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged or malfunctioning. Contact authorized service personnel.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Sharp items should be loaded with their handles up to prevent injury.
- Do not open the door during operation, as hot water may spray out.
- Disconnect the power supply before performing any maintenance or cleaning.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage during transit. Report any damage to your retailer immediately.

Placement

Place the dishwasher on a flat, stable surface. Ensure there is adequate space for door opening and proper ventilation. The

dimensions of the dishwasher are 85 cm (H) x 59.8 cm (W) x 60 cm (D).



Figure 1: Exterior view of the Beko BDFN15421B dishwasher.

Water and Electrical Connection

Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa. Ensure the drain hose is properly connected to a suitable drain. The dishwasher requires a 240V electrical supply. All connections should be performed by a qualified technician in accordance with local codes and regulations.

Filling Salt and Rinse Aid

Before first use, fill the salt dispenser with dishwasher salt and the rinse aid dispenser with rinse aid. Refer to the indicators on the appliance for optimal levels. These help prevent limescale and ensure streak-free drying.

OPERATING INSTRUCTIONS

Loading Dishes

Scrape off large food particles before loading. Place dishes securely in the baskets, ensuring water spray can reach all surfaces. Avoid overcrowding. The dishwasher has a 14 place setting capacity.



Figure 2: Interior view of the dishwasher with dishes loaded in both baskets.

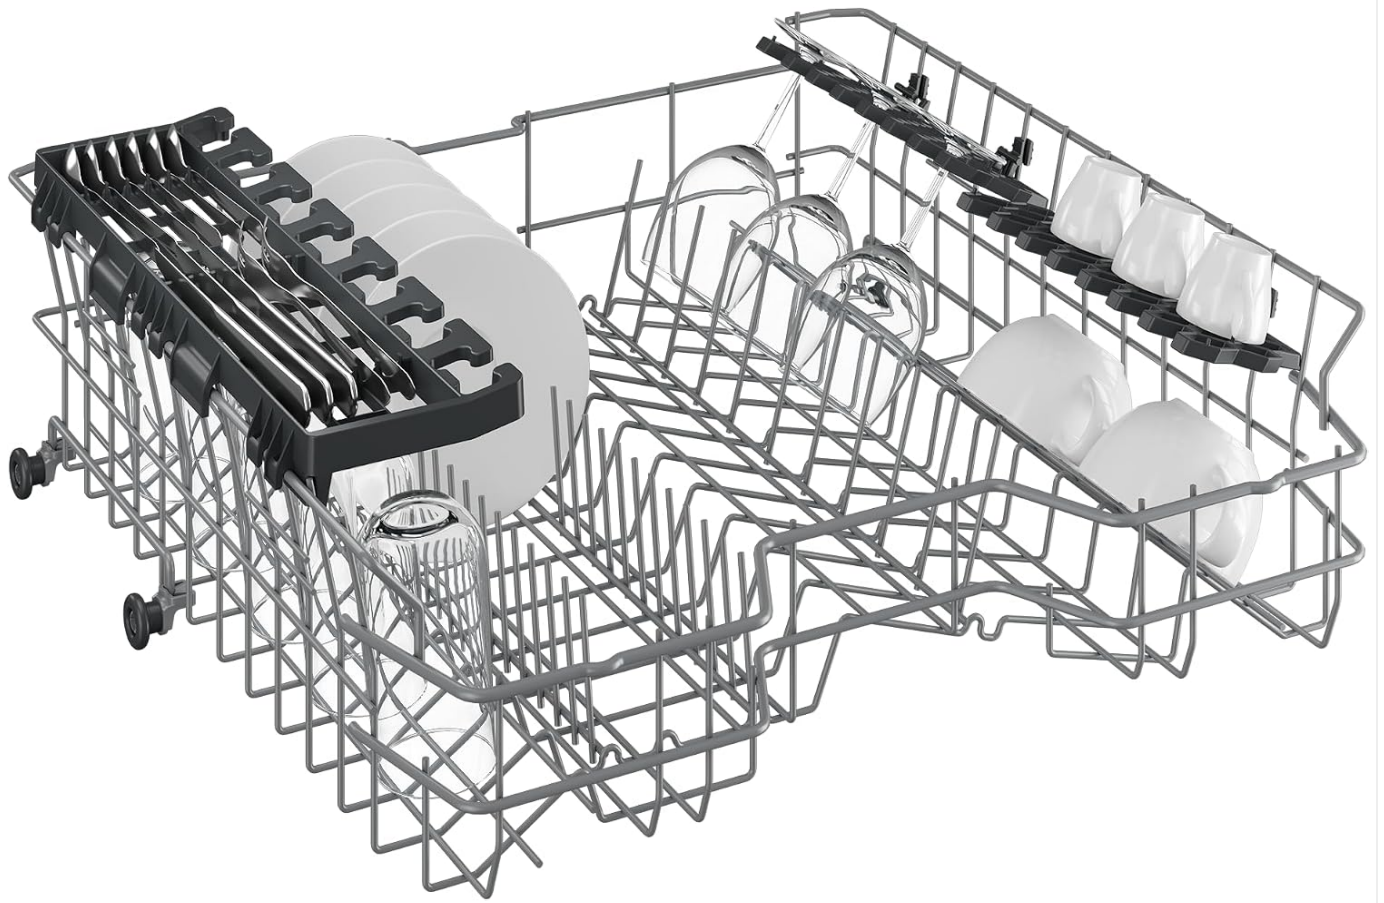


Figure 3: Close-up of the adjustable upper basket, suitable for glasses and smaller items.

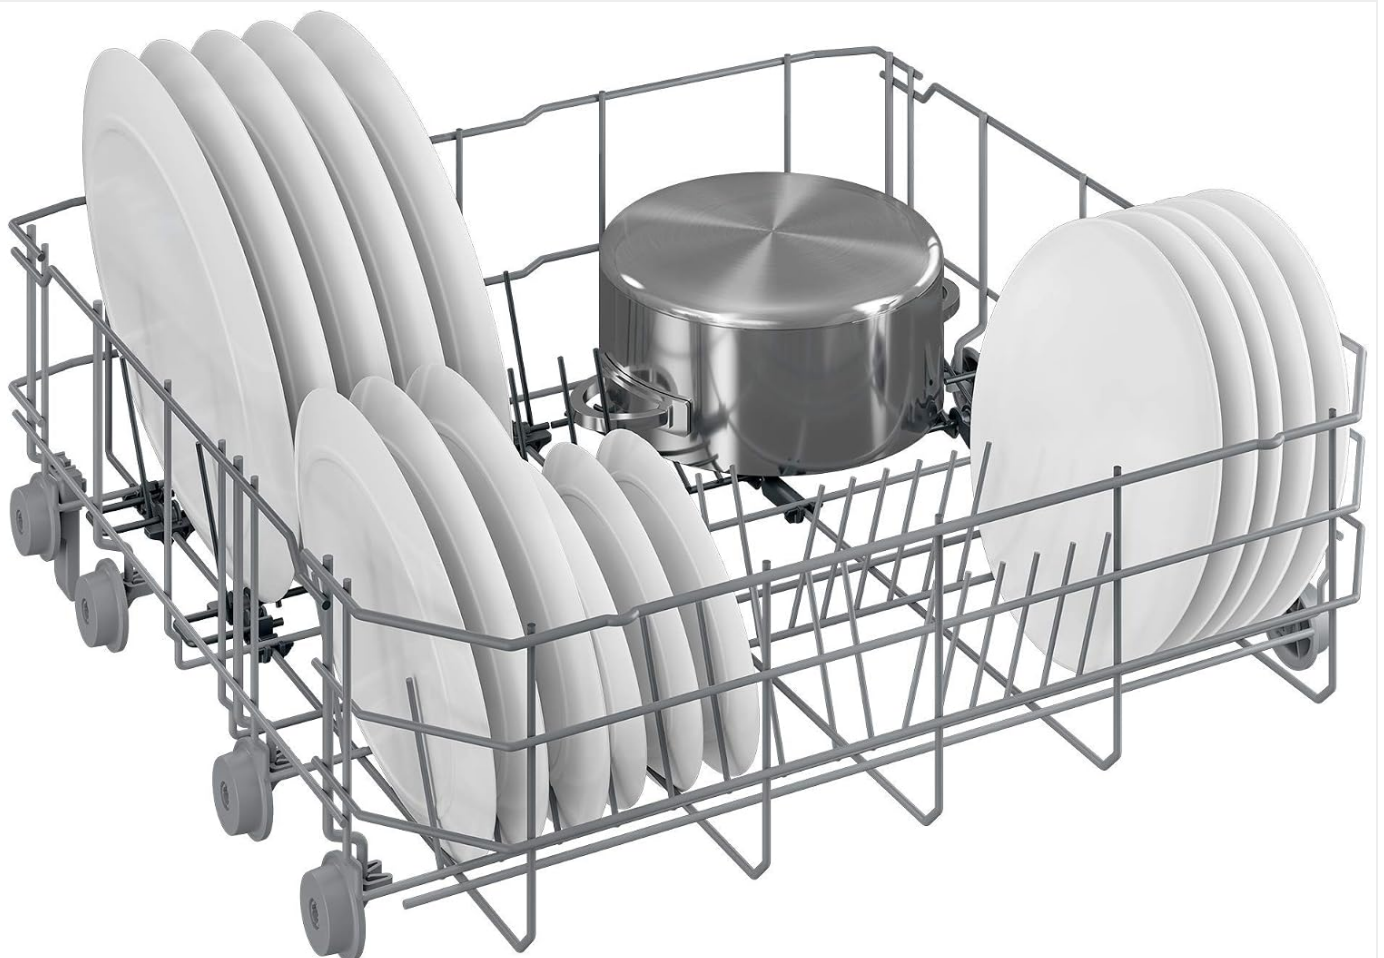


Figure 4: Close-up of the lower basket, ideal for plates and larger items like pots.

Adding Detergent

Open the detergent dispenser and add the appropriate amount of dishwasher detergent. Close the dispenser cover firmly. For tablet detergents, place the tablet in the designated compartment.



Figure 5: The sliding detergent dispenser for easy loading.

Selecting a Program and Starting a Cycle

Turn on the dishwasher. Use the control panel (touch controls with LED display) to select a wash program suitable for your load. Available cycle options include Normal, Intensive, and Delicate. You can also use the flexible half-load function for smaller loads or the three-level time delay function to start the cycle later. Press the Start button to begin the cycle.

MAINTENANCE AND CLEANING

Cleaning Filters

Regularly clean the filter system to ensure optimal washing performance. Twist and remove the coarse filter, then separate the

fine filter. Rinse both under running water to remove any food debris. Reassemble and secure them back in place.



Figure 6: Close-up of the dishwasher's filter system and lower spray arm.

Cleaning Spray Arms

Check the spray arm nozzles regularly for blockages. If necessary, remove the spray arms and clean the holes with a thin object like a toothpick. Rinse thoroughly and reattach.

Exterior and Interior Cleaning

Wipe the exterior of the dishwasher with a damp cloth. For the interior, periodically run a dishwasher cleaning cycle with a specialized cleaner. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

Before contacting service, check the following common issues:

- **Dishwasher does not start:** Check power supply, door closure, and selected program.

- **Dishes are not clean:** Ensure proper loading, sufficient detergent, clean filters, and unobstructed spray arms.
- **Water remains in the dishwasher:** Check drain hose for kinks or blockages, and ensure filters are clean.
- **Excessive noise:** Check for items obstructing spray arms or improper loading.
- **Error codes on LED display:** Refer to the specific error code section in the full manual (if available) or contact customer support.

PRODUCT SPECIFICATIONS

Brand Name	Beko
Model Number	BDFN15421B
Installation Type	Freestanding
Product Dimensions (Depth x Width x Height)	60 cm x 59.8 cm x 85 cm
Capacity	14 Place Settings
Special Features	Time Delay, LED Display, Flexible Half Load, Glass Care System, Tablet Function
Color	Black
Control Type	Touch
Material	Stainless Steel
Noise Level	49 dB
Included Components	Sliding Cutlery Basket, Knife Accessory
Voltage	240 Volts
Cycle Options	Normal, Intensive, Delicate
Display Type	LED
Energy Consumption (Annual)	266.25 kWh
Water Consumption (per cycle)	12.9 Liters (3.41 Gallons)
Item Weight	42.1 kg (20100 grams)
Interior Material	Stainless Steel
Dishwasher Basket Material	Stainless Steel
Dishwasher Rack Material	Composite Plastic or Plastic and Metal

WARRANTY AND SUPPORT

Warranty Information

This Beko BDFN15421B dishwasher comes with a **5-year warranty**. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal household use. For full terms and conditions, refer to the warranty card

included with your appliance or visit the official Beko website.

Customer Support

For technical assistance, spare parts, or service requests, please contact Beko customer support. You can find contact details on the official Beko website or in your appliance documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question