

## Dghrti TAB50

# Dghrti TAB50 11-inch Android 14 Tablet User Manual

## 1. INTRODUCTION

---

Thank you for choosing the Dghrti TAB50 Android 14 Tablet. This manual provides essential information and instructions to help you set up, operate, and maintain your device. Please read this manual thoroughly before using your tablet to ensure proper functionality and to prevent damage.

The Dghrti TAB50 is an 11-inch tablet featuring the Android 14 operating system, an Octa-Core processor, 24GB RAM, 256GB ROM (expandable up to 2TB), an 8000 mAh battery, and support for Widevine L1 for high-quality streaming. It is designed for a versatile user experience, from entertainment to productivity.

## 2. SAFETY INFORMATION

---

- Do not expose the tablet to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the tablet to strong impacts.
- Use only Dghrti-approved chargers and accessories.
- Do not attempt to disassemble or repair the tablet yourself. Contact customer support for assistance.
- Keep the tablet away from water and other liquids.
- Dispose of the tablet and its battery responsibly according to local regulations.

## 3. PACKAGE CONTENTS

---

Please check the package for the following items:

- Dghrti TAB50 Tablet
- USB Type-C Cable
- Power Adapter
- User Manual (this document)

## 4. DEVICE OVERVIEW

---

The Dghrti TAB50 features an 11-inch display, dual cameras, and various ports for connectivity. Familiarize yourself

with the tablet's physical components.

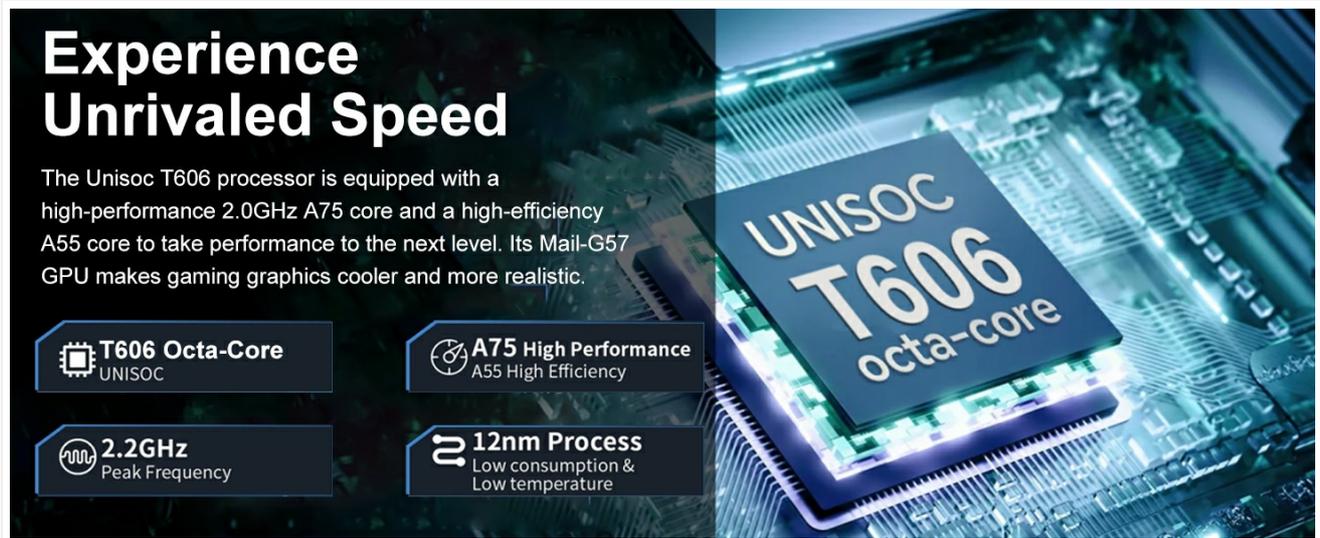


Figure 4.1: Dghrti TAB50 Tablet Overview. This image highlights key features including the 11-inch display, Octa-Core 2.0GHz processor, 5MP front and 13MP rear cameras, ultra-thin profile (0.7mm, 514g), SD card slot supporting up to 2TB, Android 14 OS, stereo surround sound, Widevine L1 support, 8000 mAh battery, 24GB RAM (8GB physical + 16GB virtual), 256GB ROM, GPS, and Bluetooth 5.0.

## 4.1. Ports and Buttons

- **Power Button:** Press and hold to turn on/off or restart. Press briefly to wake/sleep the screen.
- **Volume Buttons:** Adjust media volume and notification sounds.
- **USB Type-C Port:** For charging and data transfer.
- **MicroSD Card Slot:** Insert a MicroSD card for expandable storage (up to 2TB).
- **Front Camera (5MP):** For video calls and selfies.
- **Rear Camera (13MP):** For capturing photos and videos.
- **Speakers:** Dual stereo speakers for immersive audio.

## 5. SETUP

---

### 5.1. Initial Power On

1. Press and hold the Power button until the Dghrti logo appears.
2. Follow the on-screen prompts to select your language, region, and accept the terms and conditions.

### 5.2. Connecting to Wi-Fi

1. During initial setup, select your Wi-Fi network from the list.
2. Enter the Wi-Fi password if prompted.
3. To connect later, go to **Settings > Network & internet > Wi-Fi**, turn Wi-Fi on, and select your network.

### 5.3. Google Account Setup

Sign in with your Google account to access Google Play Store, Gmail, and other Google services. If you don't have an account, you can create one during this step.

### 5.4. Setting Up Face ID

1. Go to **Settings > Security & privacy > Device unlock > Face unlock**
2. Follow the on-screen instructions to register your face. Ensure you are in a well-lit area.

## 5.5. Inserting a MicroSD Card

1. Locate the MicroSD card slot on the side of the tablet.
2. Gently insert the MicroSD card into the slot until it clicks into place.
3. The tablet will detect the card, and you can format it for use as portable or internal storage.

## 6. OPERATING YOUR TABLET

### 6.1. Basic Navigation

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through screens or lists.
- **Pinch-to-Zoom:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move icons.

### 6.2. Android 14 Features

The Dghrti TAB50 runs on Android 14, offering enhanced privacy controls, improved user interface customization, and better system performance.



Figure 6.1: Android 14 and Widevine L1 Support. This image illustrates the benefits of Android 14, such as strengthened privacy protection, enhanced personalization options, improved user experience, and better system performance. It also highlights Widevine L1 support, enabling secure access to HD content from popular streaming platforms like Netflix, Prime Video, YouTube, and Hulu.

- **Privacy Dashboard:** Monitor and manage app permissions.
- **Customization:** Personalize your tablet's interface with themes and widgets.
- **Split-Screen:** Use two apps simultaneously by dragging an app to the side of the screen.

### 6.3. Connecting Bluetooth Devices

1. Go to **Settings > Connected devices > Connection preferences > Bluetooth**
2. Turn Bluetooth on.
3. Select your device from the list of available devices and follow pairing instructions.

### 6.4. Using the Cameras

The tablet is equipped with a 5MP front camera and a 13MP rear camera.

1. Open the Camera app.
2. Tap the shutter button to take a photo.
3. Switch between photo and video modes as needed.
4. Use the front camera for video calls and selfies.

## 6.5. Media Playback and Widevine L1

The Dghrti TAB50 supports Widevine L1, allowing you to stream high-definition content from popular services like Netflix, YouTube, Hulu, and Amazon Prime Video. The dual stereo speakers provide an immersive audio experience.



Figure 6.2: 11-inch FHD Screen. This image highlights the tablet's 11-inch FHD IPS display, featuring a full-screen design, high resolution, and anti-blue light protection for comfortable viewing during extended use.

## 7. MAINTENANCE

---

### 7.1. Charging the Battery

The Dghrti TAB50 is equipped with an 8000 mAh battery. To charge:

1. Connect the USB Type-C cable to the tablet's charging port.
2. Connect the other end of the cable to the power adapter.
3. Plug the power adapter into a wall outlet.
4. A charging indicator will appear on the screen.

## Experience Mega-Entertainment and be More Productive

 11-Inch Screen

 1280\*800 HD

 Screen-Ratio Big Screen



Figure 7.1: Processor and Battery. This image details the powerful T606 Octa-Core Unisoc CPU running at 2.0GHz, featuring A75 high-performance cores and a 12nm process for low heat and high energy efficiency. It also shows the 8000 mAh high-capacity battery and the universal Type-C charging port.

### 7.2. Cleaning the Device

Use a soft, lint-free cloth to clean the tablet's screen and body. Do not use abrasive cleaners or solvents.

### 7.3. Software Updates

Regularly check for software updates to ensure your tablet has the latest features and security patches.

1. Go to **Settings > System > System update**
2. Follow the on-screen instructions to download and install any available updates.

### 7.4. Storage Management

The tablet comes with 256GB of internal storage, expandable up to 2TB with a MicroSD card. Manage your storage to maintain optimal performance.



Figure 7.2: Large Capacity Memory. This image details the tablet's memory configuration, including 24GB RAM (8GB physical + 16GB virtual), 256GB ROM, support for up to 2TB TF card expansion, and UFS 2.2 Flash storage for fast data access.

- Go to **Settings > Storage** to view storage usage and free up space.
- Uninstall unused apps or move large files to your MicroSD card.

## 8. TROUBLESHOOTING

---

### 8.1. Device Not Turning On

- Ensure the battery is charged. Connect the tablet to the charger for at least 30 minutes.
- Press and hold the Power button for 10-15 seconds to force a restart.

### 8.2. Wi-Fi Connection Issues

- Restart your Wi-Fi router.
- Forget the network in **Settings > Network & internet > Wi-Fi** and reconnect.
- Ensure you are within range of the Wi-Fi signal.

### 8.3. Slow Performance

- Close unnecessary background apps.
- Clear cache for frequently used apps (**Settings > Apps > [App Name] > Storage & cache > Clear cache**).
- Ensure sufficient free storage space.
- Restart the tablet.

### 8.4. Factory Reset

If issues persist, you may need to perform a factory reset. This will erase all data on your tablet, so back up important information first.

1. Go to **Settings > System > Reset options > Erase all data (factory reset)**
2. Follow the on-screen instructions to confirm the reset.

## 9. SPECIFICATIONS

---

Feature	Specification
Brand	Dghrti
Model	TAB50
Operating System	Android 14
Processor	Unisoc Octa-Core, 2 GHz
RAM	24 GB (8GB physical + 16GB virtual)
Internal Storage	256 GB
Expandable Storage	MicroSD (TF) up to 2 TB
Display	11-inch FHD IPS Touch Screen (1280 x 800 pixels)
Rear Camera	13 MP
Front Camera	5 MP
Battery	8000 mAh
Wireless Connectivity	Dual-band Wi-Fi (802.11ax, 5G), Bluetooth 5.0

Feature	Specification
Navigation	AGPS
Special Features	Face Recognition, Widevine L1, Stereo Speakers, TÜV Low Brightness Certification
Weight	1.22 Kilograms

## 10. SUPPORT

---

If you encounter any problems or have questions regarding your Dghrti TAB50 tablet, please contact our professional technical support team. Refer to your product packaging or purchase documentation for contact details.