

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [LG](#) /

> [LG XBOOM RNC7 Wireless Party Speaker User Manual](#)

## LG RNC7

# LG XBOOM RNC7 Wireless Party Speaker User Manual

## 1. PRODUCT OVERVIEW

---

The LG XBOOM RNC7 is a wireless party speaker designed for home entertainment and social gatherings. It features a powerful sound output suitable for medium to large indoor spaces, offering robust bass and clear audio reproduction.

Key features include:

- Integrated 8-inch woofer for enhanced bass performance.
- Dynamic LED lighting effects that synchronize with music.
- Dual microphone ports for karaoke functionality.
- Karaoke Star and DJ Mode for interactive entertainment.
- Bluetooth wireless connectivity for seamless audio streaming.



Figure 1: Front view of the LG XBOOM RNC7 Wireless Party Speaker.

## 2. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- LG XBOOM RNC7 Wireless Party Speaker
- Power Cable
- User Manual

## 3. SAFETY INFORMATION

---

Read all safety instructions before operating the device. Keep this manual for future reference.

- Do not expose the unit to water or moisture.
- Ensure proper ventilation to prevent overheating.
- Use only the provided power cable.
- Avoid placing the speaker in direct sunlight or near heat sources.
- Do not attempt to disassemble or repair the unit yourself. Contact qualified service personnel.

## 4. PRODUCT COMPONENTS AND CONTROLS

---

### 4.1. Front Panel

The front panel features the main woofer and LED lighting elements.



*Figure 2: Front view of the speaker highlighting the woofer and lighting.*

### 4.2. Top Panel Controls

The top panel provides access to all primary controls for power, playback, sound adjustments, and special features.



Figure 3: Detailed view of the top control panel.

- **Power Button:** Turns the unit on or off.
- **USB Ports (USB 1, USB 2):** For connecting USB storage devices.
- **Function (F) Button:** Selects input source (Bluetooth, USB, AUX, etc.).
- **Lighting Button:** Changes or disables lighting effects.
- **Twin Button:** Pairs with another compatible LG XBOOM speaker for stereo sound.
- **Volume Control:** Adjusts the master volume.
- **MIC/GUITAR Volume:** Adjusts microphone or guitar input volume.
- **Play/Pause, Skip Buttons:** Standard playback controls.
- **Special EQ / Bass Blast:** Activates or adjusts bass enhancement.
- **Search / OK / User EQ:** Navigation and selection for settings, and custom equalizer.
- **MIC ECHO:** Adds echo effect to microphone input.
- **VOCAL EFFECTS:** Applies various vocal effects.
- **KEY CHANGER (b/#):** Adjusts the key of the music for karaoke.
- **VOICE CANCELLER:** Reduces vocals in a song for karaoke.
- **EQ:** Selects preset equalizer modes.
- **DJ PAD (CLUB, DRUM, USER):** Activates DJ sound effects.

## 5. SETUP

---

### 5.1. Power Connection

1. Connect the power cable to the AC input on the rear of the speaker.
2. Plug the other end of the power cable into a suitable wall outlet (120 Volts).

### 5.2. Bluetooth Pairing

1. Press the **Power** button to turn on the speaker.
2. Press the **Function (F)** button repeatedly until "BT" or "Bluetooth" appears on the display. The Bluetooth indicator will flash.
3. On your smartphone, tablet, or other compatible device, enable Bluetooth and search for available devices.
4. Select "LG XBOOM RNC7" from the list of devices.
5. Once connected, the Bluetooth indicator on the speaker will stop flashing and remain solid.

## 6. OPERATING INSTRUCTIONS

---

### 6.1. Basic Playback

- **Power On/Off:** Press the **Power** button.
- **Select Input:** Press the **Function (F)** button to cycle through input sources (Bluetooth, USB, AUX, etc.).
- **Volume Adjustment:** Rotate the **Volume** knob clockwise to increase, counter-clockwise to decrease.
- **Play/Pause:** Press the ►■ button.
- **Skip Track:** Press the ◀◀ or ▶▶ buttons.

### 6.2. Sound Effects

- **Bass Blast:** Press the **SPECIAL EQ / BASS BLAST** button to activate or adjust the bass enhancement.
- **Equalizer (EQ):** Press the **EQ** button to cycle through various preset sound modes (e.g., Standard, Pop, Rock). Use the **USER EQ** option to customize settings.

### 6.3. Lighting Effects

- Press the **LIGHTING** button to change the LED lighting mode. Repeated presses will cycle through available patterns and colors.
- To turn off the lighting, press the **LIGHTING** button until the lights are off.

### 6.4. Karaoke Features

- **Microphone/Guitar Connection:** Connect a microphone or guitar to the designated input ports. Adjust the volume using the **MIC/GUITAR VOL** controls.
- **Voice Canceller:** Press the **VOICE CANCELLER** button to reduce the vocal track of a song, making it suitable for singing along.
- **Key Changer:** Use the **KEY CHANGER (b/#)** buttons to adjust the musical key of the song to match your vocal range.
- **Mic Echo:** Press the **MIC ECHO** button to add an echo effect to the microphone input.
- **Vocal Effects:** Press the **VOCAL EFFECTS** button to apply various vocal effects.

## 6.5. DJ Pad

- Press the **DJ PAD** buttons (1/CLUB, 2/DRUM, 3/USER) to activate pre-set DJ sound effects.
- The **USER** option allows for custom sound effects to be assigned.

## 7. MAINTENANCE

### 7.1. Cleaning

- Wipe the exterior of the speaker with a soft, dry cloth.
- Do not use liquid cleaners or abrasive materials.

### 7.2. Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, disconnect the power cable.

## 8. TROUBLESHOOTING

If you encounter issues with your LG XBOOM RNC7 speaker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cable not connected securely.	Check power cable connection to both the speaker and the wall outlet.
No sound	Volume is too low or muted. Incorrect input source selected.	Increase volume. Press the <b>Function (F)</b> button to select the correct input source.
Bluetooth pairing fails	Device is out of range. Bluetooth is not enabled on the source device.	Ensure devices are within 10 meters. Enable Bluetooth on your device and try pairing again.
Distorted sound	Volume is too high. Audio source quality is poor.	Reduce volume. Try a different audio source or file.

## 9. SPECIFICATIONS

Feature	Specification
Model Name	RNC7
Brand	LG
Speaker Type	Woofer
Speaker Size	8 Inches (Woofer Diameter)
Speaker Maximum Output Power	700 Watts
Wireless Communication Technology	Bluetooth

Feature	Specification
Connectivity Technology	RCA, Bluetooth
Input Voltage	120 Volts
Product Dimensions	32.4"D x 15.9"W x 17.2"H
Item Weight	42.25 Pounds
Material	Plastic
Color	Black
Control Method	Touch
Recommended Uses For Product	Indoor
UPC	195174094396

## 10. WARRANTY AND SUPPORT

---

This product comes with a limited warranty provided by LG. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, service, or warranty claims, please contact LG customer service or visit the official LG support website.

Optional protection plans may be available for purchase, offering extended coverage beyond the standard manufacturer's warranty. These plans typically cover:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Monthly Complete Protect Plan

The return policy for this product allows for a refund or replacement within 30 days of purchase, subject to retailer terms.