

[Manuals.plus](#) /

- › [Turnstile Audio](#) /
- › Turnstile Audio SS6-SB Height-Adjustable Speaker Stand User Manual

Turnstile Audio SS6-SB

Turnstile Audio SS6-SB Height-Adjustable Speaker Stand User Manual

Model: SS6-SB

1. INTRODUCTION

This manual provides instructions for the safe and proper assembly, operation, and maintenance of your Turnstile Audio SS6-SB Height-Adjustable Speaker Stand. Please read this manual thoroughly before use and retain it for future reference.

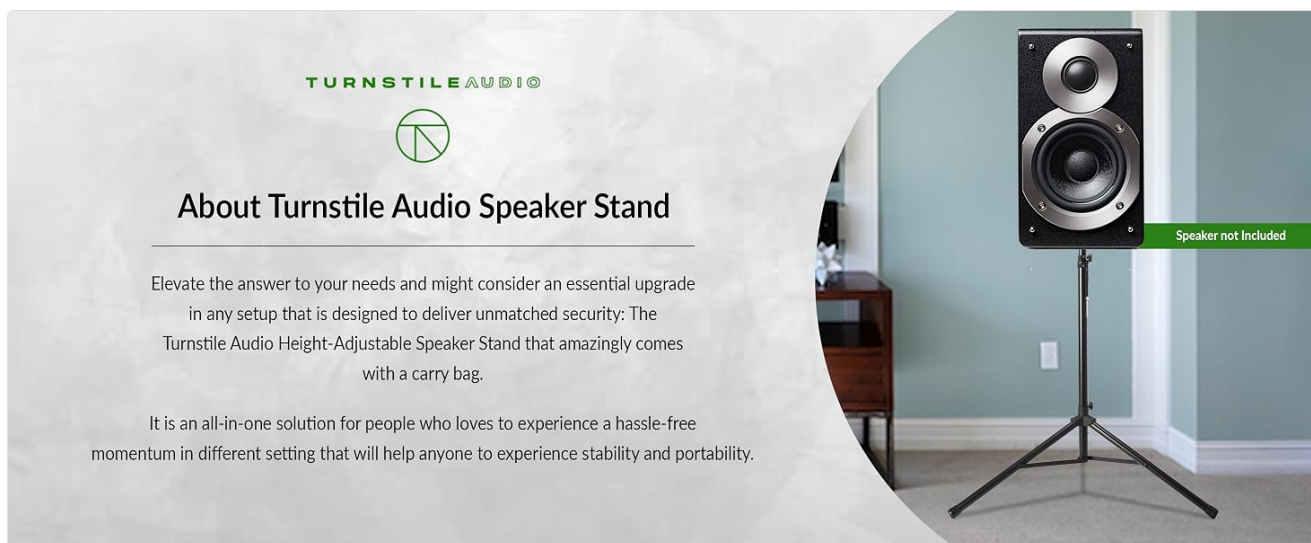 


Image 1.1: The Turnstile Audio Height-Adjustable Speaker Stand in use. Note: Speaker is not included.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following precautions:

- **Weight Capacity:** Do not exceed the maximum load capacity of 110 lbs (50 kg). Overloading can cause instability and damage.
- **Stability:** Always ensure the stand's legs are fully extended and locked into position on a flat, stable surface before placing a speaker on it.

- **Adjustments:** When adjusting the height, ensure the safety pin is properly inserted and the locking knob is securely tightened.
- **Placement:** Position the stand away from high-traffic areas to prevent accidental knocking.
- **Children and Pets:** Keep children and pets away from the stand, especially during setup and adjustment.
- **Inspection:** Regularly inspect the stand for any signs of wear, damage, or loose components. Do not use if damaged.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Turnstile Audio Height-Adjustable Speaker Stand
- 1 x Carry Bag

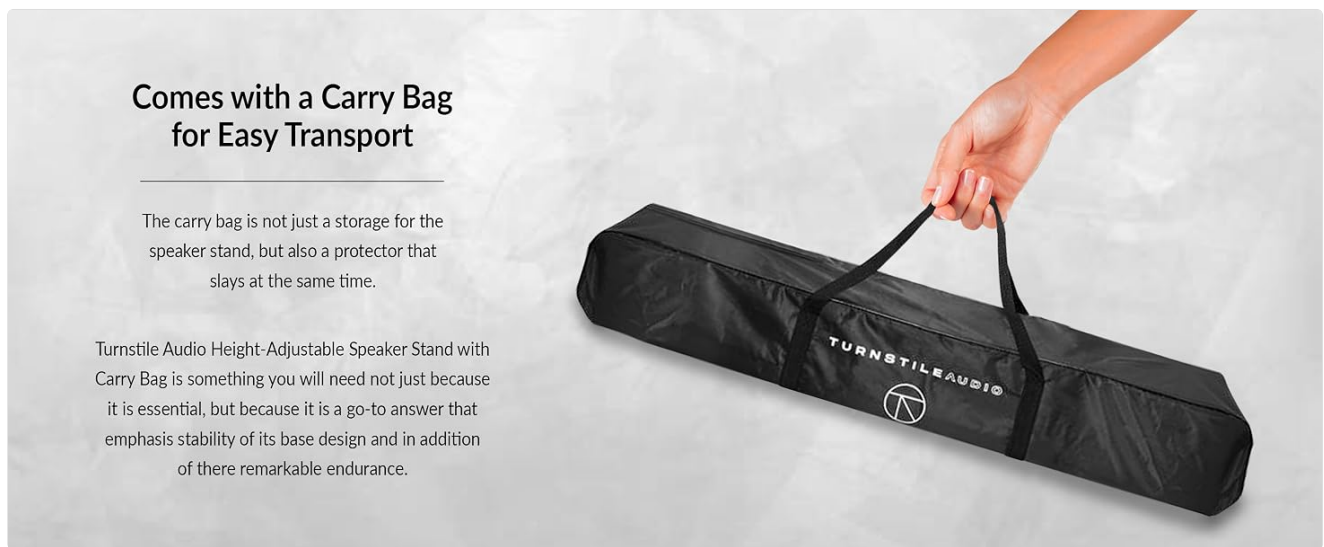


Image 3.1: The included carry bag for easy transport and storage.

4. SETUP INSTRUCTIONS

Follow these steps to assemble and set up your speaker stand:

1. **Unfold the Legs:** Place the stand on a flat surface. Gently pull the legs outwards until they are fully extended and the base spread diameter is stable. Ensure the leg brace is locked.
2. **Adjust Base Spread:** The base spread diameter can be adjusted from 39 to 60 inches (98 to 152 cm) for optimal stability. A wider spread provides greater stability.
3. **Adjust Height:** Loosen the locking knob on the main pole. Carefully raise or lower the upper pole to the desired height. The stand is height-adjustable from 47.24 inches (120 cm) to 70.87 inches (180 cm).
4. **Insert Safety Pin:** Once the desired height is reached, align the holes in the upper and lower poles and insert the safety pin completely through both holes.
5. **Secure Locking Knob:** Tighten the locking knob firmly to secure the upper pole in place. The safety pin acts as a secondary lock.
6. **Place Speaker:** Carefully place your speaker onto the top mounting pole of the stand. Ensure the speaker is centered and stable.

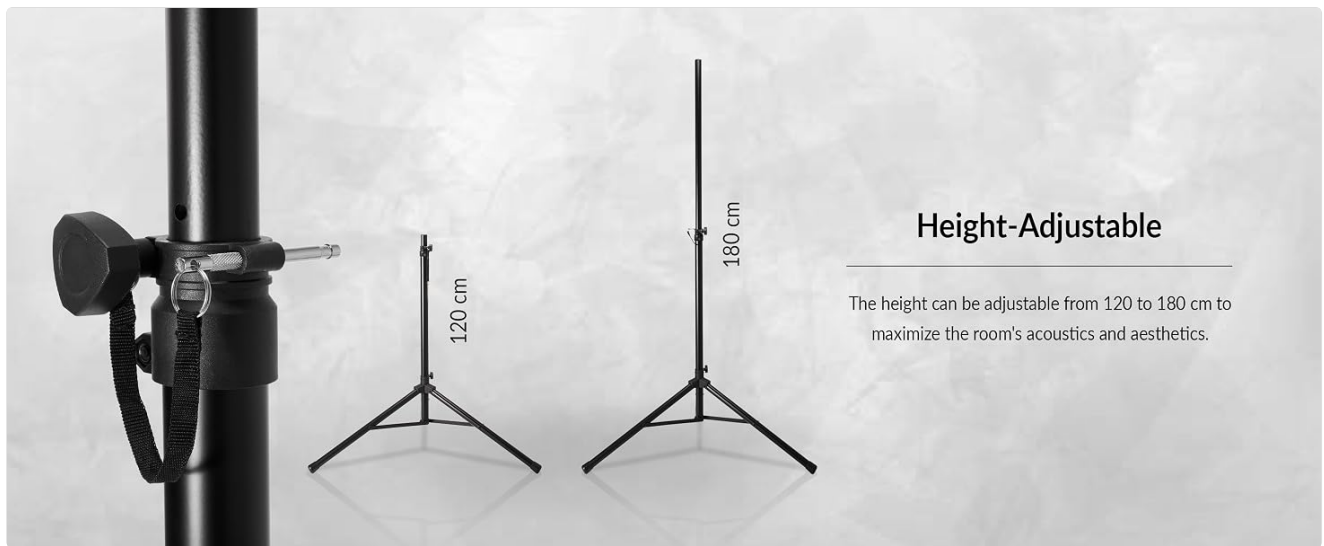 


Image 4.1: Detail of the height adjustment mechanism and examples of minimum and maximum height settings.

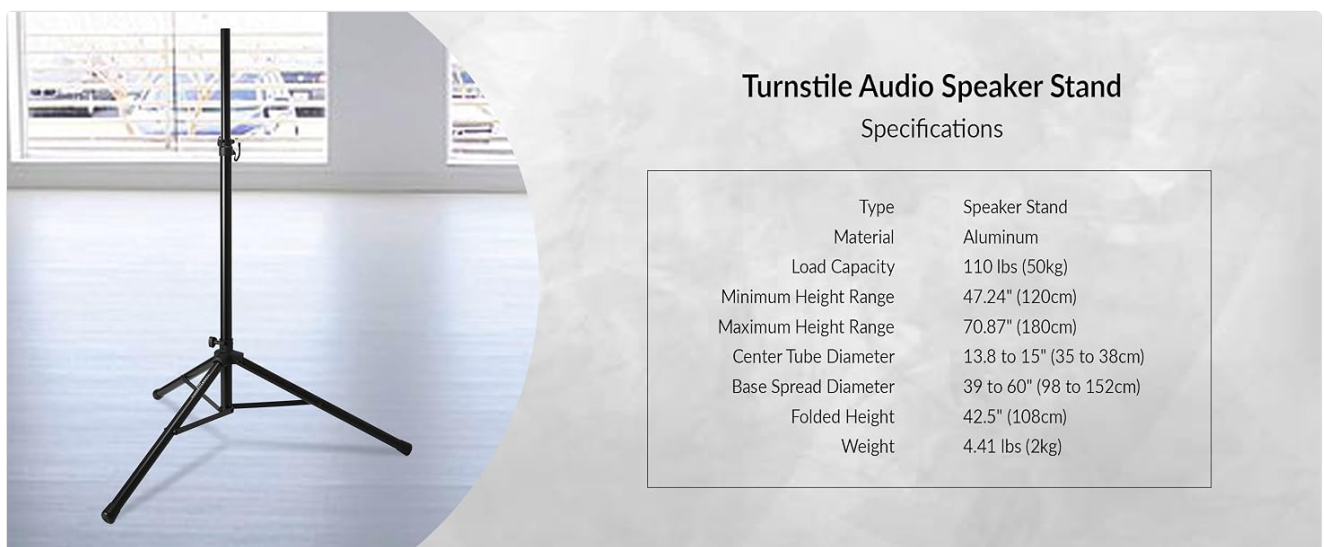


Image 4.2: The rubber feet provide stability and protect floor surfaces.

5. OPERATING THE SPEAKER STAND

The Turnstile Audio SS6-SB speaker stand is designed for straightforward operation.

- **Height Adjustment:** To change the speaker height, remove the speaker, loosen the locking knob, remove the safety pin, adjust the pole, re-insert the safety pin, and re-tighten the knob.
- **Speaker Placement:** Always ensure the speaker is securely seated on the stand's top pole. For speakers with a pole mount, ensure it is fully inserted.
- **Portability:** For transport, collapse the stand by reversing the setup steps. Store it in the provided carry bag.

6. MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your speaker stand.

- **Cleaning:** Wipe the stand with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and dry immediately. Avoid abrasive cleaners or solvents.

- **Inspection:** Periodically check all bolts, knobs, and pins for tightness. Ensure the rubber feet are intact and not worn.
- **Storage:** When not in use, collapse the stand and store it in its carry bag in a dry, cool place to prevent corrosion and damage.

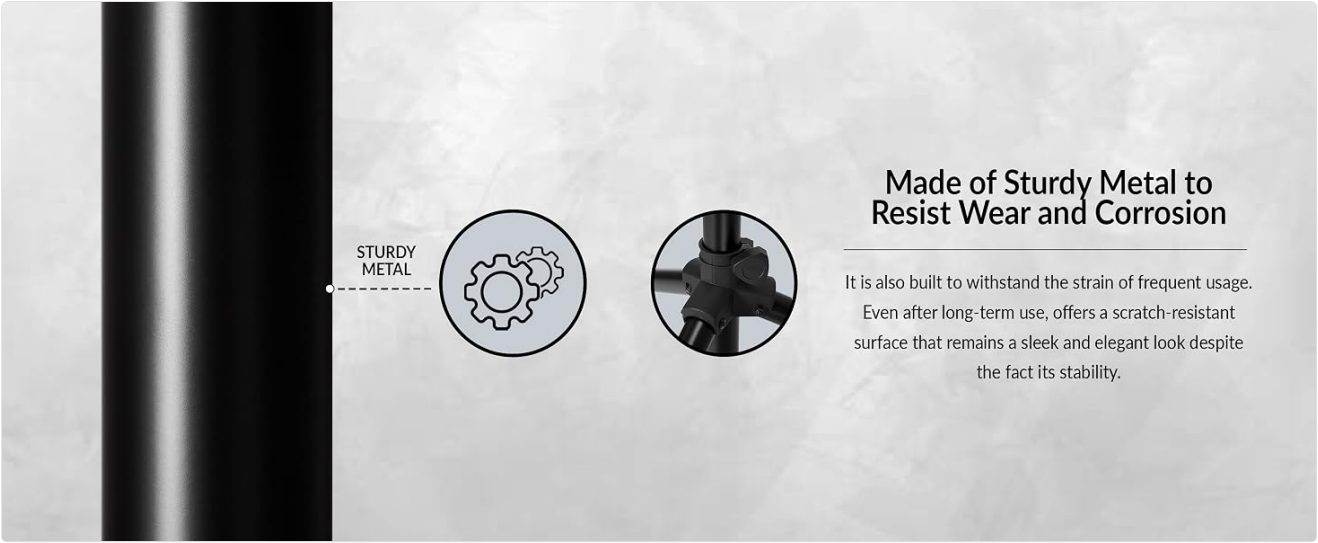


Image 6.1 : The stand is constructed from sturdy metal designed to resist wear and corrosion.

7. TROUBLESHOOTING

If you encounter issues with your speaker stand, refer to the following:

Problem	Possible Cause	Solution
Stand feels unstable	Legs not fully extended; uneven surface; overloaded.	Ensure legs are fully spread and locked. Move to a flat, stable surface. Verify speaker weight is within limits.
Difficulty adjusting height	Locking knob too tight; safety pin stuck; dirt in pole.	Loosen knob completely. Ensure safety pin is fully removed. Clean poles if necessary.
Speaker wobbles on top	Speaker not centered; pole mount not fully engaged.	Re-center the speaker. Ensure the speaker's pole mount is fully seated on the stand's top pole.

8. SPECIFICATIONS

Detailed specifications for the Turnstile Audio SS6-SB Speaker Stand:

Feature	Detail
Type	Speaker Stand
Material	Aluminum

Feature	Detail
Color	Black
Load Capacity	110 lbs (50 kg)
Minimum Height	47.24 inches (120 cm)
Maximum Height	70.87 inches (180 cm)
Base Spread Diameter	39 to 60 inches (98 to 152 cm)
Folded Height	42.5 inches (108 cm)
Item Weight	9.1 lbs (4.1 kg)
Model Number	SS6-SB
UPC	192223252110



Turnstile Audio Speaker Stand Specifications

Type	Speaker Stand
Material	Aluminum
Load Capacity	110 lbs (50kg)
Minimum Height Range	47.24" (120cm)
Maximum Height Range	70.87" (180cm)
Center Tube Diameter	13.8 to 15" (35 to 38cm)
Base Spread Diameter	39 to 60" (98 to 152cm)
Folded Height	42.5" (108cm)
Weight	4.41 lbs (2kg)

Image 8.1: Visual representation of the speaker stand with its key specifications.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Turnstile Audio website. Keep your proof of purchase for warranty claims.