

Lacoste LC33 (Model 2011364)

Lacoste LC33 Men's Analog-Digital Watch Instruction Manual

Model: LC33 (2011364)

1. OVERVIEW

The Lacoste LC33 is a men's analog-digital watch designed for versatile timekeeping. It combines traditional analog hands with dual electroluminescent digital displays, offering multiple functions including alarm, chronograph, and calendar. This timepiece features a 45mm case and a durable silicone strap, with a water resistance rating of 10 ATM.

Key Features:

- Analog and Digital Time Display
- Chronograph Function
- Alarm Function
- Calendar Display (Day, Date, Month)
- 10 ATM (100 meters) Water Resistance
- Quartz Movement for precise timekeeping
- Electroluminescent Backlight for digital displays

2. WATCH COMPONENTS

Familiarize yourself with the various parts of your LC33 watch:



Image: Lacoste LC33 watch diagram showing the 'LIGHT', 'MODE', 'START', and 'RESET' buttons, and the crown.

- **Crown (Right Side, Center):** Used for setting analog time.
- **LIGHT Button (Top Left):** Activates the backlight for digital displays.
- **MODE Button (Bottom Left):** Cycles through digital modes (Time, Alarm, Chronograph, Time Setting).
- **START Button (Top Right):** Used to start/stop chronograph, adjust settings in time setting mode, and display date in real-time mode.
- **RESET Button (Bottom Right):** Used to reset chronograph, select items in time setting mode, and measure split times.
- **Analog Display:** Traditional hour, minute, and second hands.
- **Digital Displays:** Two electroluminescent screens for various functions.
- **Day Indicator (Left Sub-dial):** Displays the current day of the week.

3. SETUP AND TIME SETTING

3.1 Setting Analog Time

1. Pull out the crown located on the right side of the watch.
2. Turn the crown clockwise or counter-clockwise to move the analog hands until the correct time is displayed.
3. Once the analog time is set, push the crown back into its original position to secure the setting and start the watch movement.

Your browser does not support the video tag.

Video: Instructions for setting the analog time on the Lacoste LC33 watch.

3.2 Setting Digital Time and Calendar

1. Press the **MODE** button three times to enter the time setting mode. The seconds display will begin to flash.
2. Press the **RESET** button to cycle through the items you wish to set: Seconds → Minute → Hour → Day → Month → Week Day. The currently selected item will flash.
3. While an item is flashing, press the **START** button to adjust its value.
4. Repeat steps 2 and 3 until all desired settings (seconds, minute, hour, day, month, week day) are correct.
5. Press the **MODE** button once to exit the time setting mode and return to the real-time display.

Your browser does not support the video tag.

Video: Instructions for setting the digital time and calendar on the Lacoste LC33 watch.

4. OPERATING FUNCTIONS

4.1 Using the Chronograph (Stopwatch)

1. From the real-time display, press the **MODE** button once to enter chronograph mode. The digital display will show '00:00:00'.
2. Press the **START** button to begin timing.
3. To pause the chronograph, press the **START** button again. Press **START** to resume.
4. To measure split times while the chronograph is running, press the **RESET** button. The split time will be displayed, while the chronograph continues to run in the background. Press **RESET** again to return to the running chronograph display.
5. To stop the chronograph completely, press the **START** button.
6. To reset the chronograph to zero, press the **RESET** button when the chronograph is stopped.

Your browser does not support the video tag.

Video: Demonstration of the chronograph function on the Lacoste LC33 watch.

4.2 Displaying Date

- In the real-time display mode, press the **START** button to momentarily display the current date on the digital screen.

4.3 Using the Backlight

- Press the **LIGHT** button to illuminate the digital displays for improved visibility in low-light conditions.

4.4 Alarm Function

- To access the alarm setting mode, press the **MODE** button until 'AL' appears on the digital display.
- Use the **RESET** and **START** buttons to set the desired alarm time.
- Refer to the full product manual for detailed instructions on activating, deactivating, and setting daily alarms or hourly chimes.

5. MAINTENANCE AND CARE

5.1 General Care

- Your Lacoste watch is crafted with attention to quality. To maintain its condition, avoid exposing it to extreme temperatures, strong magnetic fields, or harsh chemicals.

- Clean the watch case and strap regularly with a soft, damp cloth. For silicone straps, mild soap and water can be used. Ensure the watch is completely dry afterward.
- A maintenance interval of 3 to 5 years is recommended, in addition to any required battery replacement. It is advised to have this performed by an authorized service center.
- Never attempt to open the watch case yourself, as this can compromise its water resistance and void the warranty.

5.2 Water Resistance (10 ATM / 100 meters)

This watch is water resistant up to 100 meters (10 ATM). This rating makes it suitable for swimming and snorkeling. It is **not** suitable for deep diving or high-impact water sports. The water resistance rating reflects pressure tolerance under static conditions and does not indicate a safe submersion depth for prolonged periods or dynamic water pressure.

Always ensure the crown is fully pushed in before exposing the watch to water. Do not operate any buttons while the watch is submerged in water.

6. TROUBLESHOOTING

If you encounter issues with your Lacoste LC33 watch, consider the following common solutions:

- **Watch not running or digital display blank:** The battery may need replacement. Contact an authorized service center.
- **Incorrect time:** Follow the analog and digital time setting instructions in Section 3.
- **Digital display difficult to read:** Ensure the backlight is activated using the LIGHT button. Check battery level if the backlight is dim.
- **Water inside the watch:** Immediately take the watch to an authorized service center. Do not attempt to dry it yourself.

For persistent issues, please refer to the full warranty and support information provided with your purchase or contact Lacoste customer service.

7. SPECIFICATIONS

Feature	Detail
Model Number	2011364
Case Diameter	45mm
Movement	Quartz (Analog & Digital)
Water Resistance	10 ATM (100 meters)
Strap Material	Silicone
Case Material	Stainless Steel and TR90

Display Type	Analog-Digital
--------------	----------------

8. WARRANTY AND SUPPORT

Your Lacoste LC33 watch is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage. The warranty typically covers manufacturing defects under normal use.

For warranty claims, repairs, or technical support, please contact the authorized Lacoste service center or the retailer from whom you purchased the watch. Do not attempt repairs yourself, as this may void your warranty. For additional information and support, visit the official Lacoste website or consult the full product manual.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question