

[Manuals.plus](#) /

› [AIKE](#) /

› AIKE AK1006F Wall Mount Foaming Soap Dispenser Instruction Manual

AIKE AK1006F

AIKE AK1006F Wall Mount Foaming Soap Dispenser

Instruction Manual

Model: AK1006F

1. INTRODUCTION

Thank you for choosing the AIKE AK1006F Wall Mount Foaming Soap Dispenser. This dispenser is designed for efficient and hygienic hand washing in various settings, including commercial bathrooms, offices, restaurants, and homes. Please read this manual thoroughly before installation and use to ensure proper function and longevity of your product.



Figure 1: AIKE AK1006F Wall Mount Foaming Soap Dispenser.

2. PRODUCT FEATURES

- **Large Capacity:** Features a generous 27 oz (800 ml) capacity, reducing the frequency of refills.
- **Durable Construction:** Made from high-quality ABS material for long-lasting use.
- **Leak-Proof Design:** The pump head is engineered to be tight and leak-proof, preventing drips and waste.
- **Secure Locking Mechanism:** Equipped with a dual-use key for manual pressing to unlock or opening with a key, suitable for securing the dispenser in commercial environments.
- **Versatile Installation:** Supports both drilled installation for maximum security and nail-free adhesive installation for suitable wall surfaces.
- **Easy Dispensing:** Designed with a large push button for a perfect pour of foam.

DETAIL FEATURES

- ① Durable ABS Plastic
- ② Key Locking System
- ③ Large Button One Push, Perfect Pour



Figure 2: Detail features of the AIKE AK1006F dispenser, including durable ABS plastic, key locking system, and large push button for dispensing.

3. IMPORTANT USAGE INFORMATION

This dispenser requires foaming soap refill only. Do not use mixed or regular liquid soap, as this can damage the pump mechanism and prevent proper foam dispensing.



Avoid mixed or regular liquid soap
Please use specialized foaming soap

Figure 3: Visual reminder to use specialized foaming soap only.

4. PACKAGE CONTENTS

Please ensure all items are present before proceeding with installation:

- AIKE AK1006F Foaming Soap Dispenser Unit
- Mounting Screws and Anchors (for drilled installation)
- Nail-Free Adhesive Sticker (for adhesive installation)
- Security Key
- Instruction Manual

5. INSTALLATION

The AIKE AK1006F dispenser offers two installation methods: drilled and adhesive. Choose the method best suited for your wall surface and security needs.



Figure 4: Dispenser dimensions and available mounting options.

5.1. Drilled Installation

1. **Remove Container and Mark:** Open the dispenser using the key. Remove the internal soap container. Hold the dispenser against the wall at the desired height and use a pencil to mark the drilling points through the mounting holes.
2. **Drill Holes and Insert Anchors:** Drill holes at the marked positions. Insert the expansion anchors into the drilled holes.
3. **Hang and Secure Dispenser:** Align the dispenser with the anchors and fix it securely to the wall using the provided screws.
4. **Reinstall Container and Lock:** Place the soap container back into the dispenser and close the unit, locking it with the key.

DRILLED INSTALLATION

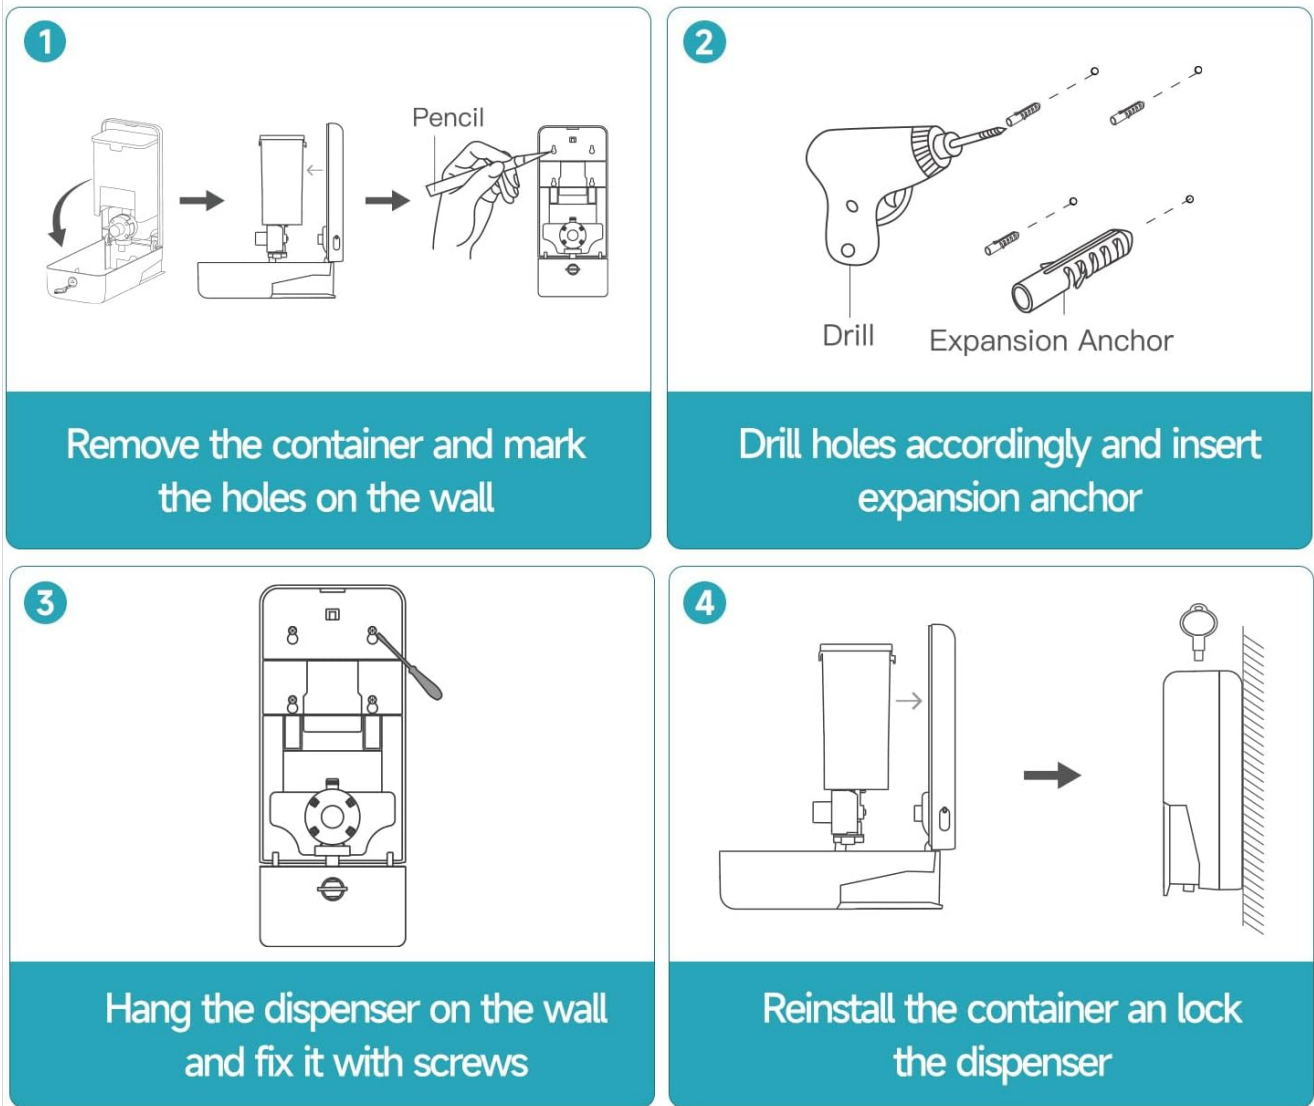


Figure 5: Step-by-step guide for drilled installation.

5.2. Adhesive Installation

This method is suitable for smooth, clean, and dry wall surfaces.

1. **Prepare Wall Surface:** Ensure the wall surface is dry, clean, and free from any dust, oil, or stains.
2. **Apply Adhesive:** Remove the protective film from the back of the nail-free mounting plate.
3. **Press Firmly to Secure:** Press the adhesive plate firmly against the wall, eliminating any air bubbles to ensure it stays securely in place.
4. **Wait and Mount Dispenser:** Allow the adhesive to cure for at least 24 hours before installing the dispenser unit onto the mounted plate.


ADHESIVE INSTALLATION

1




Prepare the Wall Surface: Ensure the wall is dry and free from any stains

2

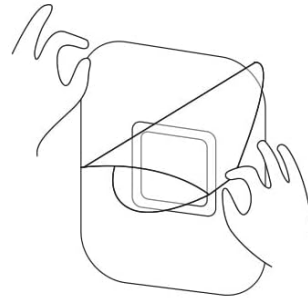


Remove Protective Film Peel off the protective film from the back of the mounting plate

3

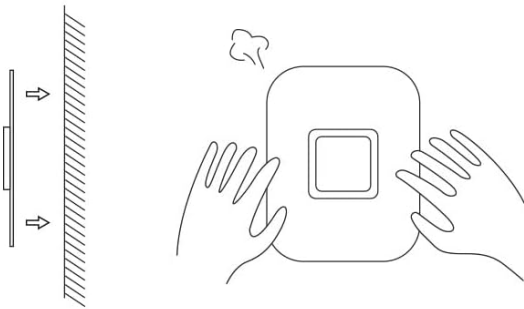

Press Firmly to Secure: Eliminate the bubbles and ensure it stays securely in place

4

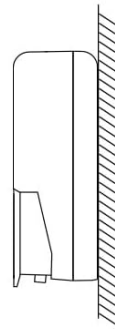

Wait and Secure the Dispenser: Wait a while before installing the dispenser

Figure 6: Step-by-step guide for adhesive installation.

6. OPERATION

To dispense foaming soap, simply place your hand under the dispenser's nozzle and press the large 'PUSH' button. The dispenser will deliver a measured amount of foam.



Figure 7: The dispenser is suitable for both home and business usage.

7. REFILLING

When the soap level is low, refill the dispenser as follows:

1. Unlock the dispenser using the provided key.
2. Carefully open the front cover and remove the internal soap container.
3. Pour specialized foaming soap into the container, ensuring not to overfill.
4. Place the container back into the dispenser, close the front cover, and lock it with the key.

27FL.OZ.

LARGE CAPACITY

FOR LONG-LASTING USE WITHOUT
FREQUENT REFILLS



Figure 8: The dispenser's internal reservoir with 27 fl. oz. capacity.

8. MAINTENANCE

To maintain your AIKE AK1006F soap dispenser, follow these guidelines:

- Regularly wipe the exterior with a soft, damp cloth to remove dust and soap residue.
- Avoid using abrasive cleaners or solvents, as these can damage the finish.
- Periodically check the pump mechanism for any blockages and clean if necessary.
- Ensure the dispenser is securely mounted to the wall.

9. TROUBLESHOOTING

If you encounter issues with your dispenser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No foam dispensed	Incorrect soap type (not foaming soap) Low soap level Pump mechanism clogged	Ensure only specialized foaming soap is used Refill the soap container Clean the pump mechanism
Soap leaks from nozzle	Pump head not properly sealed Damaged pump mechanism	Check if the pump head is securely in place Contact customer support for assistance
Dispenser is loose on wall	Improper installation Adhesive losing grip	Re-secure mounting screws or reapply adhesive according to instructions

10. SPECIFICATIONS

- **Model Number:** AK1006F
- **Brand:** AIKE
- **Color:** Silver
- **Material:** Plastic (ABS)
- **Product Dimensions:** 4.9"L x 3.7"W x 9.3"H (12.5 cm L x 9.4 cm W x 23.6 cm H)
- **Liquid Volume Capacity:** 27 oz (800 Milliliters)
- **Shape:** Rectangular
- **Item Weight:** 1.39 pounds
- **Manufacturer:** Zhejiang AIKE Appliances Co., Ltd.

11. WARRANTY AND SUPPORT

The AIKE AK1006F Foaming Soap Dispenser comes with a one-year manufacturer warranty from the date of purchase. For any support needs, questions, or warranty claims, please contact AIKE customer service via Amazon message or through our official support email. We value your experience and are happy to assist you.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DJNPX8PK>

More documents and user manuals: <https://manuals.plus/>