

[Manuals.plus](#) /

› [Indesit](#) /

› Indesit IM 642B MY TIME IT Washing Machine User Manual

Indesit IM 642B MY TIME IT

Indesit IM 642B MY TIME IT Front-Loading Washing Machine User Manual

Model: IM 642B MY TIME IT | Brand: Indesit

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Indesit IM 642B MY TIME IT front-loading washing machine. This appliance features a spacious 6.0 kg drum, an energy efficiency class B rating, and a rapid 1200 rpm spin speed. Please read these instructions carefully before using the appliance and keep them for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons. Keep packaging materials out of reach of children. Do not allow children to play with the appliance. Ensure the appliance is unplugged before any cleaning or maintenance. Do not operate the appliance if it is damaged.

SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. Ensure the appliance is placed on a stable, level surface. Adjust the feet to prevent vibration. Connect the water inlet hose to a cold water tap and the drain hose to a suitable drain. Before first use, remove all transit bolts from the rear of the machine.

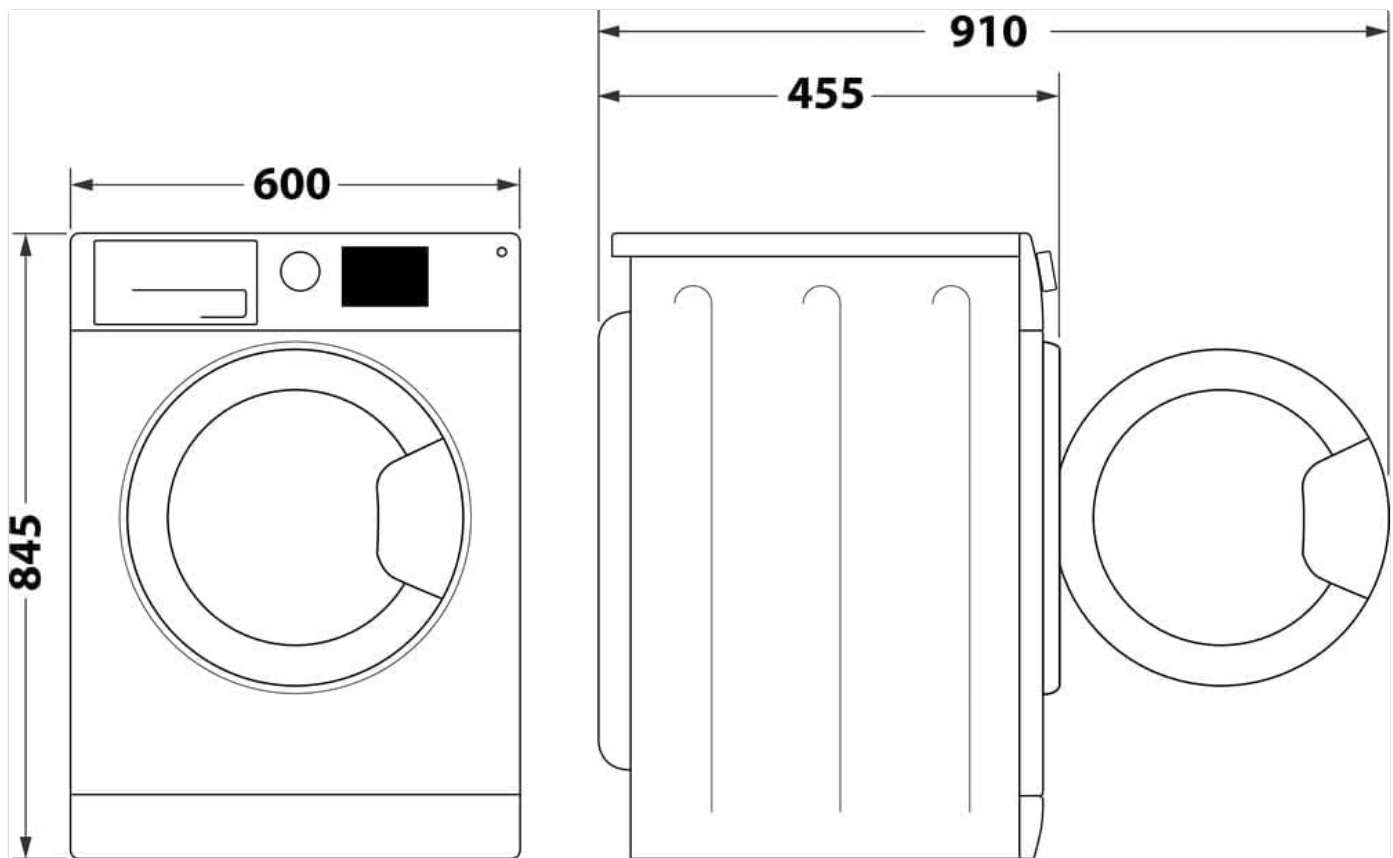


Image: Dimensional diagram of the washing machine, showing a width of 600mm, height of 845mm, and depth of 446mm. This diagram is essential for planning the installation space.



Image: Front view of the Indesit IM 642B MY TIME IT washing machine, showcasing its white finish, central door, and control panel at the top. This provides an overall visual reference of the appliance.

OPERATING INSTRUCTIONS

To operate your washing machine, first ensure it is connected to power and water. Open the door and load your laundry, making sure not to overload the drum. Add detergent and fabric softener to the appropriate compartments in the dispenser drawer. Select your desired wash program using the program knob and adjust any additional options like temperature or spin speed if available. Press the Start/Pause button to begin the cycle.



Image: Detailed view of the washing machine's control panel. It features a central program selection knob with various wash cycles (e.g., Anti-stain, Mixed, Cotton, Eco 40-60, Express 14'), a detergent dispenser drawer on the left, and a digital display with control buttons on the right for functions like spin, temperature, and delay start.

Program Selection

- **Eco 40-60:** Standard program for normally soiled cotton garments declared to be washable at 40 °C or 60 °C, together in the same cycle.
- **Express 14':** A quick wash program for lightly soiled items, completing a cycle in just 14 minutes.
- **Cotton:** For cotton items, offering various temperature options.
- **Mixed:** Suitable for mixed loads of cotton and synthetic fabrics.
- **Anti-stain:** Designed to effectively remove common stains.
- **Spin & Drain:** For draining water and spinning laundry without a wash cycle.
- **Rinse:** An additional rinse cycle.

MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the life of your appliance. Always unplug the washing machine before performing any cleaning or maintenance tasks.

Cleaning the Detergent Dispenser

Periodically remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue. This prevents blockages and ensures proper dispensing.

Cleaning the Drain Pump Filter

The drain pump filter should be cleaned regularly to prevent blockages and ensure proper drainage. Locate the filter at the bottom front of the machine, open the cover, and carefully unscrew the filter. Drain any residual water into a shallow container before removing the filter completely. Clean the filter under running water and reinsert it securely.



Image: Close-up view of the lower front panel of the washing machine, showing the circular access cover for the drain pump filter. This cover can be opened to access and clean the filter, which is crucial for preventing drainage issues.

Drum Cleaning

Run a drum cleaning cycle periodically, or a hot wash cycle with no laundry and a descaling agent, to prevent odors and maintain hygiene.

TROUBLESHOOTING

If you encounter issues with your washing machine, consult the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Machine does not start	Not plugged in; door not closed properly; program not selected; Start/Pause button not pressed.	Check power connection; ensure door is firmly closed; select a program; press Start/Pause.
Water not filling	Water tap closed; inlet hose kinked or blocked; water pressure too low.	Open water tap; straighten hose; check household water pressure.
Water not draining	Drain hose kinked or blocked; drain pump filter clogged.	Straighten drain hose; clean drain pump filter (refer to Maintenance section).
Excessive vibration/noise	Transit bolts not removed; machine not level; uneven load.	Ensure all transit bolts are removed; adjust leveling feet; redistribute laundry inside the drum.

Problem	Possible Cause	Solution
Detergent residue in dispenser	Insufficient water pressure; dispenser clogged.	Check water pressure; clean detergent dispenser (refer to Maintenance section).

SPECIFICATIONS

Feature	Detail
Brand	Indesit
Model Number	IM 642B MY TIME IT
Product Dimensions (DxWxH)	44.6 x 60 x 84.5 cm
Weight	60 kg
Capacity	6.0 kg
Energy Efficiency Class	B
Max Spin Speed (Eco 40-60)	1151 rpm (approx. 1200 rpm)
Water Consumption (Eco program)	43 liters per cycle
Energy Consumption (Eco 40-60)	48 kWh per 100 cycles
Noise Emission	74 dB
Loading Type	Front-loading
Color	White
Material	Steel
Controls Type	Button
Operating Mode	Automatic

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your appliance or visit the official Indesit website. Warranty terms and conditions may vary by region and retailer. In case of a defect or damage, please contact your point of purchase or an authorized service center.

Note: Amazon's return policy allows returns within 30 days of receipt if you change your mind. For defective or damaged products, please consult Amazon's help page on returns. Specific information for Marketplace purchases is also available on Amazon's help pages.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DJP875BM>

More documents and user manuals: **<https://manuals.plus/>**