

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Beldray](#) /

> [Beldray Airvolve Digital Cordless Vacuum Cleaner BEL01981VDE User Manual](#)

Beldray BEL01981VDE

Beldray Airvolve Digital Cordless Vacuum Cleaner

Model: BEL01981VDE

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using your Beldray Airvolve Digital Cordless Vacuum Cleaner. Keep this manual for future reference.

- Always ensure the voltage indicated on the rating label corresponds to your mains voltage.
- Do not immerse the appliance, charger, or battery in water or any other liquid.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not use the appliance if any part is damaged.
- Only use the charger supplied with the appliance.
- Do not use the appliance to pick up flammable or combustible liquids, hot ashes, or sharp objects.
- Ensure the dust container is empty and filters are clean for optimal performance.
- Disconnect the charger from the mains supply before cleaning or performing maintenance.

PRODUCT OVERVIEW

The Beldray Airvolve Digital Cordless Vacuum Cleaner is designed for efficient and versatile cleaning. Key features include:

- **Digital Brushless Motor:** Provides enhanced suction power for various surfaces.
- **LED Dust Reveal Technology:** Integrated LED light on the floor head illuminates hidden dust.
- **Convertible Design:** Easily transforms from a stick vacuum to a handheld unit.
- **Long Operation Time:** Up to 30 minutes of cleaning on a single charge.
- **500ml Dust Container:** Generous capacity for extended cleaning sessions.
- **2-in-1 Crevice Tool:** Ideal for reaching tight spaces and corners.
- **Wall Mount Storage:** Convenient storage solution to keep the vacuum ready for use.



Image: The Beldray Airvolve Digital Cordless Vacuum Cleaner in stick mode, demonstrating its use for cleaning under furniture.

SETUP AND ASSEMBLY

1. Assembling the Vacuum Cleaner

1. Insert the extension tube into the main body until it clicks securely into place.
2. Attach the floor head to the other end of the extension tube, ensuring it clicks firmly.
3. For handheld use, attach desired accessories (e.g., 2-in-1 crevice tool) directly to the main body.

2. Charging the Battery

- Connect the charger to the charging port on the main body of the vacuum cleaner.
- Plug the charger into a suitable mains power outlet.
- The charging indicator lights will illuminate. A full charge takes approximately 5.5 hours.
- Ensure the vacuum is fully charged before first use for optimal battery life.

3. Installing the Wall Mount

- Choose a suitable location near a power outlet for convenient charging.
- Mark the desired position for the wall mount on a sturdy wall.
- Drill pilot holes and secure the wall mount using appropriate screws and wall plugs (not supplied).

- Hang the vacuum cleaner on the wall mount for storage and charging.





Image: The Beldray Airvolve Digital Cordless Vacuum Cleaner neatly stored on its wall mount, ready for use.

OPERATING INSTRUCTIONS

1. Powering On/Off

- Press the power button on the main body to turn the vacuum cleaner on.
- Press the power button again to turn it off.
- Some models may have multiple power settings; refer to the specific buttons for adjusting suction power.

2. Using as a Stick Vacuum

- Ensure the extension tube and floor head are securely attached.
- Use for cleaning carpets, hard floors, and other large surface areas.
- The LED Dust Reveal Technology will activate, illuminating dust particles on the floor.



Image: Close-up of the vacuum's floor head, showing the LED Dust Reveal Technology in action on a carpeted surface.

3. Converting to Handheld Mode

- Press the release button to detach the extension tube and floor head from the main body.
- Attach the 2-in-1 crevice tool or other suitable accessories directly to the main body.
- Use the handheld vacuum for cleaning furniture, stairs, car interiors, and other hard-to-reach areas.



Image: The vacuum in handheld configuration, effectively cleaning stairs using the crevice tool.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

1. Emptying the Dust Container

- Ensure the vacuum cleaner is switched off and disconnected from the charger.
- Locate the dust container release button and press it to detach the container from the main body.
- Hold the dust container over a waste bin and open the bottom flap to empty the contents.
- Close the flap securely and reattach the dust container to the main body until it clicks.
- Empty the 500ml dust container regularly to maintain suction power.



Image: Demonstrating the process of emptying the 500ml dust container into a waste bin.

2. Cleaning the Filters

- The vacuum cleaner includes a washable filter.
- Remove the dust container and then carefully remove the filter assembly.
- Tap the filter gently to remove loose dust. For a deeper clean, rinse the filter under cold running water.
- Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum cleaner. Do not use heat to dry.
- It is recommended to clean the filter regularly, especially if you notice a decrease in suction power.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly inserted.	Ensure the battery is fully charged (approx. 5.5 hours). Check that the battery is securely inserted.

Problem	Possible Cause	Solution
Reduced suction power.	Dust container is full, filter is clogged, or blockage in the nozzle/tube.	Empty the dust container. Clean or replace the filter. Check for and remove any blockages.
Brush roll not rotating.	Hair or debris tangled in the brush roll, or a blockage.	Turn off the vacuum and remove any tangled hair or debris from the brush roll. Check for blockages in the floor head.
Short operating time.	Battery not fully charged or battery degradation.	Ensure the battery is fully charged before use. If the issue persists, the battery may need replacement.

SPECIFICATIONS

Brand	Beldray
Model Number	BEL01981VDE (BW12616EU7)
Product Dimensions	10.8 x 22 x 31.6 cm; 3 kg
Power/Wattage	170 W
Run Time	Up to 30 minutes
Charging Time	5.5 hours
Dust Container Capacity	500 ml
Special Features	LED light, Digital Brushless Motor
Filter Type	Cartridge (Washable)
Surface Recommendation	Carpet, Hard Floor
Power Source	Battery
Included Components	Wall mount, 2-in-1 crevice nozzle
Wireless	Yes
Recommended Uses	Carpets, hard floors, furniture, stairs, cars, corners and edges, pet hair

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Beldray Airvolve Digital Cordless Vacuum Cleaner, please refer to the warranty card included with your purchase or visit the official Beldray website. You may also contact Beldray customer service directly for assistance.

Keep your proof of purchase for any warranty claims.