

[Manuals.plus](#) /

› [Mooov](#) /

› Mooov 477380 HiFi Stereo Micro System User Manual

Mooov 477380

Mooov 477380 HiFi Stereo Micro System User Manual

Model: 477380

1. INTRODUCTION

Thank you for purchasing the Mooov 477380 HiFi Stereo Micro System. This system offers a versatile audio experience with a CD player, Bluetooth connectivity, FM radio, USB playback, AUX-IN, and an alarm clock function. Please read this manual carefully before using the product to ensure proper operation and to maximize your enjoyment of its features. Keep this manual for future reference.



Image 1.1: The Mooov 477380 Micro System integrated into a home environment.

2. SAFETY INFORMATION

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not block ventilation openings. Ensure adequate space around the unit for proper airflow.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.
- The remote control requires 2 AAA batteries (not included). Insert them with correct polarity.

3. PACKAGE CONTENTS

Please check that all items are present:

- Mooov 477380 HiFi Stereo Micro System

- Remote Control
- Power Adapter
- FM Telescopic Antenna
- User Manual (this document)

4. PRODUCT OVERVIEW

4.1 Front Panel



Image 4.1: Front view of the Moov 477380 Micro System.

- **Display Screen:** Shows time, mode, track information, etc.
- **CD Tray:** For inserting audio CDs.
- **Power/Standby Button:** Turns the unit on or off.
- **Mode Button:** Switches between CD, Bluetooth, FM, USB, AUX-IN.
- **Volume Knob:** Adjusts the master volume.
- **Playback Controls:** Play/Pause, Stop, Skip Forward/Backward.
- **USB Port:** For connecting USB flash drives for MP3 playback.
- **AUX-IN (3.5mm) Jack:** For connecting external audio devices.
- **Headphone Jack:** For private listening.

4.2 Rear Panel



Image 4.2: Rear view of the Mooov 477380 Micro System.

- **FM Antenna Input:** Connect the telescopic FM antenna.
- **RCA Output (L/R):** For connecting to external amplifiers or powered speakers.
- **DC IN Jack:** Connect the provided power adapter.

4.3 Remote Control



Image 4.3: Remote control for the Mooov 477380 Micro System.

The remote control provides full functionality for the micro system. Ensure 2 AAA batteries are correctly inserted. Point the remote control towards the front panel of the unit.

5. SETUP

5.1 Placement

Place the micro system on a flat, stable surface. Ensure there is adequate ventilation around the unit. Avoid placing it near heat sources, direct sunlight, or areas with high humidity.

5.2 Connecting Power

1. Connect the provided power adapter to the DC IN jack on the rear of the unit.
2. Plug the power adapter into a standard wall outlet (100-240V, 50-60Hz).

5.3 FM Antenna Connection

Connect the telescopic FM antenna to the FM antenna input on the rear panel. Extend the antenna fully and adjust its

position for optimal FM radio reception.

5.4 Optional: Connecting External Speakers (via RCA Output)

If you wish to connect the micro system to an external amplifier or powered speakers, use RCA cables (not included) to connect the RCA OUT jacks on the rear panel of the micro system to the corresponding input jacks on your external audio equipment.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the **Power/Standby** button on the front panel or remote control to turn the unit on or off. In standby mode, the time will be displayed.

6.2 CD Playback

1. Press the **Mode** button to select 'CD' mode.
2. Gently insert a CD or CD-RW disc into the CD tray with the label side facing up. The disc will load automatically.
3. Playback will begin automatically. Use the **Play/Pause**, **Stop**, and **Skip** buttons to control playback.
4. Use the **Repeat** and **Random** functions (available via remote or specific buttons) for customized playback.

6.3 Bluetooth Mode

1. Press the **Mode** button to select 'Bluetooth' mode. The display will show 'BT' and start flashing, indicating it's ready for pairing.
2. On your smartphone, tablet, or other Bluetooth-enabled device, enable Bluetooth and search for available devices.
3. Select 'Mooov 477380' from the list of devices. Once paired, the 'BT' indicator on the micro system's display will stop flashing.
4. You can now play audio from your device through the micro system. Control playback from your device or using the micro system's playback controls.
5. The Bluetooth range is approximately 10 meters (33 feet).

6.4 FM Radio

1. Press the **Mode** button to select 'FM' radio mode.
2. **Auto Scan:** Press and hold the **Scan** button (or equivalent on remote) to automatically scan and save up to 30 available FM stations.
3. **Manual Tuning:** Briefly press the **Skip Forward/Backward** buttons to fine-tune the frequency.
4. **Recalling Presets:** Use the **Preset +/-** buttons (or equivalent on remote) to navigate through saved stations.

6.5 USB Playback

1. Insert a USB flash drive containing MP3 audio files into the USB port on the front panel.
2. Press the **Mode** button to select 'USB' mode.
3. Playback will begin automatically. Use the playback controls to navigate tracks and adjust volume.

6.6 AUX-IN Mode

1. Connect an external audio device (e.g., MP3 player, smartphone) to the 3.5mm AUX-IN jack on the front panel using an audio cable (not included).
2. Press the **Mode** button to select 'AUX' mode.
3. Play audio from your connected device. The volume can be controlled via the micro system.

6.7 Alarm Function

The micro system features two independent alarms.

1. **Setting Alarm:** Refer to the remote control or specific buttons on the unit for alarm setup. You can set two separate alarms.
2. **Alarm Modes:** Choose from 4 wake-up modes: Buzzer, Radio, CD, or USB (if a USB drive is inserted).
3. **Snooze:** When the alarm sounds, press the **Snooze** button to temporarily silence it.
4. **Sleep Timer:** Use the **Sleep** function to set a timer for the unit to automatically turn off while you listen to music.

6.8 Equalizer Settings

Customize your audio experience with 5 equalizer presets:

- **Flat:** No equalization applied.
- **Rock:** Enhanced bass and treble.
- **Pop:** Slightly boosted bass and vocals.
- **Jazz:** Warm and mellow sound.
- **Classic:** Emphasizes mid-range frequencies.

Press the **EQ** button (or equivalent on remote) to cycle through these presets.

7. MAINTENANCE

7.1 Cleaning

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Ensure the unit is unplugged before cleaning.

7.2 CD Care

Handle CDs by their edges. Keep them clean and free of scratches. Store them in their cases when not in use.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected; outlet not working.	Ensure power adapter is securely connected and plugged into a working outlet.
No sound	Volume too low; incorrect mode selected; external device not playing.	Increase volume; select correct input mode (CD, BT, FM, USB, AUX); ensure external device is playing.
CD not playing	Disc inserted incorrectly; disc dirty or scratched; unsupported disc format.	Reinsert disc correctly; clean disc; try a different CD/CD-RW.
Bluetooth pairing fails	Device too far; Bluetooth not enabled on external device; micro system not in pairing mode.	Move device closer; enable Bluetooth on your device; ensure micro system is in Bluetooth pairing mode.
Poor FM reception	Antenna not extended or positioned correctly.	Extend and adjust the FM telescopic antenna for better signal.
USB not recognized	USB drive not inserted correctly; unsupported file format; corrupted USB drive.	Reinsert USB drive; ensure files are MP3 format; try a different USB drive.

9. SPECIFICATIONS



Image 9.1: Dimensions of the Mooov 477380 Micro System.

- **Total Music Power:** 50 W
- **CD Player:** Supports CD/CD-RW
- **USB Port:** MP3 playback from USB flash drive
- **AUX-IN:** 3.5 mm jack
- **Bluetooth:** Version 5.3, Range: 10 meters
- **FM Radio:** 87.5 – 108 MHz, 30 preset stations (auto/manual scan)
- **RCA Output:** Yes, for connecting external speakers
- **Alarm Clock:** 2 independent alarms, 4 wake-up modes (Buzzer, Radio, CD, USB)
- **Snooze Function:** Yes
- **Sleep Timer:** Yes
- **Equalizer Presets:** 5 (Flat, Rock, Pop, Jazz, Classic)
- **Power Saving:** Automatic shutdown after 10 minutes of inactivity

- **Power Supply:** 100-240 V, 50-60 Hz (adapter included)
- **Dimensions (L x W x H):** 36 x 23 x 11 cm (approximately 360 x 230 x 110 mm)
- **Weight:** 2.9 kg
- **Speaker Type:** Stereo
- **Color:** Brown (wood effect)
- **Anti-slip Feet:** 4 included

10. WARRANTY AND SUPPORT

This product is manufactured by METRONIC. Information regarding software updates is not available. Spare parts availability is guaranteed for 3 years from the date of purchase. For technical support or warranty claims, please contact your retailer or the manufacturer directly.

© 2025 Mooov. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question