

[Manuals.plus](#) /

> [ciciglow](#) /

> ciciglow WL Bluetooth Speaker User Manual

ciciglow ciciglowpzixso4k8g-11

ciciglow WL Bluetooth Speaker User Manual

Model: ciciglowpzixso4k8g-11

INTRODUCTION

Thank you for choosing the ciciglow WL Bluetooth Speaker. This manual provides detailed instructions for the safe and efficient use of your speaker. Please read it thoroughly before operation and retain it for future reference.

PRODUCT OVERVIEW

Package Contents

- ciciglow WL Bluetooth Speaker
- USB Charging Cable
- AUX Audio Cable
- User Manual

Speaker Components and Controls

Familiarize yourself with the speaker's buttons and ports:

Function Keys

LED light switch
Volume-, next song
Pause, Play, Answer Phone
Volume+, previous song
On Off



Image: Front view of the ciciglow WL Bluetooth Speaker, highlighting the control buttons. From left to right, these are typically the LED light switch, Volume Down/Previous Track, Play/Pause/Answer Call, Volume Up/Next Track, and Power On/Off button.

- **LED Light Switch:** Toggles the RGB lighting effects.
- **Volume - / Previous Song:** Decreases volume or skips to the previous track.
- **Play / Pause / Answer Phone:** Plays or pauses music, answers or ends phone calls.
- **Volume + / Next Song:** Increases volume or skips to the next track.
- **Power On / Off:** Turns the speaker on or off.



Image: Side view of the ciciglow WL Bluetooth Speaker, illustrating the AUX and USB ports for wired connections and charging.

- **AUX Port:** For connecting external audio devices via the included 3.5mm audio cable.
- **USB Port:** For connecting USB storage devices for music playback or charging.
- **Charging Port:** For charging the speaker's internal battery.

SETUP

Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB charging cable to the speaker's charging port and to a USB power adapter (not included) or a computer's USB port. The charging indicator light will typically show charging status and turn off or change color when fully charged. A full charge takes approximately 1.5 hours.



Image: The ciciglow WL Bluetooth Speaker shown with its accompanying USB charging cable and AUX audio cable, ready for connection.

Powering On/Off

Press and hold the **Power On/Off** button for a few seconds to turn the speaker on or off. An audible prompt or indicator

light will confirm the status.

OPERATING INSTRUCTIONS

Bluetooth Connection

1. Ensure the speaker is powered on and in Bluetooth pairing mode (usually indicated by a flashing LED light).
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "WL Speaker" (or similar name) from the list of devices.
4. Once connected, the speaker will provide an audible confirmation, and the LED indicator will typically stop flashing.

The speaker supports Bluetooth 5.2 for a fast and stable connection.

AUX Input Playback

Connect one end of the 3.5mm AUX audio cable to the speaker's AUX port and the other end to the audio output jack of your external device. The speaker will automatically switch to AUX input mode or may require a mode selection (if available).

USB Playback

Insert a USB storage device containing audio files into the speaker's USB port. The speaker should automatically detect and begin playing music from the USB device.

Music and Call Control

- **Play/Pause:** Press the **Play/Pause** button once.
- **Next Song:** Press the **Volume + / Next Song** button once.
- **Previous Song:** Press the **Volume - / Previous Song** button once.
- **Volume Up:** Press and hold the **Volume + / Next Song** button.
- **Volume Down:** Press and hold the **Volume - / Previous Song** button.
- **Answer/End Call:** Press the **Play/Pause / Answer Phone** button once during an incoming call.
- **Reject Call:** Press and hold the **Play/Pause / Answer Phone** button during an incoming call.

RGB Lighting Effects

Press the **LED Light Switch** button to cycle through different RGB lighting modes or to turn the lights off. The lights change colors with the rhythm of the music.

Wide range of compatibility

Extended compatibility with most devices such as cell phones, tablets, computers, etc.



Image: The ciglow WL Bluetooth Speaker showcasing its dynamic RGB lighting effects, which can be adjusted to enhance the listening experience.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for extended periods.
- **Water Resistance:** This speaker is not waterproof. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery; Power button not pressed correctly.	Charge the speaker; Press and hold the Power button for 3-5 seconds.
Cannot connect via Bluetooth.	Speaker not in pairing mode; Bluetooth disabled on device; Device too far.	Ensure speaker is in pairing mode; Enable Bluetooth on your device; Move device closer to speaker (within 10 meters).
No sound during playback.	Volume too low; Incorrect input mode; Audio cable not fully connected.	Increase speaker and device volume; Ensure correct input mode (Bluetooth, AUX, USB); Reconnect audio cable securely.
Sound distortion.	Volume too high; Weak Bluetooth signal; Low battery.	Reduce volume; Move device closer to speaker; Charge the speaker.
RGB lights not working.	LED light switch off; Malfunction.	Press the LED light switch button to activate; If issue persists, contact support.

SPECIFICATIONS

Model Name	ciciglowpzixso4k8g-11
Brand	ciciglow
Connectivity Technology	Bluetooth 5.2, AUX, USB
Speaker Type	Built-In
Special Feature	RGB Color Changing Lights, Portable, Rechargeable
Recommended Uses	Indoor/Outdoor
Battery Capacity	1200 mAh Li-ion
Charging Time	Approx. 1.5 hours
Playback Time	2 to 3 hours (continuous)
Product Dimensions	11.02"D x 4.72"W x 4.72"H
Item Weight	1.34 pounds
Material	ABS

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official ciciglow website. Contact details for customer service are typically available on the product packaging or the brand's online store.

Manufacturer: ciciglow

ASIN: B0DJPD3S4W

