

## Salter EK5739PNKVDE

# Salter Retro 4-Slice Toaster EK5739PNKVDE User Manual

Model: EK5739PNKVDE | Brand: Salter

## 1. IMPORTANT SAFEGUARDS

---

Please read these instructions carefully before using your Salter Retro 4-Slice Toaster. Keep this manual for future reference.

- Do not touch hot surfaces. Always use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted into a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Always unplug the toaster before cleaning the crumb tray.

## 2. PRODUCT OVERVIEW

---

The Salter Retro 4-Slice Toaster is designed for efficient and convenient toasting. It features four wide slots, allowing you to toast various bread types, including bagels and crumpets. With 6 browning levels and dedicated functions for defrosting, reheating, and canceling, you can achieve your desired toast consistency every time.



Image: The Salter Retro 4-Slice Toaster in a stylish pink finish, featuring chrome levers and control knobs, positioned on a kitchen counter.

### 3. SETUP

---

1. Unpack the toaster and remove all packaging materials.
2. Place the toaster on a stable, heat-resistant, and dry surface, away from flammable materials.
3. Ensure the crumb tray is correctly inserted at the bottom of the toaster.
4. Before first use, operate the toaster without bread on the highest browning setting to burn off any manufacturing residues. This may produce a slight odor and smoke, which is normal. Ensure adequate ventilation.

### 4. OPERATING INSTRUCTIONS

---

#### 4.1. Toasting Bread

1. Insert up to four slices of bread into the toaster slots. The wide slots accommodate various bread types.
2. Select your desired browning level using the browning control dial (1-6). Level 1 is for light toast, and Level 6 is for dark toast.
3. Press down the toast lever until it locks into place. The indicator light will illuminate, and the toasting cycle will begin.
4. Once the toasting cycle is complete, the toast will automatically eject, and the lever will return to its original position.



Image: Close-up of the toaster's control panel, showing the browning level dial and the 'Cancel', 'Reheat', and 'Defrost' buttons.

## 4.2. Special Functions

The toaster includes three special functions:

- **Cancel:** Press the 'CANCEL' button to stop the toasting cycle at any time. The toast will immediately eject.
- **Reheat:** Use the 'REHEAT' button to warm up previously toasted bread without further browning. Insert the toast, press the lever, then press 'REHEAT'.
- **Defrost:** The 'DEFROST' function allows you to toast frozen bread. Insert frozen bread, press the lever, then press 'DEFROST'. The toaster will automatically adjust the toasting time.



Image: The toaster with the 'CANCEL' button glowing blue, indicating the function is active or has been pressed.

### 4.3. High-Lift Ejection

The high-lift ejection feature allows you to easily retrieve smaller items like crumpets or bagels without burning your fingers. Simply lift the toast lever further up after the toasting cycle is complete.



Image: A hand demonstrating the high-lift function by pushing the toast lever upwards to raise the toast higher from the slots.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

### 5.1. Cleaning the Crumb Tray

1. Ensure the toaster is unplugged and completely cool.
2. Pull out the removable crumb tray located at the bottom of the toaster.
3. Discard accumulated crumbs.
4. Wipe the tray with a damp cloth and dry thoroughly before reinserting.
5. Never operate the toaster without the crumb tray in place.



Image: A hand pulling out the removable crumb tray from the bottom of the toaster, showing accumulated crumbs.

## 5.2. Cleaning the Exterior

- Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Ensure the toaster is completely dry before plugging it back in.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet faulty; toast lever not fully depressed.	Check power connection; try a different outlet; ensure toast lever is fully locked down.
Bread is stuck in the toaster.	Bread slice too thick or uneven.	Unplug the toaster and carefully remove the bread using non-metallic tongs. Do not use metal objects.
Toast is too light/dark.	Browning level setting is incorrect.	Adjust the browning control dial to a higher or lower setting for future use.
Smoke coming from toaster.	Crumbs accumulated; food stuck; first use burn-off.	Unplug immediately. Clean crumb tray. Remove any stuck food. If first use, ensure ventilation.

## 7. SPECIFICATIONS

---

- **Model Number:** EK5739PNKVDE
- **Brand:** Salter
- **Color:** Rose
- **Material:** Aluminium
- **Power:** 1630W
- **Number of Slices:** 4
- **Browning Settings:** 6
- **Special Features:** Wide Slots, Defrost, Reheat, Cancel Functions, Removable Crumb Tray, High-Lift Ejection, Auto-Centering
- **Weight:** 3 Kilograms

## 8. WARRANTY AND SUPPORT

---

Your Salter Retro 4-Slice Toaster comes with a standard manufacturer's warranty. For detailed warranty information, product support, or to inquire about replacement parts, please refer to the warranty card included in your product packaging or visit the official Salter website. Do not attempt to repair the appliance yourself, as this may void the warranty and pose a safety risk.