

**19137**

## **Beautiful 6 Qt Air Fryer with TurboCrisp Technology User Manual**

Model: 19137

### **INTRODUCTION**

Thank you for choosing the Beautiful 6 Qt Air Fryer with TurboCrisp Technology. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and retain it for future reference.

### **SAFETY INFORMATION**

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons. This includes:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a 60-minute automatic shut-off function for added safety.

### **PRODUCT OVERVIEW**

## Components

The Beautiful 6 Qt Air Fryer features a sleek design with a touch-activated display and signature gold accents. Key components include:

- Main Unit with Touch-Activated Display
- Removable Non-Stick Basket
- Removable Crisping Tray



Figure 1: Front view of the Beautiful 6 Qt Air Fryer, highlighting its elegant design and touch-activated display.

## Control Panel

The intuitive touch-activated display illuminates when needed and provides access to all cooking functions.

### Touch-Activated Display



Figure 2: Detail of the touch-activated display, showing controls for time, temperature, and preset cooking modes.

## SETUP

1. Unpack the air fryer and all its components. Remove all packaging materials, stickers, and labels.
2. Wipe the exterior of the air fryer with a clean, damp cloth.
3. Wash the removable non-stick basket and crisping tray with warm, soapy water. Rinse thoroughly and dry completely. These parts are also dishwasher-safe.
4. Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
5. Ensure the power cord is not obstructed and is easily accessible.

# OPERATING INSTRUCTIONS

## General Operation

1. Plug the air fryer into a 120V electrical outlet. The display will illuminate.
2. Pull out the non-stick basket. Place food onto the crisping tray inside the basket. Do not overfill.
3. Slide the basket back into the air fryer until it clicks into place.
4. Select your desired cooking mode (Air Fry, Roast, Reheat, Dehydrate) by touching the corresponding icon on the display.
5. Adjust the temperature (900F-4000F) and time using the '+' and '-' buttons.
6. Press the 'Start/Pause' button to begin cooking.
7. The air fryer will automatically shut off after the set time or if the basket is removed during operation.



Figure 3: The removable basket allows for easy loading and unloading of food.

## TurboCrisp Technology

The patent-pending TurboCrisp technology ensures fast, crispy, and even cooking results by circulating hot air efficiently. This technology allows for cooking with up to 75% less fat compared to traditional frying methods.



Figure 4: The air fryer in use, demonstrating its ability to produce crispy meals.

## Preset Cooking Modes

- **Air Fry:** Ideal for achieving crispy textures on foods like fries, chicken wings, and vegetables.
- **Roast:** Suitable for cooking meats, poultry, and larger vegetables.
- **Reheat:** Perfect for warming up leftovers while maintaining their texture.
- **Dehydrate:** Use for drying fruits, vegetables, or making jerky.

## Official Product Video: Beautiful 6 Qt Air Fryer with TurboCrisp

Your browser does not support the video tag.

Video 1: This official product video provides a brief overview of the Beautiful 6 Qt Air Fryer with TurboCrisp Technology, showcasing its features and ease of use.

## MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your air fryer.

- Always unplug the air fryer and allow it to cool completely before cleaning.
- The non-stick basket and crisping tray are dishwasher-safe for easy cleanup. They are also PFOA/PFOS free.
- For manual cleaning, wash the basket and tray with warm, soapy water using a non-abrasive sponge.
- Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
- Ensure all parts are thoroughly dry before storing or next use.



Figure 5: The non-stick basket and crisping tray are designed for easy cleaning in a dishwasher.

## TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; basket not fully inserted.	Ensure the power cord is securely plugged into a working outlet. Push the basket firmly until it clicks into place.
Food is not crispy.	Basket overloaded; insufficient cooking time/temperature; food not tossed/shaken.	Do not overload the basket. Increase cooking time or temperature. Shake or toss food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food cooking.	Clean the basket and crisping tray thoroughly after each use. For high-fat foods, drain excess oil from the basket.
Display not responding to touch.	Temporary glitch; dirty screen.	Unplug the unit for a few minutes and plug it back in. Ensure the screen is clean and dry.

## SPECIFICATIONS

- Model Name:** 6 Qt Air Fryer with TurboCrisp Technology
- Model Number:** 19137
- Capacity:** 6 Quarts (holds up to 5 lbs of food)
- Dimensions (DxWxH):** 15.11"D x 12.08"W x 13.03"H
- Weight:** 13 Pounds
- Power:** 1750 Watts
- Voltage:** 120 Volts
- Temperature Range:** 900F - 4000F
- Control Method:** Touch-Activated Display
- Material:** Stainless Steel (housing), Non-Stick (basket/tray)
- Special Features:** TurboCrisp Technology, Automatic Shut-Off, Removable Basket, Dishwasher Safe, PFOA/PFOS Free
- Manufacturer:** Made by Gather
- Country of Origin:** China



Figure 6: Product dimensions for proper placement and storage.

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: Made by Gather

For further assistance, please visit the product page on Amazon: [Beautiful 6 Qt Air Fryer Product Page](#)