

[Manuals.plus](#) /

> [Haier](#) /

> Haier 7 Kg, 5 Star, Oceanus Wave Technology Toughened Glass Fully Automatic Top Loading Washing Machine (HWM70-306ES5, Ultra Fresh Air, Near Zero Pressure, Brown Grey) User Manual

## Haier HWM70-306ES5

# Haier 7 Kg Fully Automatic Top Loading Washing Machine User Manual

Model: HWM70-306ES5 | Brand: Haier

## 1. INTRODUCTION

---

This manual provides comprehensive instructions for the safe and efficient operation of your Haier 7 Kg, 5 Star, Oceanus Wave Technology Toughened Glass Fully Automatic Top Loading Washing Machine (Model: HWM70-306ES5). Designed for convenience and superior cleaning, this appliance features Oceanus Wave Technology for gentle yet effective washing, Ultra Air Fresh for odor elimination, and Softfall Technology for safe lid closure. Please read this manual thoroughly before using the washing machine to ensure proper installation, operation, and maintenance.



Figure 1: Front view of the Haier HWM70-306ES5 Top Load Washing Machine. This image displays the sleek, modern design of the appliance in its brown-grey finish, highlighting its compact form factor suitable for various laundry spaces.

## 2. SAFETY INFORMATION

---

Always adhere to the following safety precautions to prevent injury or damage to the appliance.

- **Electrical Safety:** Ensure the washing machine is connected to a grounded power outlet with the correct voltage (230 Volts) and wattage (1650 Watts). Do not use extension cords or adapters.
- **Water Connection:** Connect the water inlet hose securely to prevent leaks. Ensure water pressure is within the recommended range.
- **Child Safety:** Keep children and pets away from the washing machine during operation. The Softfall Technology lid helps prevent accidental slamming, but supervision is still required.
- **Flammable Materials:** Do not wash items that have been soiled with flammable substances (e.g., gasoline, cooking oil).
- **Maintenance:** Unplug the appliance before performing any cleaning or maintenance.

## 3. SETUP AND INSTALLATION

---

Proper installation is crucial for optimal performance and safety. It is recommended to have the appliance installed by a qualified technician.

1. **Unpacking:** Carefully remove all packaging materials. Check for any damage during transit. Ensure all included components are present: 1 Washing Machine, 1 User Manual, 1 Bottom Plate, 1 Water Inlet Hose, Warranty Card.
2. **Placement:** Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and access. Avoid direct sunlight or extreme temperatures.
3. **Leveling:** Adjust the leveling feet at the bottom of the machine to ensure it is perfectly stable and does not wobble.
4. **Water Supply Connection:** Connect the provided water inlet hose to the cold water tap and the corresponding inlet on the back of the washing machine. Tighten connections securely to prevent leaks.

5. **Drainage:** Position the drain hose into a suitable drain pipe or sink, ensuring it is not kinked or blocked. The drain hose should be at an appropriate height to allow for proper drainage.
6. **Power Connection:** Plug the power cord into a dedicated, grounded electrical outlet.



Figure 2: Side view of the Haier HWM70-306ES5 Washing Machine. This perspective helps in understanding the appliance's depth and side panel design, useful for planning installation space.

## 4. OPERATING INSTRUCTIONS

---

Follow these steps for effective and efficient washing.

1. **Loading Laundry:** Open the lid (Softfall Technology ensures gentle closure). Load clothes loosely into the drum, ensuring not to overload. The 7 kg capacity is suitable for small families.



Figure 3: Top view of the washing machine with the lid open, revealing the Oceanus Wave Drum. This view illustrates the spacious interior for loading laundry and the unique drum design.

2. **Adding Detergent:** Add the appropriate amount of detergent to the dispenser. Refer to your detergent's instructions for dosage.
3. **Control Panel Overview:** The washing machine features a Rear Control Panel with push buttons for easy operation.



Figure 4: Detailed view of the washing machine's control panel. This image highlights the various program selections, water level indicators, and function buttons, including options for Ultra Air Fresh and Quick Wash.

#### 4. Selecting a Wash Program:

- **Standard Wash:** For daily laundry.

- **Quick Wash:** For lightly soiled items requiring a fast cycle.
  - **Delicate:** For fragile garments.
  - **Ultra Air Fresh:** Activates a feature that ensures clothes come out smelling fresh by eliminating odors.
  - **Other Programs:** Consult the control panel for additional specific programs like Soak, Rinse, Spin, etc.
5. **Water Level:** Select the appropriate water level based on the load size. The machine also features Near Zero Pressure technology for efficient operation even with low water pressure.
  6. **Start/Pause:** Press the Start button to begin the wash cycle. Press again to pause if needed.
  7. **End of Cycle:** The machine will signal when the cycle is complete. Remove laundry promptly.

## 5. MAINTENANCE AND CARE

---

Regular maintenance ensures the longevity and efficiency of your washing machine.

- **Cleaning the Drum:** Periodically run a self-clean cycle or a hot wash with a washing machine cleaner to prevent mold and odor buildup in the Oceanus Wave Drum.
- **Cleaning the Magic Filter:** The Magic Filter collects lint and debris. Clean it regularly by removing it, rinsing under running water, and reinserting it.
- **Exterior Cleaning:** Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners.
- **Lid Care:** The Toughened Glass lid should be cleaned with a soft cloth. Avoid harsh chemicals that could damage the surface.
- **Water Inlet Filter:** Check and clean the filter at the water inlet hose connection periodically to prevent blockages.

## 6. TROUBLESHOOTING

---

If you encounter issues, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, lid not closed properly, power outage.	Check power connection, ensure lid is fully closed, check household power supply.
Water not filling	Water tap closed, water inlet hose kinked, water pressure too low.	Open water tap, straighten hose, check water supply pressure (Near Zero Pressure technology helps with low pressure, but extreme low pressure can still affect filling).
Water not draining	Drain hose kinked or blocked, drain pump filter clogged.	Check drain hose for kinks/blockages, clean the Magic Filter.
Excessive vibration/noise	Machine not level, load unbalanced, transit bolts not removed.	Adjust leveling feet, redistribute laundry evenly, ensure all transit bolts are removed during installation.

## 7. SPECIFICATIONS

---

Technical specifications for the Haier HWM70-306ES5 Washing Machine.

Feature	Detail
Brand	Haier
Model	HWM70-306ES5
Capacity	7 Kilograms
Installation Type	Freestanding
Colour	Brown Grey
Control Console	Push Button (Rear Control Panel)
Access Location	Top Load
Voltage	230 Volts
Wattage	1650 Watts
Motor Speed	780 RPM
Certification	Energy Star (5 Star Rating)
Special Features	ULTRA AIR FRESH, Softfall Technology, Toughened Glass, Magic Filter, Quick Wash, Oceanus Wave Drum, Near Zero Pressure
Item Weight	30 kg
Product Dimensions (LxWxH)	54 x 52 x 90.5 Centimeters

## 8. WARRANTY AND SUPPORT

---

Your Haier washing machine comes with a comprehensive warranty and dedicated customer support.

- **Warranty:** The product includes a 2-Year Warranty. Please refer to the Warranty Card included in the box for detailed terms and conditions.
- **Manufacturer:** HAIER APPLIANCES INDIA PVT LTD.
- **Customer Support:** For any technical assistance, service requests, or inquiries, please contact Haier customer support. Contact details can typically be found on the Warranty Card or the official Haier website.
- **Returns Policy:** Refer to the retailer's returns policy for information regarding product returns.

