

Gyfirmoie G000875

Gyfirmoie 9 Drawer Dresser with Power Outlet and LED Light (Model G000875) Instruction Manual

Comprehensive guide for assembly, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the Gyfirmoie 9 Drawer Dresser. This modern chest of drawers is designed to provide ample storage and convenience with integrated power outlets and adjustable LED lighting. This manual contains important information regarding the safe assembly, operation, and maintenance of your new dresser. Please read it thoroughly before beginning assembly or use.

Key Features:

- Nine spacious drawers for organized storage.
- Integrated power outlet with 2 AC outlets and 2 USB ports for convenient device charging.
- Adjustable RGB LED light strips with app control for customizable ambiance.
- Constructed from premium MDF for durability and scratch resistance.
- Smooth-gliding drawers with metal sliding rails.
- Equipped with an anti-tilting device for enhanced safety.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- **Anti-Tipping Device:** Always install the included anti-tipping device to secure the dresser to the wall. This is crucial to prevent the dresser from tipping over, especially in households with children or pets.
- **Weight Distribution:** Distribute items evenly across drawers and on the top surface. Avoid placing excessively heavy items on the top or in a single drawer.
- **Electrical Safety:** Do not overload the power outlets. Ensure all connected devices are within the specified voltage and current limits (125V/12A for AC, 5V/2A for USB). Keep liquids away from the power outlets.
- **Assembly:** Follow all assembly instructions carefully. It is recommended to have at least two people for assembly due to the size and weight of the components.
- **Placement:** Place the dresser on a flat, stable surface. Avoid placing it in areas with high humidity or direct sunlight,

which can affect material integrity.

3. ASSEMBLY INSTRUCTIONS

The Gyfimoie 9 Drawer Dresser is designed for straightforward assembly. Please follow the detailed instructions and use the provided tools. An installation video may also be available to assist you.

1. **Unpack and Verify:** Carefully unpack all components and lay them out. Verify that all parts and hardware listed in the accompanying instructions are present.
2. **Prepare Workspace:** Choose a clean, spacious area for assembly to prevent damage to the dresser components or your flooring.
3. **Follow Numbered Steps:** Assemble the dresser by following the numbered steps in the instruction manual. It is recommended to lay out each board by its corresponding number before starting.
4. **Drawer Assembly:** Pay close attention to the drawer assembly steps to ensure smooth operation. The drawers slide on metal rails.
5. **Power Outlet Installation:** Integrate the power outlet unit as directed in the manual. Ensure all connections are secure.
6. **LED Light Strip Installation:** Attach the LED light strips according to the instructions.
7. **Anti-Tipping Device:** **Crucially, install the anti-tipping device to secure the dresser to a wall stud.** This step is vital for safety.

Note: For optimal assembly, it is advisable to have a second person assist you.



Figure 3.1: Fully assembled Gyfimoie 9 Drawer Dresser in black with LED lighting activated. The dresser features a floating top design and nine drawers.

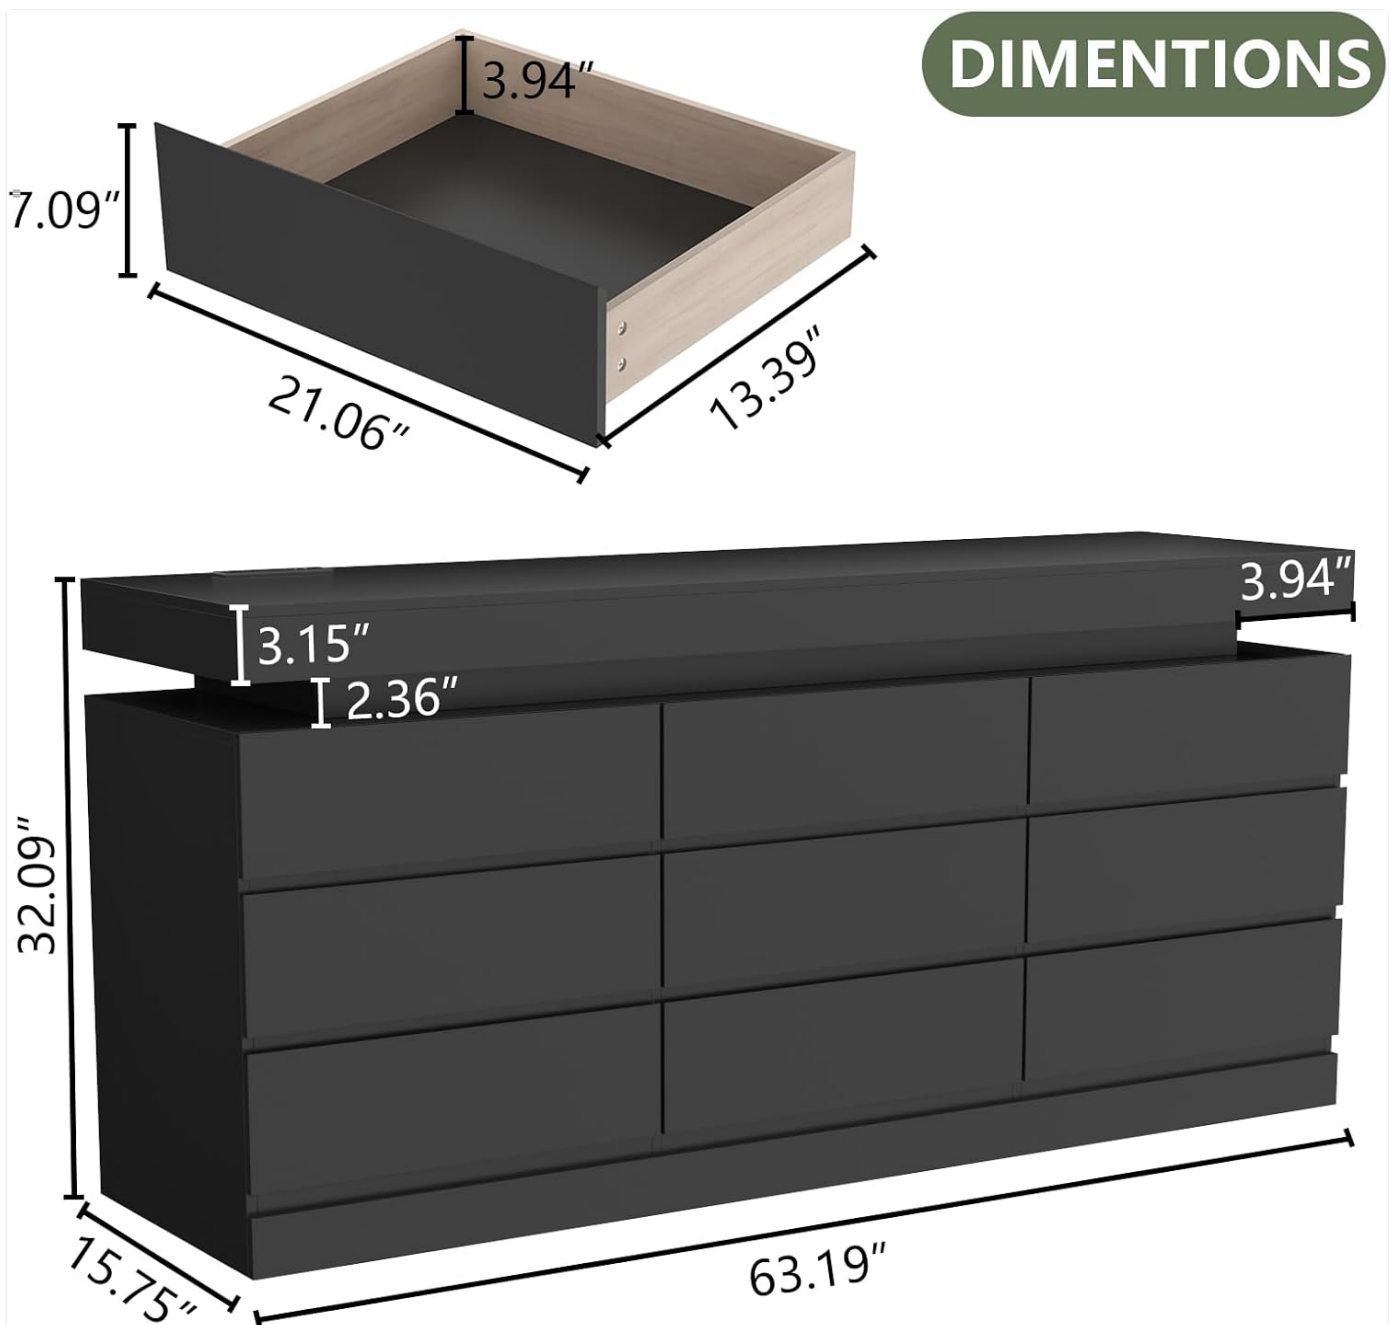


Figure 3.2: Detailed dimensions of the dresser and its drawers. The overall dimensions are approximately 15.8"D x 63.2"W x 32.1"H.

4. OPERATING INSTRUCTIONS

4.1. Drawer Operation

The drawers are equipped with smooth metal sliding rails for easy opening and closing. To open a drawer, gently pull the top edge. To close, push firmly until it is fully seated.



9 Large Drawers Storage Space

Figure 4.1: The dresser with multiple drawers open, illustrating the ample storage capacity for various items.

4.2. Power Outlet Usage

The dresser features a built-in charging station on its top surface. This includes two standard AC outlets (125V/12A) and two USB ports (5V/2A).

- **Connecting Devices:** Plug your electronic devices directly into the AC outlets or USB ports.
- **Power Supply:** Ensure the dresser's main power cord is securely plugged into a functional wall outlet.
- **Safety:** Avoid exceeding the maximum load capacity of the outlets. Do not use the outlets if they appear damaged or wet.

Charging Station

Provide a more convenient charging method



-125V/12A-
2AC outlets



-5V/2A-
2USB Ports



-4.9 Feet-
Power Cord



Figure 4.2: The integrated power outlet on the dresser's top surface, showing two AC outlets and two USB ports for charging devices.

4.3. LED Light Strip Control

The dresser is equipped with adjustable RGB LED light strips, controllable via a key control or a dedicated app.

- **Key Control:** Use the inline key control to cycle through various RGB colors, light modes (e.g., static, flashing), music sync modes, and timing options.
- **App Control:** Download the specified mobile application (refer to the separate LED light manual for app details) to access advanced customization features, including a wider range of colors, dynamic lighting effects, and personalized settings.
- **Powering On/Off:** Use the designated button on the key control or within the app to turn the LED lights on or off.

Adjustable RGB Light Strips



Key Control



RGB Colors



Light Mode



Mic Mode



Music Mode



Timing Mode



App Control

Sync your lights with your favourite music

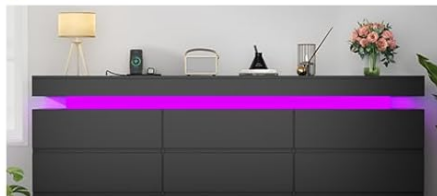 
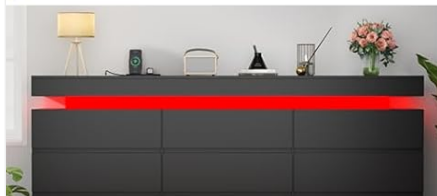 
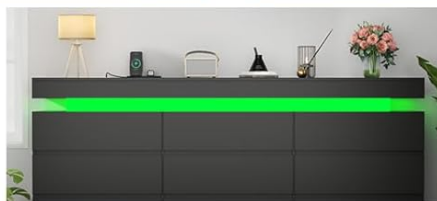 
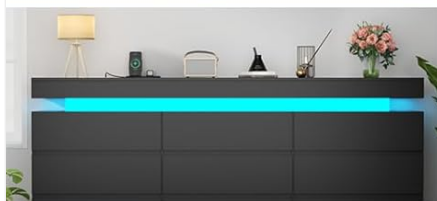 
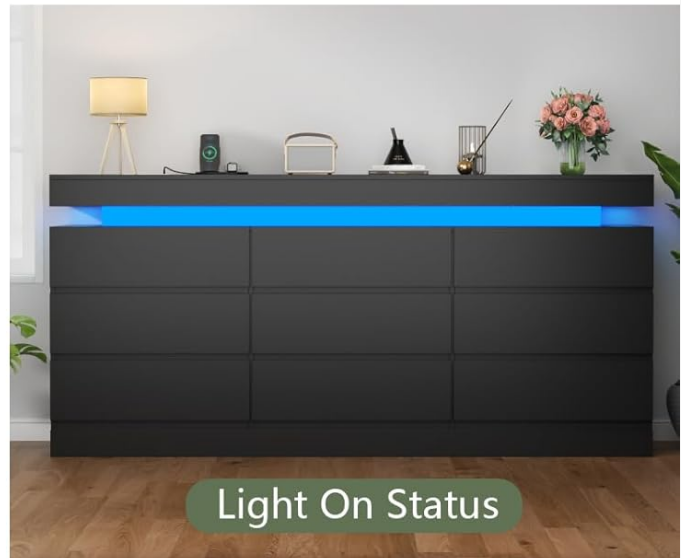 
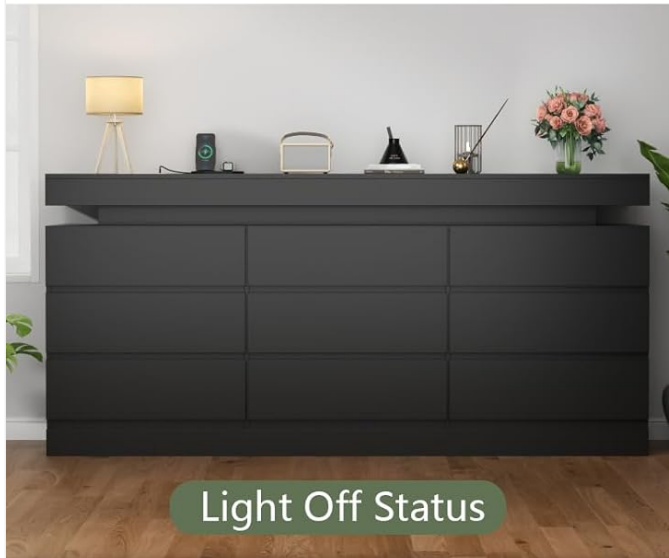 


Figure 4.3: The dresser displaying the adjustable RGB LED light strips in various colors, along with icons representing key control, app control, and different light modes.

5. MAINTENANCE

Proper maintenance will ensure the longevity and appearance of your dresser.

- **Cleaning:** The dresser's surface is highly polished and protected by a coating, making it easy to clean. Wipe surfaces with a soft, damp rag. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Dusting:** Regularly dust the dresser with a dry, soft cloth to prevent buildup.
- **Drawer Rails:** Periodically check the metal sliding rails for any debris or obstructions that might hinder smooth operation. Clean if necessary.
- **Hardware:** Occasionally check all screws and fasteners to ensure they are tight. Retighten if loose to maintain structural integrity.
- **LED Lights:** If LED lights malfunction, refer to the specific LED light strip manual for troubleshooting or contact customer support.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your dresser.

Problem	Possible Cause	Solution
Drawers do not slide smoothly or get stuck.	Misaligned rails, debris in rails, or uneven assembly.	Check that drawer rails are properly aligned and free of debris. Ensure drawers are inserted correctly. Verify assembly steps were followed accurately.
LED lights are not working.	Power cord disconnected, faulty connection, or LED strip issue.	Ensure the LED power cord is securely plugged in. Check connections to the LED strip and control unit. Refer to the LED light manual or contact customer support if the issue persists.
Power outlets are not providing power.	Dresser power cord disconnected, circuit breaker tripped, or faulty outlet unit.	Verify the dresser's main power cord is plugged into a live wall outlet. Check your household circuit breaker. Test with another device. If still not working, contact customer support.
Dresser feels unstable or wobbly.	Loose fasteners, uneven floor, or anti-tipping device not installed.	Tighten all assembly screws. Ensure the dresser is on a level surface. Immediately install the anti-tipping device if not already done.

7. SPECIFICATIONS

- **Brand:** Gyfimoie
- **Model Name:** Dresser
- **Model Number:** G000875
- **Product Dimensions:** 15.8"D x 63.2"W x 32.1"H
- **Color:** Black
- **Item Weight:** 119.1 Pounds
- **Number of Drawers:** 9
- **Drawer Type:** Ball Bearing Slide
- **Power Outlet:** 2 AC Outlets (125V/12A), 2 USB Ports (5V/2A)
- **LED Lighting:** RGB, Adjustable, App Control
- **Material:** Premium MDF
- **Assembly Required:** Yes
- **Safety Feature:** Anti-tilting device included
- **Room Type:** Bedroom, Cloakroom, Dressing Room, Entryway, Living Room

8. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the documentation included with your purchase or contact Gyfimoie customer service directly. Keep your purchase receipt and model number (G000875) handy for faster service.

Additional protection plans may be available for purchase separately. Please consult your retailer for details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What should I do if I have missing pieces for my Gyfimoie G000875 9-Drawer Dresser?

If you find that pieces are missing from your Gyfimoie G000875 9-Drawer Dresser, please follow these steps: Verify the Inventory: Re-examine all packaging materials, as small hardware or parts can sometimes be hidden in the...

[Read full answer](#)

How do I assemble the Gyfimoie G000875 9-Drawer Dresser if the instructions were missing?

To assemble your Gyfimoie G000875 9-Drawer Dresser, follow these general steps based on the product manual: Preparation: Unpack all components and lay them out in a spacious, clean area. Verify that all parts and hardware...

[Read full answer](#)