

GREEN KEEPER GKD60

GREEN KEEPER Portable Bluetooth Speaker GKD60 User Manual

Model: GKD60

1. INTRODUCTION

Thank you for choosing the GREEN KEEPER Portable Bluetooth Speaker GKD60. This manual provides essential information for the safe and efficient operation of your speaker. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or humid environments.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the device yourself. Contact qualified service personnel for assistance.
- Keep the speaker away from water and other liquids.
- Use only the provided charging cable and adapter.
- Ensure proper ventilation when operating the speaker.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- GREEN KEEPER GKD60 Portable Bluetooth Speaker x 1
- Wireless Microphone x 2
- Charger x 1
- Aux Cable x 1
- User Manual x 1
- Remote Control x 1

Sturdy Packaging for Maximum Protection

Safely Packed in Double-Layered Cartons to Ensure Durability During Shipping



- Wireless Microphone x 2
- Charger x 1
- Aux Cable X 1
- Manual X 1
- Remote Control x 1

Image 3.1: Contents of the GREEN KEEPER GKD60 package.

4. PRODUCT OVERVIEW

The GREEN KEEPER GKD60 is a portable Bluetooth speaker designed for powerful audio output and versatile connectivity. It features integrated LED lighting, wireless microphones for karaoke, and multiple input options.



Image 4.1: GREEN KEEPER GKD60 Portable Bluetooth Speaker and accessories.

Key Features



Image 4.2: Overview of the GKD60's key features.

5. SETUP

5.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the charger to the speaker's charging port and plug it into a power outlet. The charging indicator will show the charging status.

5.2 Wireless Microphone Setup

The GKD60 includes two wireless microphones. They are designed for automatic pairing with the speaker.

1. Ensure the speaker is powered on.
2. Insert batteries into the wireless microphones (if not pre-installed).
3. Power on the microphones. They should automatically connect to the speaker. A successful connection is usually indicated by a stable light on the microphone or a display change.



2 Hi-Fi Wireless Microphones in Pack

- Auto Pairing
- 20m Long-Range Connection



Crystal Clear Sound



Anti-Interference



Ultra-Low Latency

Image 5.1: Wireless microphones in use, highlighting features.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press and hold the Power button on the speaker to turn it on or off.

6.2 Bluetooth Connection

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).
3. Search for "GREEN KEEPER GKD60" in your device's Bluetooth list and select it to connect.
4. A confirmation sound will indicate a successful connection.

6.3 True Wireless Stereo (TWS) Pairing

To achieve stereo sound, you can pair two GKD60 speakers together:

1. Ensure both GKD60 speakers are powered on and not connected to any Bluetooth device.
2. On one of the speakers (this will be the primary speaker), press the TWS button.
3. The speaker will search for another GKD60 speaker. Once connected, both speakers will play audio in stereo.
4. Now, connect your device to the primary speaker via Bluetooth as described in section 6.2.

TWS Connection for Immersive Stereo Sound

Pair 2 Speakers for a Surround Sound Experience, Perfect for Outdoor Gatherings



Image 6.1: TWS connection for enhanced stereo sound.

6.4 Karaoke Mode

With the wireless microphones connected (see section 5.2), you can use the speaker for karaoke. Adjust microphone volume and echo effects using the dedicated controls on the speaker or remote control.

6.5 FM Radio

Press the Mode button to switch to FM Radio mode. Use the Play/Pause button to auto-scan and save available stations. Use the Previous/Next track buttons to navigate between saved stations.

6.6 USB/TF Card Playback

Insert a USB flash drive or TF (microSD) card into the respective slot. The speaker will automatically detect and play audio files from the storage device. Use the control buttons to manage playback.

6.7 AUX Input

Connect an external audio device (e.g., MP3 player, laptop) to the speaker's AUX input port using the provided 3.5mm audio cable. The speaker will automatically switch to AUX mode or can be selected using the Mode button.

6.8 Dynamic Light Modes

The speaker features integrated LED lights with various modes. Press the Light button to cycle through different light effects, including 7-color gradient, single-color gradient, single-color sync with music, and light off.

Dynamic Light Modes for Ultimate Party Vibes

Syncs with Music Beats to Transform Any Room into a Dance Floor



Image 6.2: Dynamic light modes for various atmospheres.

6.9 Recording Function

The speaker supports recording audio, typically from the microphone input, onto a connected USB drive or TF card. Refer to the specific controls on the speaker or remote for initiating and stopping recordings.

6.10 Remote Control

The included remote control provides convenient access to various functions, including power, volume, mode selection, track control, light modes, and microphone adjustments.

7. MAINTENANCE

7.1 Cleaning

Wipe the speaker's surface with a soft, dry cloth. Do not use abrasive cleaners, alcohol, or other chemical solvents, as these may damage the finish.

7.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to charge the battery periodically to maintain its lifespan.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery; Power button not pressed correctly.	Charge the speaker; Press and hold the Power button.
No sound.	Volume too low; Incorrect input mode; Device not connected.	Increase volume; Select correct input mode (Bluetooth, AUX, USB/TF); Ensure device is paired.
Bluetooth connection fails.	Speaker not in pairing mode; Device Bluetooth off; Too far from speaker.	Ensure speaker is in pairing mode; Turn on device Bluetooth; Move device closer (within 10 meters).
Microphones not working.	Microphones off; Low battery in microphones; Not paired.	Turn on microphones; Replace microphone batteries; Repair microphones (see section 5.2).
TWS pairing fails.	Speakers already connected to other devices; Too far apart.	Disconnect speakers from other devices; Ensure speakers are close to each other during TWS pairing.

9. SPECIFICATIONS

Detailed technical specifications for the GREEN KEEPER GKD60 Portable Bluetooth Speaker:

- **Model Name:** GKD60
- **Brand:** GREEN KEEPER
- **Speaker Type:** Outdoor
- **Connectivity Technology:** Bluetooth
- **Speaker Maximum Output Power:** 400 Watts
- **Frequency Response:** 18 KHz
- **Audio Output Mode:** Stereo
- **Input Voltage:** 9 Volts
- **Mounting Type:** Floor Standing
- **Material:** PP
- **Battery:** 1 Lithium Ion battery required (included) - 5400 mAh (approx. 8 hours playback)

- **Product Dimensions:** 26.49 x 61.29 x 29.01 cm
- **Item Weight:** 5.7 kg
- **Manufacturer:** SHENZHEN CHL INDUSTRIES CO.,LTD

400W Peak Power for Explosive Sound

Deep Bass and Immersive Audio, Perfect for Outdoor Adventures



Image 9.1: Internal speaker components and power rating.

8H Non-Stop Fun

Powered by a 5400mAh Battery for Endless Outdoor Adventures



Image 9.2: Battery capacity and playback duration.

10. WARRANTY AND SUPPORT

The GREEN KEEPER GKD60 Portable Bluetooth Speaker comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, service, or warranty claims, please contact your retailer or the GREEN KEEPER customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

I followed the steps in section 5.2 of the GREEN KEEPER GKD60 manual, but the wireless microphones are not connecting. How can I fix this?

If the wireless microphones for your GREEN KEEPER GKD60 are not connecting after following the standard setup in section 5.2, please try the following troubleshooting steps: Check Battery Orientation: Ensure the batteries in the microphones...

[Read full answer](#)