

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TAKARA TOMY](#) /

› [TAKARA TOMY Beyblade X UX-09 Starter Samurai Saver 2-70L Instruction Manual](#)

TAKARA TOMY UX-09 Starter Samurai Saver 2-70L

TAKARA TOMY Beyblade X UX-09 Starter Samurai Saver 2-70L Instruction Manual

Model: UX-09 Starter Samurai Saver 2-70L | Brand: TAKARA TOMY

1. INTRODUCTION

The BEYBLADE X is an extreme gear sport that offers battles with incredible speed and impact, thanks to its super accelerated gimmick (X-Dash). This unique Beyblade is specifically designed for inherent performance by distributing more metal over the outer perimeter of the blade. The combination of the blade's opening and closing gimmick and the bits with 3 attack speeds allows this Beyblade to combine powerful 'one-stop' performance and 'continuous shoot' performance with reduced power. It includes a built-in grip for shooting stability, a long winder for stronger launches, and 4 different rubber panels for adjustable grip. Please note that this product requires a stadium dedicated to the Beyblade X series (sold separately).

2. WHAT'S IN THE BOX

- Blade (1)
- Ratchet (1)
- Bit (1)
- Hold Launcher (1 grip panel) (1)
- Long Winder (1)
- Rubber Panel (4)
- Beycode Card (1)
- Instruction Manual (1)

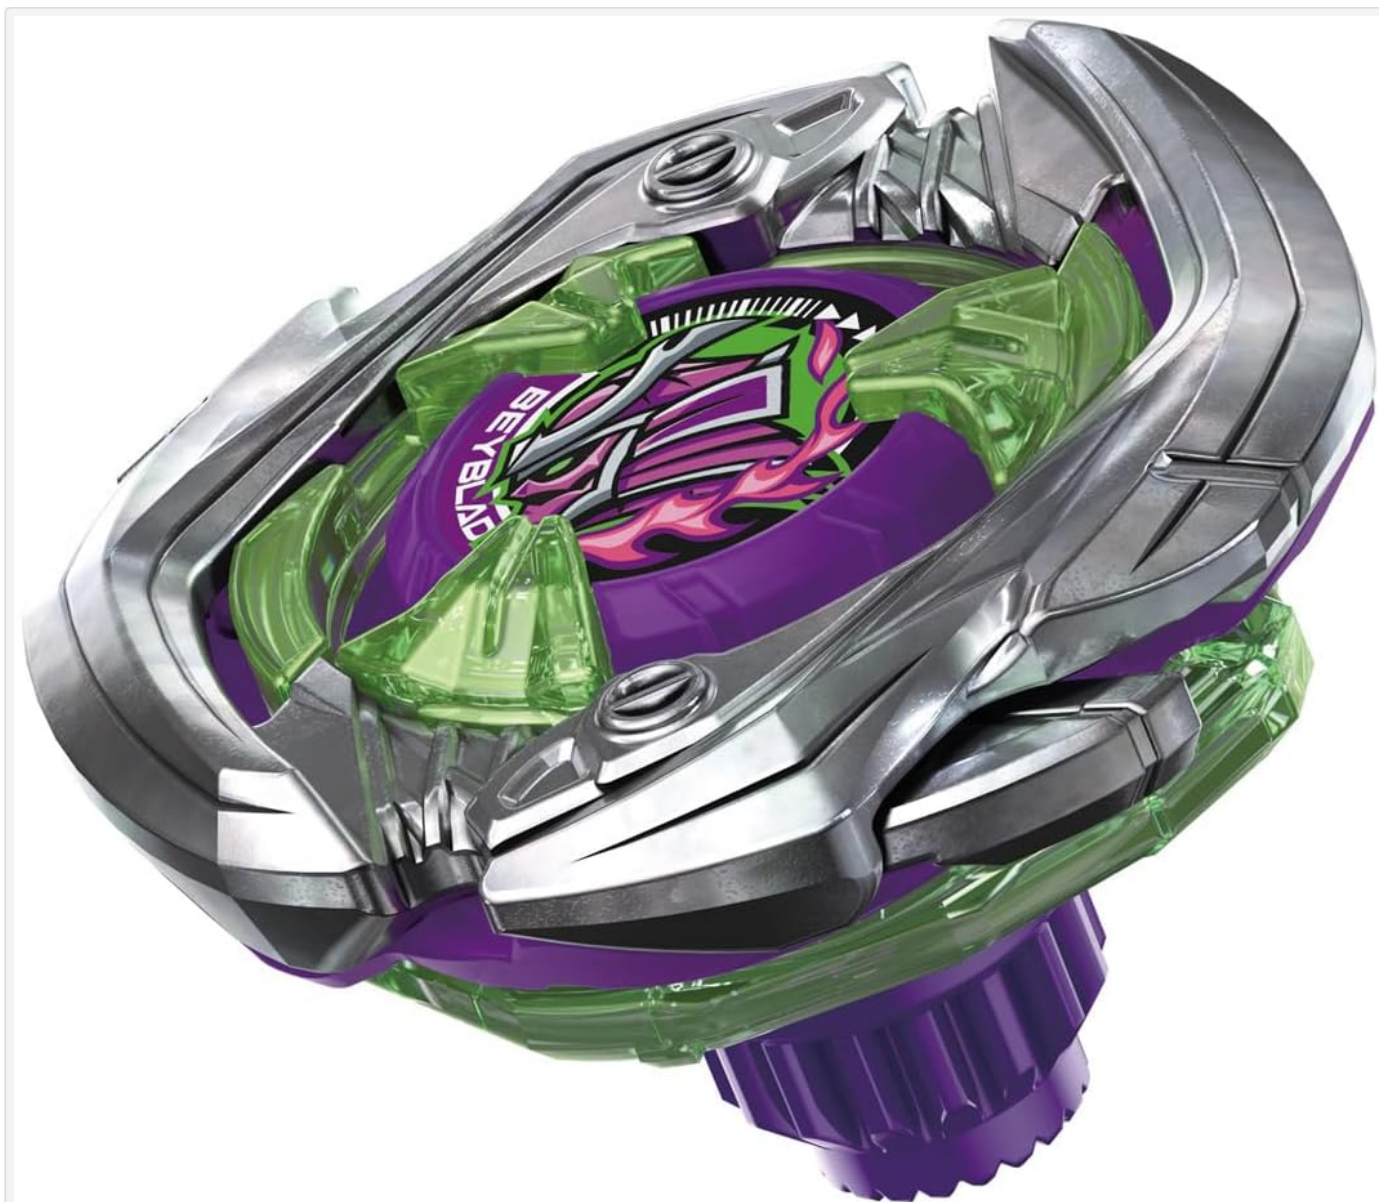


Figure 2.1: Packaging for the Beyblade X UX-09 Starter Samurai Saver 2-70L, showing the Beyblade, launcher, and accessories.

3. SETUP AND ASSEMBLY

Follow these steps to assemble your Beyblade X UX-09 Starter Samurai Saver 2-70L:

1. **Assemble the Beyblade:** Attach the Bit to the Ratchet, then connect the assembled Ratchet and Bit to the Blade. Ensure all parts click securely into place.
2. **Prepare the Launcher:** Insert the Long Winder into the Hold Launcher. The launcher includes a built-in grip for comfortable handling.
3. **Customize Grip (Optional):** Attach the included Rubber Panels to the Hold Launcher for adjustable grip and enhanced control during launches.



※画像はイメージです。

Figure 3.1: The assembled Beyblade X UX-09 Samurai Saver 2-70L, showcasing its unique design with metal outer perimeter and green/purple color scheme.



※画像はイメージです。

Figure 3.2: The Beyblade X Hold Launcher with the Long Winder inserted, ready for use. Note the ergonomic design for a firm grip.



※画像はイメージです。

Figure 3.3: The complete set, including the Beyblade X UX-09 Samurai Saver 2-70L and its corresponding Hold Launcher, ready for battle.

4. OPERATING INSTRUCTIONS

To engage in an extreme Beyblade X battle, follow these steps:

1. **Load the Beyblade:** Attach the assembled Beyblade to the Hold Launcher. Ensure it is securely locked in place.
2. **Prepare for Launch:** Hold the launcher firmly with one hand and the Beyblade with the other. Pull the Long Winder back to wind the Beyblade.
3. **Launch:** Aim your Beyblade into a dedicated Beyblade X stadium (sold separately). Pull the Long Winder with a swift, strong motion to launch the Beyblade. The X-Dash gimmick will activate, providing incredible speed and impact.
4. **Battle:** Compete against other Beyblades. The objective is to knock your opponent out of the stadium or stop their

Beyblade from spinning.

Video 4.1: Official Product Overview Video demonstrating the assembly and launching of a Beyblade X, highlighting the X-Dash gimmick and battle mechanics.

5. MAINTENANCE

- **Cleaning:** Wipe down your Beyblade and launcher with a soft, dry cloth after use to remove dust and debris. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store your Beyblade and launcher in a cool, dry place away from direct sunlight and extreme temperatures to prevent damage.
- **Inspection:** Regularly inspect all parts for wear and tear. Replace any damaged components to ensure optimal performance and safety.
- **No Batteries Required:** This product does not use batteries.

6. TROUBLESHOOTING

- **Beyblade not spinning correctly:** Ensure all Beyblade components (Blade, Ratchet, Bit) are securely assembled. Check for any obstructions or damage to the Bit.
- **Launcher not working:** Verify that the Long Winder is correctly inserted into the Hold Launcher and that the Beyblade is properly attached. Ensure the winder is pulled with sufficient force.
- **Low Impact/Speed:** Practice your launching technique. A swift, strong pull of the Long Winder is crucial for activating the X-Dash gimmick effectively. Ensure you are using a dedicated Beyblade X stadium.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	1.97 x 1.97 x 1.97 inches
Item Weight	8.8 ounces
Manufacturer Recommended Age	6 years and up
Power Source	No batteries required
Required Accessories	Dedicated Beyblade X series stadium (sold separately)
Manufacturer	TAKARA TOMY

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official TAKARA TOMY website. Keep your purchase receipt for any warranty claims.

