

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ANGELBLISS](#) /

› [ANGELBLISS Baby Playpen Instruction Manual \(Model: 71x71in\)](#)

ANGELBLISS 71x71in

ANGELBLISS Baby Playpen Instruction Manual

Model: 71x71in

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembling and using the ANGELBLISS Baby Playpen. Keep this manual for future reference.

- Always supervise your child while they are in the playpen.
- Ensure all parts are correctly assembled and securely locked before placing a child inside.
- Do not leave children unattended.
- Do not modify the playpen or use non-original replacement parts.
- Keep the playpen away from open flames, heaters, and other heat sources.
- Do not place toys with long strings or cords in the playpen to prevent strangulation hazards.
- Regularly inspect the playpen for any signs of wear, damage, or loose parts. Discontinue use if any damage is found.
- The playpen is designed for children who cannot climb out and are under 36 inches (91 cm) tall.
- Padding is not included with this playpen. Consider adding appropriate padding for comfort and safety.

2. PACKAGE CONTENTS

Verify that all components are present before assembly:

- ANGELBLISS Baby Playpen Frame (pre-assembled, foldable)
- Fabric Cover with Mesh Panels
- 2 Handlers (for assisting baby to stand)
- 50 Play Balls (optional accessory)
- Instruction Manual (this document)



Image: Overview of the ANGELBLISS Baby Playpen and its components, including the foldable frame, fabric cover, handlers, and play balls.

3. SETUP INSTRUCTIONS

The ANGELBLISS Baby Playpen is designed for quick and easy setup. Follow these steps:

3.1 Unfolding the Playpen

1. Place the folded playpen on a flat, stable surface.
2. Gently pull the sides of the playpen outwards until the frame begins to expand.
3. Ensure all four corners are fully extended and locked into place. You may hear a click as the connectors engage.

UPGRADED CONNECTORS

Makes your assembling easier and quicker



Image: Detail of the upgraded connector mechanism, showing how to engage and disengage for assembly and folding.

3.2 Attaching the Fabric Cover

1. Once the frame is fully extended, drape the fabric cover over the frame.
2. Secure the fabric cover to the frame using the integrated fasteners (e.g., Velcro straps, clips) located on the underside or edges of the fabric. Ensure a snug fit.
3. Verify that the mesh panels are taut and free from wrinkles.

3.3 Attaching Handlers

1. Locate the two handlers provided.
2. Attach the handlers to the top rail of the playpen at desired locations, ensuring they are securely fastened. These are designed to assist your child in pulling themselves up.



Image: The two handles securely attached to the top rail, providing support for a child learning to stand.

4. OPERATING INSTRUCTIONS

4.1 Using the Zippered Side Panel

The playpen features a zippered side panel for easy access. This allows children to crawl in and out independently under supervision, or for parents to enter the playpen comfortably.

- To open: Unzip the external zipper.
- To close: Zip up the external zipper completely to secure the opening.
- The internal zipper is for storage access and should remain closed when a child is inside.



Image: A baby exiting the playpen through the zippered side panel, demonstrating the ease of access.

4.2 Folding the Playpen for Storage or Travel

The playpen can be folded quickly for compact storage or transport.

1. Remove any items, including children and toys, from the playpen.
2. Locate the release mechanisms on the frame (refer to Section 3.1 for connector details).
3. Press the release buttons and push the sides of the playpen inwards until it collapses into its folded position.
4. Ensure all parts are securely folded. The playpen should stand upright in its folded state.



Image: A woman folding the playpen, illustrating the compact storage capability.

5. MAINTENANCE

Proper maintenance ensures the longevity and safety of your playpen.

- **Cleaning:** The fabric cover can be spot cleaned with a damp cloth and mild soap. Allow to air dry completely before folding or storing. Do not use harsh chemicals or abrasive cleaners.
- **Inspection:** Regularly check all connectors, zippers, and fabric for tears, fraying, or damage. Ensure

all frame components are intact and free from bends or breaks.

- **Storage:** When not in use, store the folded playpen in a dry, cool place, away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Playpen does not fully expand or lock.	Connectors are not fully engaged.	Ensure all four corners are pulled outwards until they click into place. Check for any obstructions.
Playpen feels unstable.	Improper assembly or uneven surface.	Re-check all connections to ensure they are locked. Place the playpen on a flat, level surface.
Zipper is stuck or difficult to operate.	Fabric caught in zipper or zipper damage.	Gently free any fabric caught. If damaged, discontinue use and contact customer support.

7. SPECIFICATIONS

- **Model:** 71x71in
- **Dimensions (Assembled):** Approximately 71 x 71 x 27 inches (180 x 180 x 70 cm)
- **Folded Size:** Approximately 22 inches (L) x 6 inches (W) x 5 inches (H)
- **Material:** Steel frame, 300D Oxford fabric cover, breathable mesh
- **Item Weight:** Approximately 11 pounds
- **Color:** Black
- **Age Range:** Suitable for infants and toddlers who cannot climb out.

8. WARRANTY AND SUPPORT

For warranty information, product support, or to report any issues, please contact ANGELBLISS customer service directly. Refer to the product packaging or the official ANGELBLISS website for contact details.

Website: [ANGELBLISS Store on Amazon](#)

© 2025 ANGELBLISS. All rights reserved.

Related Documents - 71x71in

	<p><u>ANGELBLISS Playpen Installation Instructions</u></p> <p>Detailed installation guide for the ANGELBLISS Playpen, ensuring safe and correct assembly for your child's activity center.</p>
 <p>Model No.: BY083B THE PICTURE IS FOR REFERENCE ONLY. PLEASE REFER TO THE ACTUAL PRODUCT.</p>	<p><u>ANGELBLISS BY083B Stationary Swing User Manual and Safety Guide</u></p> <p>Comprehensive user manual for the ANGELBLISS BY083B Stationary Swing. Provides detailed instructions on safety precautions, product assembly, operation of various swing modes, remote control usage, cleaning, maintenance, and warranty information for infant comfort and safety.</p>
 <p>Model No.: BCR08 Instruction Manual • Read all instructions carefully before assembling and using the product. • Important Reminder: Please keep the user manual for future use.</p>	<p><u>Angelbliss BCR08 Portable Bassinet & Bedside Sleeper Instruction Manual</u></p> <p>Comprehensive instruction manual for the Angelbliss BCR08 Portable Bassinet & Bedside Sleeper, covering setup, operation, safety guidelines, and maintenance. Learn how to safely assemble, adjust, fold, and use the bassinet in bedside sleeper mode.</p>
 <p>Model No.: S801 User Manual</p>	<p><u>Angelbliss Baby Swing S801 User Manual: Installation, Operation, and Safety Guide</u></p> <p>Comprehensive user manual for the Angelbliss Baby Swing Model S801. Includes safety warnings, product specifications, installation instructions, operating guide, and care instructions.</p>
	<p><u>ANGELBLISS Playpen Installation Instructions</u></p> <p>Detailed installation guide for the ANGELBLISS Playpen, ensuring safe and correct assembly for your child's activity center.</p>

Angelbliss

Stationary Swing



Model NO: BY083B

THE PICTURE IS FOR REFERENCE ONLY PLEASE REFER TO THE ACTUAL PRODUCT

[ANGELBLISS BY083B Stationary Swing User Manual and Safety Guide](#)

Comprehensive user manual for the ANGELBLISS BY083B Stationary Swing. Provides detailed instructions on safety precautions, product assembly, operation of various swing modes, remote control usage, cleaning, maintenance, and warranty information for infant comfort and safety.