

BEARBISU H15

# BEARBISU H15 Digital Camera User Manual

MODEL: H15

This manual provides instructions for operating the BEARBISU H15 Digital Camera, featuring 44MP photos, 1080P video recording, 16X digital zoom, and anti-shake functionality. Learn about setup, usage, maintenance, and troubleshooting.

## 1. Product Overview

The BEARBISU H15 Digital Camera is a compact and user-friendly device designed for capturing high-quality photos and videos. It features a 44MP sensor for still images and records in Full HD 1080P video. Key functionalities include 16X digital zoom, anti-shake technology, and various creative filters.



Image 1: Front view of the BEARBISU H15 Digital Camera, showcasing its lens and flash.

## Package Contents:

- BEARBISU H15 Digital Camera Body & Lens
- 64GB Memory Card
- USB-C Charging Cable
- Neck Strap
- Battery
- Adapter
- Instruction Manual

## 2. Setup

1. **Insert Memory Card:** Locate the memory card slot on the side of the camera. Gently insert the provided 64GB memory card until it clicks into place. Ensure the card is oriented correctly.

Your browser does not support the video tag.

Video 1: Demonstrates inserting the memory card and attaching the neck strap to the camera.

2. **Charge the Battery:** Connect the camera to a power source using the included USB-C charging cable and adapter. The charging indicator light will illuminate. A full charge is recommended before first use.
3. **Attach Neck Strap:** Thread the neck strap through the designated loop on the camera body as shown in the video. This helps prevent accidental drops.
4. **Power On:** Press and hold the power button (usually marked with a circle and a line) to turn on the camera.
5. **Initial Settings:** Upon first power-on, you may be prompted to set the date and time. Navigate using the directional buttons and confirm with the OK button.

## 3. Operating Instructions

### 3.1 Taking Photos

1. **Switch to Photo Mode:** Use the Mode switch key to select the photo icon.
2. **Frame Your Shot:** Use the LCD screen to compose your image.

# Full HD 1080P & 44MP



**Photo**



**Video**



**1080P**



**44MP**

Image 2: The camera's display showing photo and video capabilities at 1080P and 44MP resolution.

3. **Zoom:** Use the W (Wide) and T (Telephoto) buttons to adjust the 16X digital zoom.



# Creative Pictures & Videos



Image 3: Illustration of the 16X digital zoom feature, showing how to capture distant subjects.

4. **Capture Photo:** Press the Shutter button firmly to take a picture. The anti-shake feature helps stabilize images.
5. **Apply Filters:** Navigate through the menu to access 20 unique filters to add creative effects to your photos.
6. **Self-Timer:** Activate the self-timer function (2s, 5s, or 10s) from the menu for delayed shots.
7. **Continuous Shooting:** Enable continuous shooting mode to capture a rapid sequence of photos.



Image 4: Demonstrates self-timer, continuous shooting, and anti-shake functions for versatile photography.

8. **Fill Light:** Use the built-in fill light for improved illumination in low-light conditions.

### 3.2 Recording Videos

1. **Switch to Video Mode:** Use the Mode switch key to select the video icon.
2. **Start/Stop Recording:** Press the Shutter button to start recording. Press it again to stop.
3. **Audio:** The built-in microphone captures audio during video recording.

### 3.3 Playback and Deletion



1. **View Files:** Press the View key to enter playback mode. Use the directional buttons to browse photos and videos.
2. **Delete Files:** In playback mode, select the file you wish to delete and press the Delete key. Confirm your selection.

## 4. Maintenance

- **Charging:** Recharge the camera using the provided USB-C cable. Avoid using third-party chargers that are not certified.
- **Memory Card Care:** Regularly back up your photos and videos to a computer. Format the memory card periodically (via camera settings) to maintain optimal performance.
- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.

## 5. Troubleshooting

Problem	Possible Cause	Solution
Camera does not power on.	Low battery.	Charge the camera fully.
Cannot take photos/videos.	Memory card full or not inserted correctly.	Check memory card insertion, delete old files, or format the card. Ensure sufficient battery.
Images are blurry.	Insufficient light, camera shake, or subject too close/far for focus.	Use fill light, hold camera steady, ensure subject is within focus range.
Battery drains quickly.	Frequent use of flash, continuous recording, or screen brightness too high.	Reduce screen brightness, limit flash use, or carry a portable charger for extended use.
Memory card not recognized.	Incorrect insertion or card damage.	Re-insert the card correctly. If issues persist, try a different compatible memory card.

## 6. Specifications

Feature	Detail
Brand	BEARBISU
Model Name	Digital Camera (H15)
Maximum Webcam Image Resolution	44 MP
Video Resolution	1080p
Optical Zoom	16 x
Image Stabilization	Digital
Photo Sensor Technology	CMOS

Feature	Detail
Screen Size	2.4 inches
Display Type	LCD
Memory Storage Capacity	64 GB (included card)
Connectivity Technology	Micro USB
Battery Cell Type	Lithium Ion
Special Features	Anti Shake, Self Timer, Fill Light


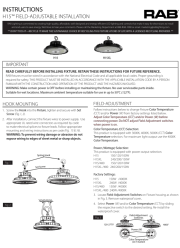


## 7. Warranty and Support

The BEARBISU H15 Digital Camera comes with a **1-year warranty** from the manufacturer. For any product inquiries, technical assistance, or warranty claims, please refer to the contact information provided with your purchase documentation or visit the official BEARBISU support website.




© 2025 BEARBISU. All rights reserved.

## Related Documents - H15

	<p><a href="#">Dreame H15 Mix Wet and Dry Vacuum User Manual</a></p> <p>User manual for the Dreame H15 Mix Wet and Dry Vacuum Floor Washer, providing detailed instructions on safety, operation, maintenance, troubleshooting, and specifications for optimal cleaning performance.</p>
	<p><a href="#">RAB H15 Series Field-Adjustable LED High Bay Installation Guide</a></p> <p>Comprehensive installation instructions for the RAB H15 and H15XL series field-adjustable LED high bay light fixtures. Covers hook, surface, and pendant mounting, field-adjustable CCT and wattage settings, wiring, maintenance, and troubleshooting.</p>
	<p><a href="#">Motorola MOTOPURE H15 Universal Flip Bluetooth Headset User Manual</a></p> <p>User guide for the Motorola MOTOPURE H15 Universal Flip Bluetooth Headset. Learn how to charge, wear, pair, use multipoint technology, manage calls, understand indicator lights, audio tones, and troubleshoot common issues.</p>
	<p><a href="#">H15 Bone Conduction Wireless Headset User Manual   Shenzhen Xingren Eucalyptus NetworkCo., Ltd.</a></p> <p>Comprehensive user manual for the H15 bone conduction wireless headset, covering features, controls, specifications, charging, safety, and FCC compliance from Shenzhen Xingren Eucalyptus NetworkCo., Ltd.</p>



	<p><a href="#">GADMEI H15 3-in-1 Fast Wireless Charger User Manual</a></p> <p>Comprehensive user manual for the GADMEI H15 3-in-1 Fast Wireless Charger. Provides setup instructions, operation steps, device compatibility, specifications, and FCC compliance information for charging smartphones, Apple Watches, and AirPods.</p>
	<p><a href="#">JETE Portable Tripod Stand H15 User Manual and Warranty Information</a></p> <p>Comprehensive user manual and warranty details for the JETE Portable Tripod Stand H15, including setup, usage, maintenance, and warranty claim procedures.</p>