



[Manuals.plus](#) /

› [ForeverPRO](#) /

› ForeverPRO WX05X12009 Appliance Slides User Manual

ForeverPRO WX05X12009

ForeverPRO WX05X12009 Appliance Slides User Manual

Model: WX05X12009

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your ForeverPRO WX05X12009 Appliance Slides. These slides are designed as a replacement part compatible with various GE appliances, facilitating easier movement for cleaning or service.

SAFETY INFORMATION

Please read all safety instructions before attempting installation or use. Failure to follow these instructions may result in injury or damage to the appliance.

- Always disconnect power to the appliance before beginning any installation or maintenance.
- Wear appropriate personal protective equipment, such as gloves and safety glasses.
- Ensure the appliance is stable and properly supported before attempting to move it or install slides.
- If you are unsure about any step, consult a qualified technician.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 2 x ForeverPRO WX05X12009 Appliance Slides

INSTALLATION INSTRUCTIONS

These appliance slides are designed for replacement. The exact installation procedure may vary slightly depending on your specific GE appliance model. Always refer to your appliance's original service manual for detailed instructions if available.

1. **Prepare the Appliance:** Disconnect the appliance from its power source. Carefully pull the appliance away from the wall just enough to access the area where the slides are located. If the appliance is heavy, enlist assistance to prevent injury.
2. **Locate Existing Slides:** Identify the current appliance slides. These are typically located on the bottom edges of the appliance, designed to help it glide.
3. **Remove Old Slides:** Depending on the design, the old slides may be snapped into place, screwed in, or held by adhesive. Carefully remove them. You may need a screwdriver or pry tool.
4. **Clean the Area:** Clean any debris or residue from the area where the new slides will be installed.
5. **Install New Slides:** Position the new ForeverPRO WX05X12009 Appliance Slides in the designated locations. Ensure the cutout or handle portion is oriented correctly for easy gripping. Press firmly or secure with screws if applicable, ensuring they are flush and stable.
6. **Test Movement:** Gently push and pull the appliance to ensure it slides smoothly on the new components.
7. **Reconnect Power:** Once installation is complete and verified, reconnect the appliance to its power source.

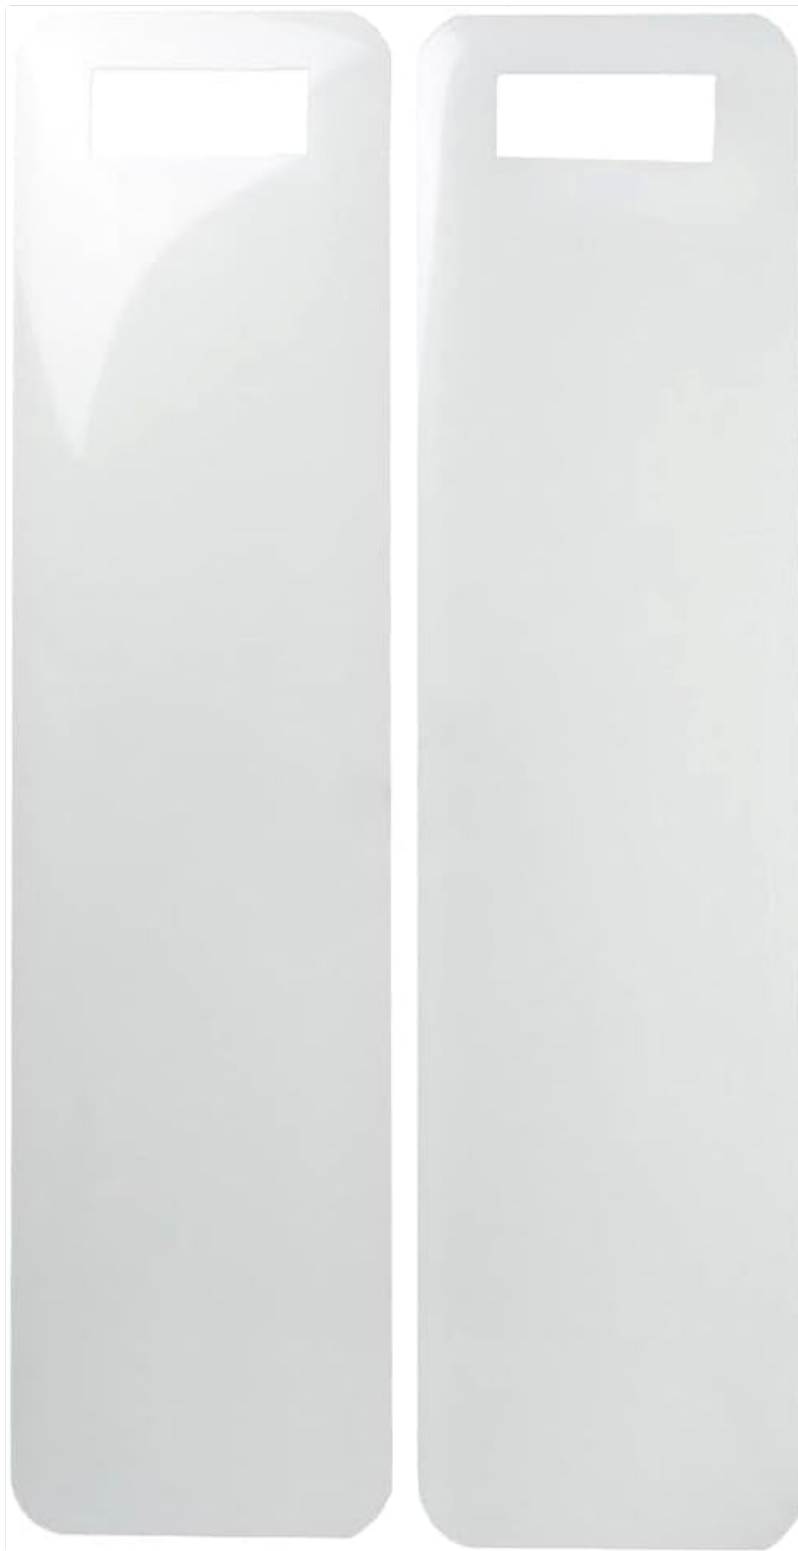


Image: Two ForeverPRO WX05X12009 Appliance Slides. These white, rectangular slides feature a cutout at one end, designed to assist in moving heavy appliances.

OPERATING INSTRUCTIONS

Once installed, the appliance slides are designed to facilitate the movement of your appliance for cleaning or maintenance.

- **Moving the Appliance:** To move the appliance, ensure it is disconnected from power and any water/gas lines if applicable. Grip the appliance firmly and gently pull or push it. The slides will reduce friction, allowing for easier movement.
- **Returning the Appliance:** Carefully guide the appliance back into its original position. Ensure it is

properly aligned and stable before reconnecting power and any utility lines.

MAINTENANCE

Proper maintenance ensures the longevity and effectiveness of your appliance slides.

- **Cleaning:** Periodically inspect the slides and the area beneath the appliance for dirt, dust, or debris. Clean with a damp cloth as needed. Avoid abrasive cleaners.
- **Inspection:** Check the slides for any signs of wear, cracks, or damage. If a slide is damaged, it should be replaced to ensure smooth operation and prevent floor damage.

TROUBLESHOOTING

If you encounter issues with your appliance slides, consider the following:

- **Appliance not sliding smoothly:**
 - Check for debris under the appliance or on the slides.
 - Ensure the slides are correctly installed and not misaligned.
 - Verify that the floor surface is clean and free of obstructions.
- **Slides appear damaged:**
 - If slides are cracked or broken, they need to be replaced. Continued use of damaged slides can scratch floors or make appliance movement difficult.

SPECIFICATIONS

Feature	Detail
Model Number	WX05X12009
Manufacturer	ForeverPRO
Item Weight	8 ounces
Product Dimensions	9 x 6 x 4 inches
Included Components	Appliance Slides 2 Pack

WARRANTY AND SUPPORT

Warranty: This product comes with a 90-day manufacturer's warranty from the date of purchase. Please retain your proof of purchase for warranty claims.

Support: For technical assistance, replacement parts, or warranty inquiries, please contact ForeverPRO customer support. Refer to the packaging or the retailer's website for contact information.

ForeverPRO is a USA Based Company.

