

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Gofunly](#) /
- › [Gofunly Kids Instant Print Camera H6 User Manual](#)

Gofunly H6

Gofunly Kids Instant Print Camera H6 User Manual

Model: H6

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Gofunly Kids Instant Print Camera, Model H6. Please read this manual thoroughly before operating the device and retain it for future reference.



Image: The Gofunly Kids Instant Print Camera H6, purple model.

PACKAGE CONTENTS

Upon opening your Gofunly Kids Instant Print Camera package, you should find the following items:

- Gofunly Kids Instant Print Camera (Model H6)
- USB Charging Cable
- Lanyard
- 3 Rolls of Print Paper
- 32GB SD Card (pre-installed or included)
- Color Markers (for decorating printed photos)

Gofunly Kids Camera Instant Print



Image: All items included in the Gofunly Kids Instant Print Camera package.

SETUP

1. Charging the Camera

Before first use, ensure the camera is fully charged. Connect the provided USB charging cable to the camera's USB port and to a compatible USB power source (e.g., computer, wall adapter). The charging indicator will show the charging status.



Image: Illustration of the USB charging port and SD card slot on the camera.

2. Installing Print Paper

The camera uses thermal print paper. Follow these steps to install or replace a roll:

1. Pull open the film door on the side of the camera.
2. Insert a new roll of print paper, ensuring the paper feeds out from the top and approximately 1-2 inches are extended.
3. Close the film door securely.
4. The camera is now ready to print photos.



Image: Step-by-step guide for installing print paper.

Your browser does not support the video tag.

Video: Demonstration of how to install print paper into the camera.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the power button to turn the camera on or off.

2. Basic Camera Functions

The camera features a 2.4-inch IPS screen and intuitive controls. Navigate through the menu using the directional buttons and confirm selections with the 'OK' button.

- **Camera Mode:** Capture color photos.
- **Video Mode:** Record 1080P HD videos.
- **Music Player:** Play stored music files.
- **Games:** Enjoy 4 built-in puzzle games.
- **Playback:** View captured photos and videos.
- **Settings:** Adjust camera parameters.



Image: Overview of the camera's multifunctional capabilities.

3. Taking Photos and Printing

In Camera Mode, press the shutter button to take a photo. The camera can instantly print black-and-white photos using thermal paper. You can also choose to save photos to the 32GB SD card without printing.



Image: The camera capturing and printing a black and white photo.

Your browser does not support the video tag.

Video: A child demonstrating taking a photo and printing it instantly.

4. Using Frames and Filters

The camera includes various frames and filters to enhance photos. Access these options through the camera's menu before taking a picture.

30 Funny Frames & 6 Photo Filters



Image: Examples of frames and filters available on the camera.

5. Digital Zoom

The camera supports up to 10x digital zoom. Use the zoom buttons to adjust the magnification before capturing an image or video.



Image: Illustration of the camera's 10x digital zoom feature.

6. Flash Function

The camera has a built-in flash for low-light conditions. Activate or deactivate the flash through the camera settings.

Caution: Do not look directly into the flash light when it is on.

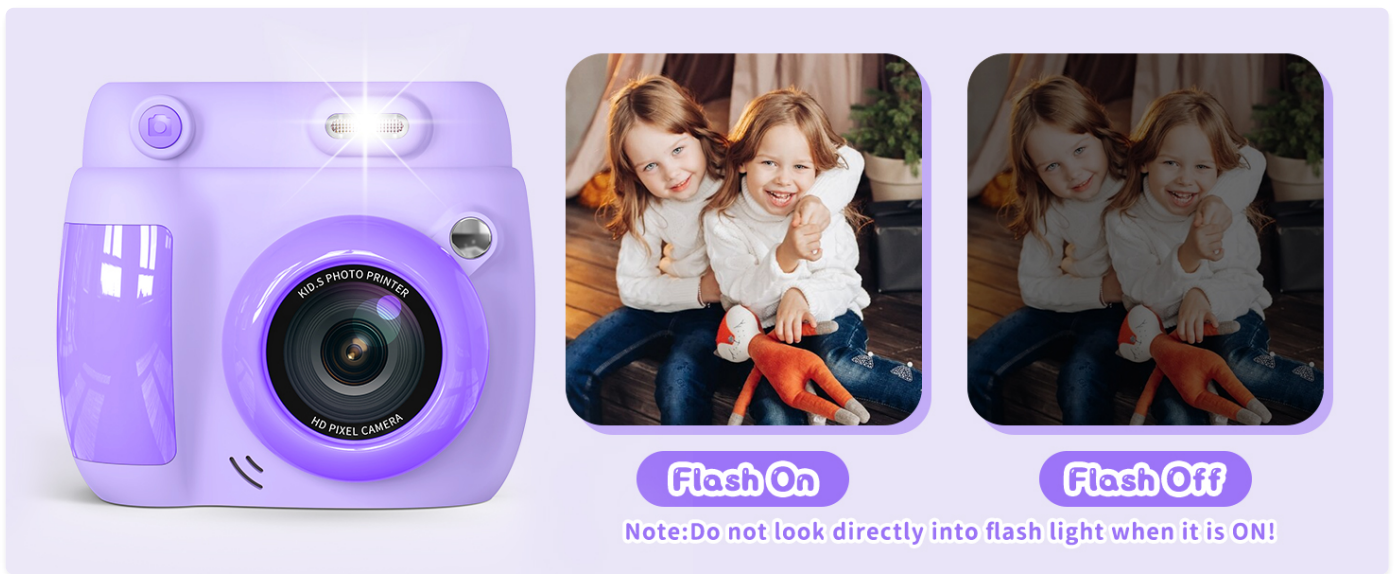


Image: Comparison of photos taken with flash on and flash off.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body and screen. Do not use liquid cleaners or solvents.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge regularly.
- **Paper Storage:** Keep print paper rolls in a dry place, away from moisture and heat, to ensure optimal print quality.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Low battery.	Charge the camera fully using the provided USB cable.
Photos are not printing.	Print paper incorrectly installed or depleted.	Check paper installation (refer to "Installing Print Paper" section) or replace the paper roll.
Poor print quality.	Low battery, old paper, or dirty print head.	Ensure camera is charged. Replace paper. Gently clean the print head if accessible (refer to manual for specific instructions if available).
Cannot save photos/videos.	SD card full or not inserted correctly.	Check if the 32GB SD card is properly inserted. Delete old files or format the card if necessary (backup important data first).

SPECIFICATIONS

Feature	Detail
Brand	Gofunly
Model Name	H6
Color	Purple
Screen Size	2.4 Inches

Feature	Detail
Total Still Resolution	48 MP
Effective Still Resolution	12 MP
Video Resolution	1080p
Frame Rate	30 FPS
Optical Zoom	10 x
Image Stabilization	False
Supported File Format	JPEG, MP4
Battery Capacity	1000 Milliamp Hours
Recording Capacity	2 Hours
Memory Storage Capacity	32 GB (External-Memory Size)
Special Feature	Built In Flash
Material	Plastic
Water Resistance Level	Not Water Resistant

WARRANTY INFORMATION

The product information indicates that there is no explicit warranty provided for this item. Please refer to the retailer's return policy for details on returns or exchanges.

SUPPORT

For any questions or assistance regarding your Gofunly Kids Instant Print Camera, please contact Gofunly customer support. They offer 24/7 professional customer support.

You can also visit the official Gofunly store for more product information and support: [Gofunly Store](#)

