

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Jectse](#) /

› [Jectse 80mm Thermal Receipt Printer User Manual](#)

### Jectse Jectsega4vnm10yk-12

## Jectse 80mm Thermal Receipt Printer User Manual

Model: Jectsega4vnm10yk-12

### INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Jectse 80mm Thermal Receipt Printer. Please read this manual carefully before using the device to ensure proper functionality and longevity.

### PACKAGE CONTENTS

Verify that all items are present in the package:

- Jectse 80mm Thermal Receipt Printer
- USB Cable
- Thermal Paper Roll (may be pre-installed or separate)
- User Manual (this document)



Image: The Jectse 80mm Thermal Receipt Printer (Orange White) shown alongside its included USB charging cable.

## SETUP

### 1. Loading Thermal Paper

1. Open the printer cover by gently lifting the orange transparent lid.
2. Insert the thermal paper roll with the printing surface facing upwards. Ensure the roll is seated correctly in the paper compartment.
3. Pull a small amount of paper out past the toothed blade.
4. Close the printer cover firmly until it clicks into place.



Image: Top view of the Jectse 80mm Thermal Receipt Printer with the orange transparent lid closed, indicating paper is loaded.

## 2. Powering On and Charging

- Connect the USB cable to the printer's charging port and the other end to a suitable USB power adapter or computer.
- Press and hold the power button (marked with a circle and vertical line) to turn the printer on. The power indicator

light will illuminate.

- The battery indicator lights will show the current charge level. Charge the printer fully before first use.

**Space Saving**  
**Internal paper capacity supports roll and folded thermal labels, eliminate the need for a label holder.**



Image: A close-up of the printer's control panel, showing the power button, battery indicator, and paper feed button.

### 3. Connectivity

The printer supports Ethernet connectivity. For mobile use, it is designed to connect wirelessly to devices such as smartphones.

- **Ethernet Connection:** Connect an Ethernet cable to the printer's Ethernet port and to your network router or switch.
- **Wireless Connection (e.g., Bluetooth):** Refer to your device's operating system or application instructions for pairing with a mobile printer. Typically, this involves enabling Bluetooth on your mobile device, searching for the printer, and pairing.



Image: The Jectse 80mm Thermal Receipt Printer shown next to a smartphone with a wireless signal icon, illustrating mobile connectivity.

## OPERATING INSTRUCTIONS

### Printing a Receipt/Label

1. Ensure the printer is powered on and connected to your device (via Ethernet or wirelessly).
2. Open the application or software from which you wish to print.
3. Select the print option within your application. Choose the Jectse 80mm Thermal Receipt Printer from the list of available printers.
4. Confirm print settings (e.g., paper size, orientation) if prompted.
5. Initiate the print job. The printer will begin printing.
6. Once printing is complete, use the integrated toothed blade to cleanly tear off the receipt or label.



Image: An angled view of the printer, highlighting its compact design and the paper output slot with the toothed blade.

## MAINTENANCE

### Cleaning the Printer

- Ensure the printer is powered off and disconnected from power before cleaning.
- Use a soft, lint-free cloth lightly dampened with isopropyl alcohol to clean the print head and the paper path.
- Do not use abrasive cleaners or spray liquids directly into the printer.
- Allow all components to dry completely before powering on the printer.

### Replacing Thermal Paper

Follow the steps outlined in the "Loading Thermal Paper" section under Setup when the paper roll is depleted.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Printer does not power on.	Low battery or power connection issue.	Charge the printer using the provided USB cable. Ensure the power adapter is working.

Problem	Possible Cause	Solution
No print output.	Paper loaded incorrectly, out of paper, or connectivity issue.	Check paper loading and ensure paper is not depleted. Verify network/wireless connection. Restart printer and device.
Print quality is poor.	Dirty print head or low battery.	Clean the print head as described in the Maintenance section. Ensure the printer is fully charged.
Cannot connect wirelessly.	Bluetooth/network not enabled or printer not discoverable.	Ensure Bluetooth is enabled on your mobile device. Check printer's network settings. Try restarting both devices.

## SPECIFICATIONS

- Model:** Jectsega4vnm10yk-12
- Product Dimensions:** 5.91 x 3.94 x 2.36 inches (15.01 x 10.01 x 5.99 cm)
- Item Weight:** 9.1 ounces (257.98 grams)
- Connectivity Technology:** Ethernet (and implied wireless for mobile use)
- Printing Technology:** Direct Thermal
- Printer Output:** Monochrome
- Max Print Speed Monochrome:** 80mm per second
- Special Feature:** Adjustable (likely referring to paper width or settings)
- Color:** Orange White
- Manufacturer:** Jectse
- Date First Available:** February 18, 2025

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Jectse website or contact their customer service directly. Keep your purchase receipt for warranty claims.

**Jectse Store Link:** [Visit the Jectse Store on Amazon](#)

© 2025 Jectse. All rights reserved.

## Related Documents - Jectsega4vnm10yk-12

	<p><a href="#">Phomemo Pocket Printer: Operation Instructions and Troubleshooting Guide</a></p> <p>Comprehensive guide for the Phomemo pocket label printer, covering setup, operation, app usage, troubleshooting, specifications, and safety warnings.</p>
	<p><a href="#">Roland VersaSTUDIO BT-12 User's Guide: Printing, Maintenance, and Troubleshooting</a></p> <p>Comprehensive user guide for the Roland VersaSTUDIO BT-12 textile printer, covering setup, fabric printing, error troubleshooting, machine maintenance, and ink replacement for professional garment customization.</p>
	<p><a href="#">Victron Energy Inverter VE.Direct 230V Manual</a></p> <p>Comprehensive user manual for the Victron Energy Inverter VE.Direct 230V Pure Sinewave. Covers safety, installation, configuration, operation, and technical specifications for models 12/250 through 12/1600. Includes details on ECO mode, battery management, and monitoring via VictronConnect and GX devices.</p>
	<p><a href="#">Victron Energy Inverter VE.Direct 230V Manual - Installation, Configuration, and Operation Guide</a></p> <p>Detailed user manual for the Victron Energy Inverter VE.Direct 230V. Covers safety instructions, general description, physical and electrical installation, configuration options, operation, protections, and monitoring via VictronConnect and GX devices.</p>
	<p><a href="#">Fujifilm Driver Settings for Epson Surecolor SC-P7500/9500 Printers with Fujifilm Media Profiles</a></p> <p>Detailed driver settings and Fujifilm media profile names for Epson Surecolor SC-P7500 and SC-P9500 printers. This guide details configurations for Fujifilm media using Epson UltraChrome Pro 12 inks (Photo Black and Matte Black).</p>
	<p><a href="#">Victron Energy VE.Direct 230V Inverter Manual</a></p> <p>This manual provides detailed information on the installation, configuration, and operation of the Victron Energy VE.Direct 230V Pure Sinewave Inverter. It covers safety instructions, general descriptions of features like ECO mode and Bluetooth connectivity, electrical and physical installation guidelines, configuration options via the VictronConnect app, operational procedures, protection mechanisms, and technical specifications.</p>

