

Manuals.plus /

› LiberLive /

› LiberLive C1 Stringless Smart Guitar User Manual

LiberLive C1

LiberLive C1 Stringless Smart Guitar User Manual

Model: C1

INTRODUCTION

Welcome to the LiberLive C1 Stringless Smart Guitar. This innovative instrument is designed to provide an accessible and engaging musical experience for users of all skill levels. The C1 features a stringless design for chord accompaniment, interactive app integration with LED indicators, and built-in rhythm and bassline capabilities. Its foldable and portable design makes it suitable for travel and on-the-go music creation. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your LiberLive C1.





Image Description: A full view of the LiberLive C1 Stringless Smart Guitar in a green finish. The guitar features a sleek, modern design with a neck that has illuminated pads and a body with a speaker grille. The instrument is shown in its unfolded, ready-to-play state.

SETUP

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed in the "What's in the Box" section are present and undamaged.

What's in the Box

- LiberLive C1 *1
- Storage Bag *1
- Guitar Strap *1
- User Manual *1
- Type-C Charging Cable *1



Image Description: An overhead shot displaying the contents of the LiberLive C1 package. Included are the green foldable smart guitar, a black zippered storage bag, a black guitar strap with "LiberLive" branding, a user manual, and a white USB Type-C charging cable.

2. What's in the Box

- LiberLive C1 Smart Guitar
- Storage Bag
- Guitar Strap
- User Manual
- Type-C Charging Cable

3. Initial Charging

Before first use, fully charge the LiberLive C1 using the provided Type-C charging cable and a compatible USB power adapter (not included). The charging indicator will show the charging status.

4. App Installation and Connection

1. Download the LiberLive app from your device's app store.
2. Ensure Bluetooth is enabled on your mobile device.
3. Power on the LiberLive C1.
4. Open the LiberLive app and follow the on-screen instructions to pair your device with the C1.

5. Unfolding the Guitar

The LiberLive C1 features a foldable design. Gently unfold the instrument until it locks securely into its playing position. Ensure it is fully extended before use.

OPERATING INSTRUCTIONS

1. Power On/Off

- To power on: Press and hold the power button located on the instrument until the indicators light up.
- To power off: Press and hold the power button until the indicators turn off.

2. Chord Generation (Stringless Play)

The LiberLive C1 generates chords through its paddle system. Each paddle flick plays a full chord, adapting to the song's key, tempo, and style as set in the app.

Chords with No Strings

Designed for music backing, every flick of the paddle plays a complete chord.



Image Description: A close-up view of the LiberLive C1's neck, highlighting the chord pads and their corresponding LED indicators. Text labels next to the pads show chord names like C, Dm, Em, F, G, Am, Bm, illustrating the stringless chord generation feature.

3. Interactive Chord Sheets and LED Indicators

The LiberLive app provides interactive chord sheets that synchronize with the LED indicators on the C1's neck. These LEDs guide you to the correct chord positions, simplifying the learning process.

Interactive Chord Sheets

Intuitive interactive chord sheets with LED sync – play and sing effortlessly!



Image Description: An image showing the LiberLive C1's neck with illuminated LED indicators alongside a smartphone displaying the LiberLive app. The app shows an interactive chord sheet for a song, with colored blocks representing chords (C, Dm, Am, F) that correspond to the illuminated LEDs on the guitar neck, demonstrating the synchronized guidance.

4. Built-in Drum Machine & Bassline

Activate the built-in drum machine and bassline features via the LiberLive app to create a full band sound, even when playing solo. Explore various genres and rhythm patterns.

One Person, One Band

Unlock a full band sound with built-in drums and bass, even when playing solo.



Image Description: A person playing the LiberLive C1 smart guitar in a dynamic pose, with graphic overlays indicating "DRUMS" and "BASS" to illustrate the built-in drum machine and bassline features that allow for a full band experience.

5. Versatile Sound Choices

The C1 offers a range of sound options, including piano and bass, along with nearly 100 rhythm patterns. These can be selected and customized through the LiberLive app.

Versatile Sound Choices

Experience diverse genres with piano & bass sounds and nearly 100 rhythm patterns at your fingertips.



Image Description: A person wearing headphones and playing the LiberLive C1 smart guitar, surrounded by various genre labels and sound options like "BASIC BASS," "POPULAR," and "JAZZ," demonstrating the versatile sound choices available through the instrument.

6. Advanced Features Overview

The LiberLive C1 integrates several advanced features for enhanced musical expression:

- **Transpose Knob:** Explore 12-key transpositions via the app.
- **LED Indicators:** App-synced for chord guidance.
- **Chord Pad:** Customizable with 72 advanced chords.
- **Beat Pad:** For tempo tapping.
- **Mute Pad:** To silence the sound.
- **Strumming Paddles:** For dynamic strumming.
- **Fingerpicking Pad:** Emulates acoustic guitar six-string playing.
- **Volume Knob:** Adjusts the output volume.
- **3.5mm Line-Out:** For connecting to headphones or external speakers.

Advanced Technology for Premium Sound



Image Description: A detailed diagram of the LiberLive C1 smart guitar, pointing out its various components and features. Labels include "Transpose Knob," "LED Indicators," "Chord Pad," "Beat Pad," "Mute Pad," "Strumming Paddles," "Fingerpicking Pad," "Built-in Speaker," "Volume Knob," and "3.5mm Line-Out."

7. Connecting to Audio Devices

For private practice, connect headphones to the 3.5mm Line-Out jack. For amplified sound, connect the Line-Out to an external speaker system.

APP FEATURES

The LiberLive app is central to the C1's functionality, offering a comprehensive suite of tools:

- **Rich Song Library:** Access a wide selection of songs with interactive chord sheets.
- **Custom Chord Sheets:** Create, upload, and share your own chord sheets.
- **Sound Options:** Choose from various instrument sounds like piano and bass.
- **Rhythm Patterns:** Select from nearly 100 rhythm patterns across diverse genres.

- **Key Transposition:** Easily change the key of songs to suit your vocal range.

MAINTENANCE

1. Cleaning

Wipe the surface of the LiberLive C1 with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish. Do not expose the instrument to excessive moisture.

2. Battery Care

- Charge the battery regularly, even if the instrument is not used frequently, to maintain battery health.
- Avoid fully discharging the battery for extended periods.
- Store the instrument in a cool, dry place when not in use.

3. Storage and Portability

Due to its foldable design, the LiberLive C1 is highly portable. When transporting or storing, fold the guitar and place it in the provided storage bag to protect it from dust and physical damage.

Foldable & Portable

Just 1900g / 4.1lb, with a folded size comparable to a laptop for easy travel.



Image Description: A person holding the LiberLive C1 smart guitar in its folded, compact state on their lap, demonstrating its portability and ease of travel. The guitar is shown in a black finish.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound output	Volume too low; Mute function active; External audio device not connected or faulty.	Increase volume using the knob or app. Deactivate Mute Pad. Check external audio connections and device functionality.
Cannot connect to app via Bluetooth	Bluetooth off on device; C1 not in pairing mode; App issue.	Ensure Bluetooth is enabled on your mobile device. Restart the C1 and the app. Try re-pairing through the app's settings.
LED indicators not responding	App not connected or synchronized; Low battery.	Verify app connection and song synchronization. Charge the C1 battery.
Instrument not powering on	Battery discharged; Power button not pressed correctly.	Charge the C1 fully. Press and hold the power button firmly for a few seconds.

SPECIFICATIONS

Feature	Detail
Model Number	C1
Brand	LiberLive
Item Weight	8.48 pounds (approximately 3.85 kg)
Product Dimensions (Unfolded)	10.4 x 3.2 x 31.8 inches (approximately 26.4 x 8.1 x 80.8 cm)
Battery Type	2 Lithium Polymer batteries (included)
Body Material	ABS + PC Spray-free composite materials
Fretboard Material	Silicone
String Material	No Strings
Connector Type	3.5mm Audio Jack
Hand Orientation	Ambidextrous

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the official LiberLive website or the warranty card included with your product.

If you encounter any issues or require technical assistance, please contact LiberLive customer support. Contact details can typically be found on the official LiberLive website or within the LiberLive app.

IMPORTANT SAFETY INFORMATION

- Do not attempt to disassemble or modify the LiberLive C1. This may void the warranty and cause damage.
- Keep the instrument away from water, extreme temperatures, and direct sunlight.
- Use only the provided charging cable or a certified equivalent.
- Ensure proper ventilation when charging.
- This product contains a lithium polymer battery. Dispose of it responsibly according to local regulations.

