

FLEXISPOT XC1

FLEXISPOT XC1 Recliner Chair User Manual

Model: XC1

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your FLEXISPOT XC1 Recliner Chair. Designed for comfort and durability, this adjustable recliner features high-quality faux leather upholstery and high-density sponge filling, suitable for various indoor settings.

The chair offers adjustable reclining positions from 100 to 150 degrees, allowing for reading, watching TV, or napping. Its modern design integrates seamlessly into home or office environments.

2. IMPORTANT SAFETY INFORMATION

- Always assemble the chair according to the provided instructions.
- Do not exceed the maximum weight recommendation of 250 pounds (113 kg).
- Exercise caution when adjusting the chair's position to prevent injury.
- Keep the chair away from heat sources and sharp objects to avoid damage to the upholstery.
- Ensure all electrical connections are secure and follow local electrical safety guidelines.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Recliner Base Frame
- Backrest Cushion
- Armrests (2)
- Power Adapter
- Remote Control (for massage function, if applicable)
- Assembly Hardware (screws, bolts, tools)
- Instruction Manual

4. SETUP AND ASSEMBLY

Assembly typically takes 10-15 minutes for one person. All necessary tools and parts are included.

- 1. Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent scratches.
- 2. Attach Backrest:** Align the backrest with the main frame. Slide the backrest into the designated slots on the base until it clicks securely into place. Ensure the metal clips are fully engaged.
- 3. Secure Armrests:** Attach the armrests to the sides of the chair frame. Fasten them using the provided screws and tools. Ensure they are firmly secured.
- 4. Connect Power:** Locate the power cord and connect it to the chair's power input, usually found underneath the seat. Plug the power adapter into a standard wall outlet.
- 5. Final Check:** Verify that all connections are secure and the chair is stable before use.



Figure 1: Product dimensions for the FLEXISPOT XC1 Recliner Chair.



Figure 2: The fully assembled FLEXISPOT XC1 Recliner Chair.

5. OPERATING INSTRUCTIONS

5.1 Reclining Function

The FLEXISPOT XC1 Recliner Chair offers adjustable reclining positions from 100 to 150 degrees. To recline, simply lean back gently. The footrest will extend as you recline. To return to an upright position, lean forward and push the footrest down with your legs.

Product Details



Figure 3: The chair reclines to various comfortable positions.

5.2 Massage Function (if applicable)

If your model includes a massage function, use the wired remote control to activate and adjust settings.

- **Power On/Off:** Press the power button on the remote to turn the massage function on or off.
- **Timer Settings:** Adjust the massage duration between 15 and 30 minutes using the timer button.
- **Vibration Intensity:** Use the up/down arrows to increase or decrease the vibration intensity.
- **Massage Options:** Select from eight different massage options to target specific areas or patterns.

Your browser does not support the video tag.

Video 1: Demonstration of the electric recliner chair's features and operation, including reclining and massage functions.

6. CARE AND MAINTENANCE

6.1 Upholstery Care

The faux leather upholstery is water-resistant and easy to clean.

- **Daily Cleaning:** Wipe the surface with a soft, damp cloth to remove dust and light spills.
- **Stain Removal:** For tougher stains, use a mild soap solution and a soft cloth. Gently rub the stained

area and then wipe clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners.

- **Drying:** Allow the upholstery to air dry completely. Do not use heat.



Figure 4: The water-resistant faux leather is easy to maintain.

6.2 Frame and Mechanism

- Periodically check all screws and bolts to ensure they are tight. Retighten if necessary.
- Keep the reclining mechanism free from obstructions.

7. TROUBLESHOOTING

- **Chair not reclining:** Ensure the power cord is securely plugged into both the chair and the wall outlet. Check for any obstructions in the reclining mechanism.
- **Massage function not working:** Verify the remote control is properly connected and the power is on. Check the power adapter connection.
- **Unstable chair:** Recheck all assembly screws and bolts to ensure they are tightened.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	FLEXISPOT
Model Name	XC1 (X2)
Color	Brown
Product Dimensions	27.6"D x 33.5"W x 39.3"H
Material	Faux Leather, High-Density Sponge
Maximum Weight Recommendation	250 Pounds (113 kg)
Reclining Position Count	3 (100 to 150 degrees)
Special Features	Adjustable Backrest, Arm Rest, Foot Rest, Power Recliner (with massage function)
Item Weight	52.9 pounds (24 kg)

9. WARRANTY AND SUPPORT

9.1 Return Policy

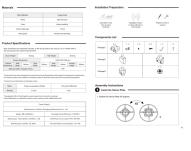
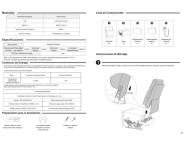
FLEXISPOT offers a 30-day return/exchange policy. You are allowed to return or exchange the furniture within 30 days of receiving it.

9.2 Customer Service

For any questions, support, or warranty claims, please contact FLEXISPOT customer service:

- **Email:** contact@flexispot.com
- **Phone:** +1(855)585-5618
- **Online:** Visit the [FLEXISPOT Store on Amazon](#) for more information and support.

Related Documents - XC1

	<p>FlexiSpot DT3B-EU User Manual and Warranty Information</p> <p>Comprehensive user manual for the FlexiSpot DT3B-EU height adjustable desk frame, including detailed assembly instructions, parts list, and warranty coverage information.</p>
	<p>FlexiSpot XP6 Pushback Recliner Chair User Manual</p> <p>User manual for the FlexiSpot XP6 Pushback Recliner Chair, providing assembly instructions, usage guidelines, maintenance tips, warnings, and troubleshooting information.</p>
	<p>FlexiSpot XP6 Pushback Recliner Chair User Manual</p> <p>Comprehensive user manual for the FlexiSpot XP6 Pushback Recliner Chair, covering assembly instructions, product specifications, usage guidelines, maintenance tips, warnings, and troubleshooting.</p>
	<p>FlexiSpot XC6 Recliner Chair User Manual: Assembly, Operation, and Safety Guide</p> <p>This user manual provides detailed assembly instructions, usage guidelines, maintenance tips, and safety warnings for the FlexiSpot XC6 recliner chair (Item No. XC6-BG-EU/XC6-OB-EU/XC6-LG-EU). Learn how to set up, operate, and safely use your chair.</p>
	<p>Flexispot Power Swivel Rocker Recliner Assembly and User Guide</p> <p>Detailed assembly instructions, product specifications, usage guidelines, and troubleshooting for the Flexispot Power Swivel Rocker Recliner. Learn how to set up and operate your new recliner chair safely and efficiently.</p>
	<p>FlexiSpot XR5 Electric Recliner Chair: Assembly, Specifications, and Operation Guide</p> <p>Comprehensive guide for the FlexiSpot XR5 electric recliner chair. Learn about its materials, specifications, energy efficiency, step-by-step assembly, switch functions, and troubleshooting. Includes power supply details and safety warnings.</p>