

JBL JBLXTREME4BLKAM

JBL Xtreme 4 Portable Bluetooth Speaker User Manual

Model: JBLXTREME4BLKAM

[Introduction](#) [Safety Information](#) [Features](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#)
[Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the JBL Xtreme 4 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before using your device.

Product Overview

The JBL Xtreme 4 is a high-performance portable Bluetooth speaker designed to deliver powerful JBL Pro Sound in any environment. It features robust audio components, including two 2.8-inch woofers and two 0.75-inch tweeters, complemented by dual passive radiators for enhanced bass. With AI Sound Boost technology, the speaker optimizes sound quality for a rich and clear audio experience. Its IP67 rating ensures it is both water and dustproof, making it suitable for outdoor adventures. The speaker offers up to 24 hours of playback, with an additional Playtime Boost feature for extended listening.

What's in the Box

- 1 x JBL Xtreme 4 Portable Bluetooth Speaker (Black)
- 1 x USB Type-C Cable
- 1 x Microfiber Cloth



Image 1.1: Contents of the JBL Xtreme 4 package, showing the speaker, USB-C charging cable, and a microfiber cleaning cloth.

2. SAFETY INFORMATION

Please observe the following safety guidelines to prevent damage to your speaker or personal injury:

- Do not expose the speaker to extreme temperatures (hot or cold).
- Do not disassemble, repair, or modify the speaker. This will void the warranty.
- Ensure the charging port cover is securely closed when the speaker is exposed to water or dust to maintain its IP67 rating.
- Use only the provided USB Type-C cable for charging.
- Keep the speaker away from direct heat sources, open flames, or strong magnetic fields.
- Avoid dropping the speaker or subjecting it to strong impacts.
- Clean the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.

3. PRODUCT FEATURES

- **JBL Pro Sound:** Delivers 100W of powerful, high-quality audio with deep bass and clear highs.
- **IP67 Water and Dustproof:** Designed to withstand immersion in water up to 1 meter for 30 minutes and is fully protected against dust ingress.
- **24 Hours Playtime:** Enjoy extended listening sessions on a single charge.
- **Playtime Boost:** Extends battery life by an additional six hours for even longer enjoyment.

- **AI Sound Boost:** Optimizes audio performance in real-time for dynamic sound.
- **Auracast™:** Seamlessly connect multiple Auracast-enabled JBL speakers for an expanded sound experience.
- **Built-in Powerbank:** Charge your external devices directly from the speaker.
- **Durable Design:** Equipped with robust rubber bumpers and a rugged exterior for protection.



Image 3.1: Side view of the JBL Xtreme 4, highlighting the passive radiator which contributes to the speaker's deep bass.

4. SETUP

4.1 Charging the Speaker

1. Locate the USB Type-C charging port on the speaker, typically found under a protective flap.
2. Connect the provided USB Type-C cable to the speaker's charging port.
3. Connect the other end of the USB Type-C cable to a compatible USB power adapter (not included) or a computer's USB port.
4. The LED indicator on the speaker will show charging status. It will turn off or change color when fully charged.
5. Ensure the protective flap is securely closed after charging to maintain water and dust resistance.



Image 4.1: Bottom view of the JBL Xtreme 4, showing the compartment for charging and power bank functionality.

4.2 Powering On/Off

- To power on, press the Power button located on the top panel of the speaker. The power indicator light will illuminate.
- To power off, press and hold the Power button until the indicator light turns off.

4.3 Bluetooth Pairing

1. Turn on the JBL Xtreme 4 speaker.
2. Press the Bluetooth button on the top panel. The Bluetooth indicator will flash, indicating it is in pairing mode.
3. On your mobile device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "JBL Xtreme 4" from the list of devices.
5. Once connected, the Bluetooth indicator will glow solid, and you will hear an audible confirmation.

4.4 Auracast™ Multi-Speaker Pairing

The JBL Xtreme 4 supports Auracast, allowing you to connect multiple Auracast-enabled JBL speakers for a synchronized audio experience. Refer to the JBL Connect app for detailed instructions on setting up Auracast groups.

5. OPERATING YOUR SPEAKER

5.1 Control Buttons



Image 5.1: Top view of the JBL Xtreme 4, displaying the control panel with buttons for power, Bluetooth, volume, and playback.

Button	Function
Power Button	Press to power on/off.
Bluetooth Button	Press to enter Bluetooth pairing mode.
Volume Down (-)	Press to decrease volume.
Volume Up (+)	Press to increase volume.
Play/Pause Button	Press once to play/pause audio. Press twice to skip to the next track. Press three times to skip to the previous track.

5.2 AI Sound Boost

The JBL Xtreme 4 features AI Sound Boost, which intelligently analyzes the audio signal in real-time and optimizes the speaker's output for the best possible sound quality. This feature operates automatically and does not require manual adjustment.

5.3 Playtime Boost

To extend your listening time, the Playtime Boost feature can provide an additional six hours of battery life. This mode may slightly adjust audio output to conserve power. Activate this feature via the JBL Portable app or by pressing a specific button combination (refer to the app or quick start guide for exact instructions).

5.4 Using the Powerbank Feature

The JBL Xtreme 4 can act as a power bank to charge your external devices. Connect your device to the speaker's USB-A output port (if available, typically under the same protective flap as the charging port) using a compatible USB cable. The speaker will automatically begin charging your device.

6. MAINTENANCE

6.1 Cleaning

- Wipe the speaker's exterior with the provided microfiber cloth or a soft, damp cloth.
- Do not use abrasive cleaners, alcohol, benzene, or other harsh chemicals, as these may damage the surface or internal components.
- If the speaker gets wet, wipe it dry with a clean cloth before charging or opening any ports.

6.2 Water and Dust Resistance (IP67)

The JBL Xtreme 4 is IP67 rated, meaning it is protected from dust ingress and can withstand immersion in 1 meter of water for up to 30 minutes. To maintain this rating:

- Always ensure the charging port cover is fully sealed before exposing the speaker to water or dust.
- Do not submerge the speaker in saltwater or other liquids besides fresh water.
- If the speaker is exposed to chlorinated water or saltwater, rinse it gently with fresh water and allow it to air dry completely before charging.

6.3 Storage

When storing the speaker for extended periods, ensure it is fully charged and stored in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker using the provided USB Type-C cable.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in pairing mode (flashing Bluetooth LED). Turn on Bluetooth on your device. Move device closer to speaker (within 10 meters).
No sound or low volume.	Volume too low on speaker or source device; speaker not connected.	Increase volume on both the speaker and your connected device. Ensure Bluetooth connection is established.
Sound distortion.	Volume too high; audio source quality.	Reduce volume. Try a different audio source or file.
Speaker not charging.	Cable or adapter issue; port obstruction.	Ensure cable is securely connected. Try a different USB port or power adapter. Check charging port for debris.

8. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Name	JBL Xtreme 4
Item Model Number	JBLXTREME4BLKAM
Brand	JBL
Speaker Type	Outdoor
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Speaker Maximum Output Power	100 Watts
Woofer Diameter	2.8 Inches
Tweeter Diameter	0.75 Inches
Audio Driver Type	Dynamic Driver
Audio Output Mode	Stereo
Power Source	Battery Powered
Control Method	Touch
Is Waterproof	Yes (IP67)
Item Weight	4 Pounds (approx. 1.81 kg)
Product Dimensions (L x W x H)	11.73 x 5.5 x 5.4 inches (approx. 29.8 x 14 x 13.7 cm)
Compatible Devices	Laptop, Smartphone, Tablet, Television
Surround Sound Channel Configuration	2.0
Includes MP3 player?	No
Mounting Type	Tabletop Mount
UPC	094148673325
Date First Available	October 9, 2024

9. WARRANTY & SUPPORT

9.1 Warranty Information

The JBL Xtreme 4 Portable Bluetooth Speaker comes with a **Limited Warranty**. For specific terms and conditions of your warranty, please refer to the warranty card included with your product or visit the official JBL website.

9.2 Customer Support

For technical assistance, troubleshooting, or further information about your JBL Xtreme 4 speaker, please visit the official

JBL support page or contact their customer service. You can find more information and resources on the [JBL Store on Amazon](#) or the main JBL website.

© 2024 JBL. All rights reserved. JBL is a trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question