

G40pro

Smartwatch User Manual

Model: G40pro

Brand: Generic

1. INTRODUCTION

This manual provides comprehensive instructions for the operation, maintenance, and troubleshooting of your new Smartwatch. Please read this manual carefully before using the device to ensure proper function and to maximize its capabilities. This Smartwatch is designed to enhance your daily life by providing convenient access to notifications, fitness tracking, and health monitoring features directly from your wrist.

2. WHAT'S IN THE BOX

Upon opening the package, please verify that all the following items are included:

- Smartwatch Unit
- Silicone Band
- Charging Cable
- User Manual (this document)

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Smartwatch.



Figure 3.1: Front view of the Smartwatch. This image shows the circular display, the crown button on the right side, and the textured black silicone band.

3.1 Components

- **Display:** 1.39-inch Full Touch Screen AMOLED display for clear visuals and interactive control.
- **Crown Button:** Located on the right side, used for navigation, power on/off, and returning to the home screen.
- **Sensors:** Located on the rear of the watch, these include the heart rate monitor and blood oxygen sensor.
- **Charging Contacts:** Magnetic contacts on the rear for connecting the charging cable.



Figure 3.2: Rear view of the Smartwatch. This image highlights the green optical sensors for heart rate and blood oxygen monitoring, along with the metallic charging contacts.

4. SETUP

4.1 Charging the Smartwatch

Before initial use, fully charge your Smartwatch. Connect the magnetic charging cable to the charging contacts on the back of the watch and plug the USB end into a compatible power adapter (not included) or a computer's USB port. The watch display will indicate charging status. A full charge typically takes approximately 2 hours.

4.2 App Installation and Pairing

To unlock the full potential of your Smartwatch, download and install the companion application on your smartphone. Refer to the QR code provided in the quick start guide (if applicable) or search for the recommended app name in your device's app store.

1. Ensure your Smartwatch is charged and powered on.
2. Enable Bluetooth on your smartphone.
3. Open the companion app and follow the on-screen instructions to search for and pair with your Smartwatch. The watch's Bluetooth name will typically be its model number or a similar identifier.
4. Confirm the pairing request on both your phone and the watch if prompted.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

- **Touch Screen:** Swipe left, right, up, or down to navigate through menus and screens. Tap to select an option.
- **Crown Button:** Press to wake the screen, return to the home screen, or access the app menu. Long press to power on/off.

Interesting interaction design

Interesting menu interaction design meets diversified aesthetics. Honeycomb circular menu, And an arc list menu. There is always one that suits you. There is also a pop-up shortcut menu by swiping to the right to quickly select frequently used functions recently.



Figure 5.1: Smartwatch menu interaction. This image illustrates different menu styles available on the smartwatch, including a honeycomb grid and a vertical list, demonstrating the intuitive navigation.

5.2 Customizing Watch Faces

Personalize your Smartwatch by changing the watch face. You can select from a variety of pre-installed faces or download more through the companion app. Some watch faces allow for further customization of displayed information.

Creative dial Marvellous appearance

Large number of dial faces in APP background can be provided for users to choose from, Such as technical,Sports, Mechanical, Cartoon...; Custom dials by yourself.
One of your favorite dial here!



Figure 5.2: Customizable watch faces. This image displays a selection of different digital and analog watch faces available, showcasing the variety of styles users can choose from to personalize their device.

5.3 Receiving Notifications

Once paired with your smartphone, the Smartwatch can display notifications for calls, text messages, and various applications. Ensure notification permissions are enabled in both your phone's settings and the companion app.

Smart reminder

Synchronize mobile phone information
keep in touch anytime, Anywhere



Figure 5.3: Smart reminder and notifications. This image shows the smartwatch displaying an incoming call and message icons, illustrating its ability to synchronize mobile phone information.

5.4 Music Control

Control music playback on your smartphone directly from your Smartwatch. This feature typically includes play/pause, skip track, and volume adjustment. Access this function through the music control icon on your watch's app menu.

6. FEATURES

6.1 Advanced Fitness Tracking

The Smartwatch is equipped with advanced sensors to track various fitness metrics, supporting over 123 sport modes. It records steps taken, distance covered, and calories burned throughout your day.

More than 150 kinds of activity modes for you to enjoy life.



Figure 6.1: Activity modes. This image depicts a person wearing the smartwatch during a workout, emphasizing the availability of numerous activity modes for diverse exercise routines.

6.2 Heart Rate and Blood Oxygen Monitoring

The device provides dynamic heart rate monitoring and real blood oxygen monitoring. These measurements can be accessed on demand or set for continuous tracking through the companion app. Consult a medical professional for any health concerns.

6.3 Sleep Monitoring

The Smartwatch automatically monitors your sleep patterns, recording the length of deep sleep, light sleep, and awake time. This data is synchronized with the app to help you understand and improve your sleep habits.

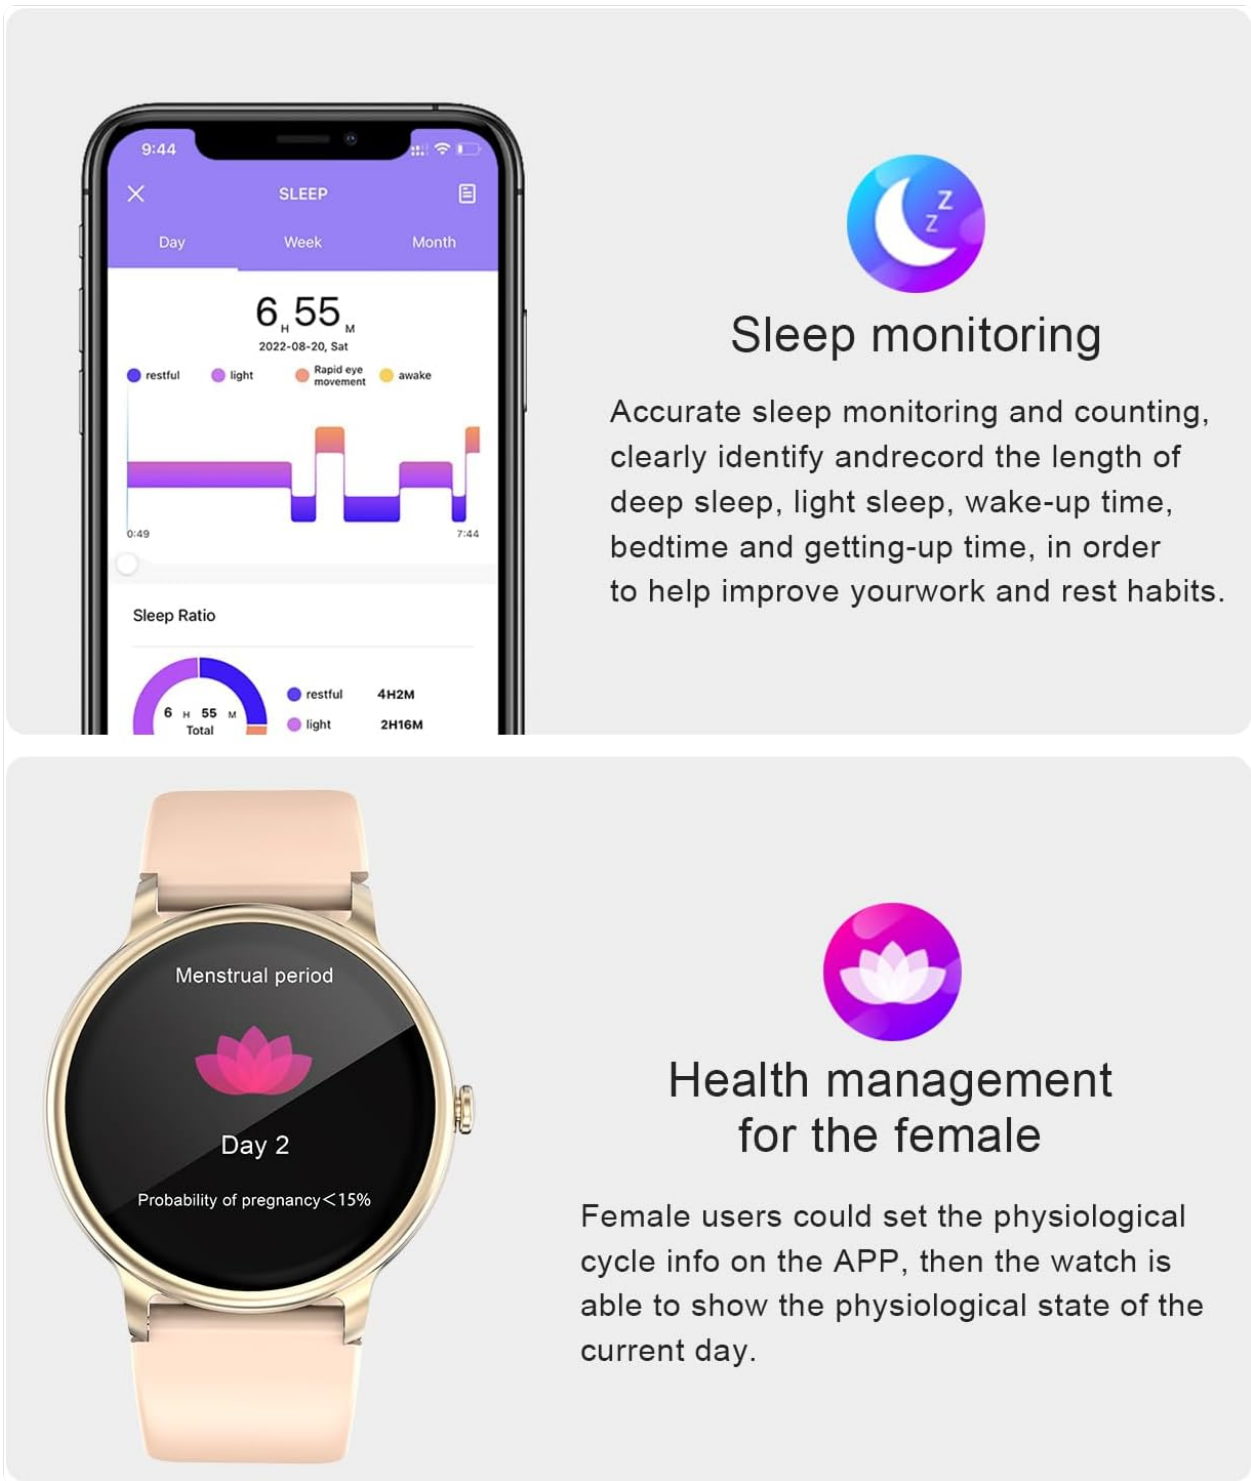


Figure 6.2: Sleep monitoring and health management. This image shows a smartphone app interface displaying detailed sleep analysis, including sleep stages and duration, alongside a smartwatch screen indicating menstrual period tracking for female users.

6.4 Water Resistance (IP67)

The Smartwatch is rated IP67 waterproof, meaning it is resistant to dust and can withstand immersion in water up to 1 meter for 30 minutes. This makes it suitable for daily situations like hand washing or light rain, but it is not recommended for swimming or showering.

IP67 Waterproof

It makes you to deal with various daily situations while doing sports even in face of wind and rain.



Figure 6.3: IP67 Waterproof. This image shows a person wearing the smartwatch while washing their hands under running water, illustrating the device's resistance to water splashes and brief immersion.

6.5 Long-Lasting Battery

The Smartwatch features a long-lasting battery, providing up to 5 days of typical use on a single charge, ensuring uninterrupted performance for your daily activities.

7. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Smartwatch.

- **Cleaning:** Regularly wipe the watch screen and body with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.
- **Charging:** Always use the provided charging cable. Avoid exposing the charging contacts to moisture or corrosive substances.
- **Storage:** When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.

- **Water Exposure:** While IP67 rated, avoid prolonged immersion or exposure to high-pressure water. Dry the watch thoroughly if it gets wet.

8. TROUBLESHOOTING

If you encounter issues with your Smartwatch, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Watch does not power on.	Low battery.	Charge the watch for at least 30 minutes.
Cannot pair with smartphone.	Bluetooth off on phone/watch; watch not in pairing mode; interference.	Ensure Bluetooth is on. Restart both devices. Try pairing again. Move away from other electronic devices.
Notifications not received.	App permissions not granted; app not running in background.	Check notification settings in phone and app. Ensure app is running.
Inaccurate fitness data.	Improper fit; sensor obstruction.	Ensure watch is snug on wrist. Clean sensors.
Screen unresponsive.	Software glitch.	Restart the watch by long-pressing the crown button.

8.1 Factory Reset

If problems persist, a factory reset may resolve the issue. This will erase all data on the watch and restore it to its original settings. Consult the companion app or watch settings for the factory reset option.

9. SPECIFICATIONS

Feature	Detail
Model Number	G40pro
Display Size	1.39 Inches
Display Type	AMOLED Full Touch Screen
Battery Capacity	220 Milliamp Hours (Lithium Ion)
Connectivity	Bluetooth
Operating System	JL7012F6
Water Resistance	IP67
Item Weight	2.89 ounces
Package Dimensions	6.42 x 2.95 x 1.26 inches

Feature	Detail
Manufacturer	Be Simple LLC

10. WARRANTY AND SUPPORT

This Smartwatch is manufactured by Be Simple LLC. For any product-related inquiries, technical support, or warranty claims, please refer to the contact information provided with your purchase documentation or visit the manufacturer's official website. Please retain your proof of purchase for warranty purposes.